



Nissan Murano (2003-2007)

PART NUMBER: NS-75-03-L



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.


All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

TOOLS REQUIRED: Dash Trim Removal Tool, 5/64" drill bit and drill, # 2 Phillips screwdriver


PARTS INCLUDED: Pro.Fit Legend, instructions, two (2) #8x1/2" screws.

LOCATION: Right of radio

STEP 1. Set parking brake and place gear shift into low. Insert dash trim removal tool behind upper-right corner of the vent bezel that surrounds the GPS. Pry outward to release a retainer clip. Work the tool around the bezel to release a total of five (5) clips. **(Photo 1)** Pull vent out and set aside. Remove two (2) screws at the top of the radio.

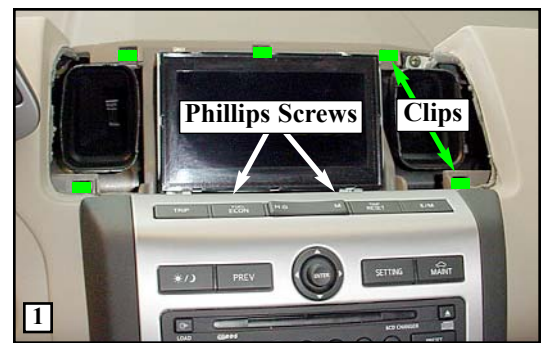


STEP 2. Insert the trim tool behind the upper-point of the triangle shape panel on the right side of the radio module. **(Photos 2 & 4)** Pry outward to release top of panel. Pull downward to remove panel. Do the same to the left side panel. Disconnect wire from left panel and set aside.

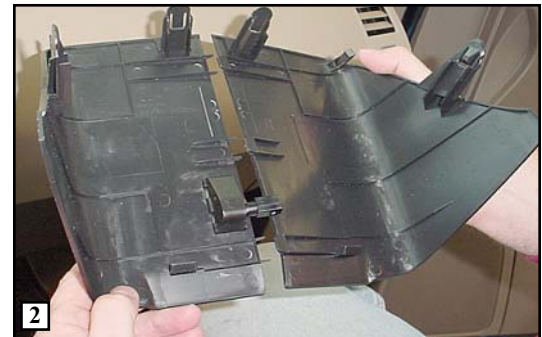

STEP 3. Tilt the top of the radio console forward enough to insert and align the Pro.Fit Legend. **(Photo 3)** Using the Legend as a guide, mark the location of two (2) screw holes. Set Legend aside. Drill two (2) pilot holes at the marked location using a 5/64" drill bit and drill. Align the Legend over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten.

STEP 4. Re-assemble the dash in reverse order. Put the side panels together **(Photo 2)** and connect the wire. Slide the panels below the radio module and push upward. This completes the installation of your Legend.

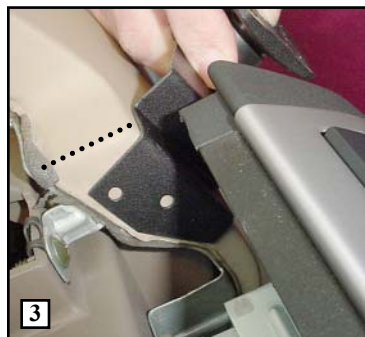

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

Installation Difficulty



Simple Advanced

© Pro.Fit International, Eagan, MN 2006

**VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM**