



Nissan Pathfinder 2008
 Nissan Frontier 2008
 Nissan Xterra 2008
 NS-77-08-G3



(Non-GPS, Standard Stock Radio Only)

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**When properly installed, the metal between the ball and 2 small holes is all that is exposed.
 (Some exceptions apply).**

TOOLS REQUIRED: Dash Trim Removal Tool (DTRT), T15 Torque drive, Phillips screw driver, Skewdriver (# DM-60-22)


PARTS INCLUDED: VSM G3, A Plate, J Stem

LOCATION: Right of radio

STEP 1. Place the DTRT in the space between the upper tray and the radio bezel. See Photo #1. Use a gentle twisting motion to release a series of four (4) retainer clips. Once the tray has been removed, a Phillips screw located directly beneath the tray will be revealed; remove this screw.



STEP 2. Open the glove box and place the DTRT in the space between the dash molding and the radio/climate control bezel in the lower right hand corner of the radio bezel. Use the DTRT in a gentle twisting motion around the radio bezel in order to release a series of seven (7) retainer clips (bezel includes air vents). Once the radio bezel has been freed, carefully place it off to the side.

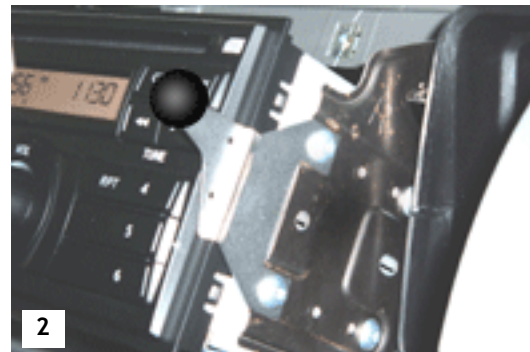

STEP 3. Identify the two T15 torque screws securing the right side of the radio to the internal dash structure (Photo #2). With a skewdriver (DM6022) and a T15 torque driver remove the two torque screws. Place the VSM G3 over the screw holes, replace the screws and tighten the VSM G3 flush to the dash and radio just as pictured in Photo #2.



STEP 4. Once the VSM G3 is flush and in position, place the dash back together in the reverse order in which it was dismantled. You have successfully installed your VSM G3!

Note: See the Assembly Instructions for G3 Components for additional information.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty
 ● ● ○ ○ ○
 Simple Advanced

View Instruction & Updates
 Online at
www.pro-fit-intl.com