

## Scion TC (2005)

PART NUMBER: SC-51-05-L



## PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

TOOLS REQUIRED: Dash Trim Removal Tool, 5/64" drill bit and drill, # 2 Phillips screwdriver,


10 mm nut driver, protective cloth

PARTS INCLUDED: Pro.Fit Legend, instructions, one (1) # 10 x 5/8" screw, one (1) # 8 x 1/2"

screw

**LOCATION:** Right of climate control


**STEP 1.** Set parking brake and place gear shift into low. Insert dash trim tool behind lower-left corner of gear shift bezel. Pry downward to release retainer clip. Work the tool clockwise around the bezel until all clips are released and bezel is completely loose. Lift bezel off gear shift and set aside.

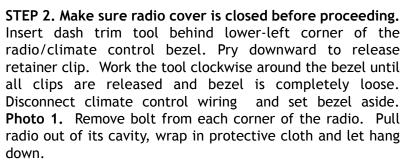

STEP 3. Align Legend on small ledge. Photo 2. Using the Legend's screw holes as guide, mark the position and set aside. Using a 5/64" drill bit and drill, CAREFULLY drill two (2) pilot holes no more than 1/2" deep. Place Legend over holes and insert the larger screw in the top hole, smaller screw in the bottom and tighten. Reversing the order may cause the screw to go through the dash surface.


**STEP 4.** Re-assemble the dash in reverse order, remembering to put gear shift into park and reconnect the climate control. This completes the installation of your Legend.



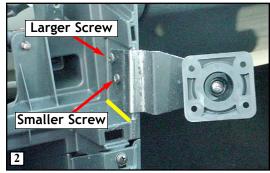



**Pro.Fit** International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit** Legend. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation. **Pro.Fit** International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM