



Toyota 4-Runner 2008

TY-72-08-G3



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


**When properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).**

TOOLS REQUIRED: Dash Trim Removal Tool (DTRT), 5/64" bit and drill, marking pen, Phillips screw driver, 10mm socket/driver


PARTS INCLUDED: VSM G3, A Plate, J Stem, one (1) #8 x 1/2" screw

LOCATION: Right of Radio

STEP 1. Completely open the glove box by pushing in the inside of the box sides to release the tabs, and pushing the hydraulic support to the side. Allow the glove box to hang completely down, Photo #1. Next, remove the cubby hole by releasing two (2) Phillips screws in both the upper right and left hand side of the cubby hole as well as two (2) more Phillips screws underneath and below, securing the bottom of the cubby hole to the dash molding. (These two screws are somewhat hidden.) Pull the cubby hole molding straight out and simply allow it to hang down out of the way.

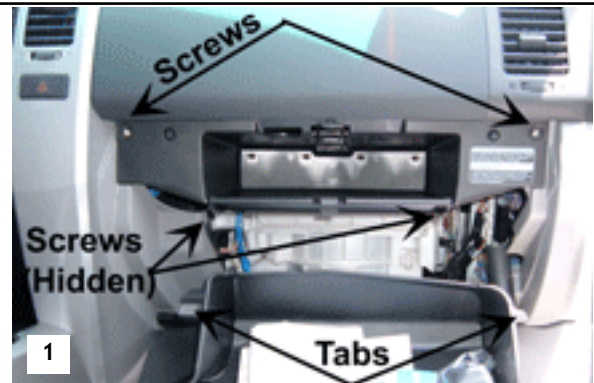

STEP 2. Locate and remove the 10mm bolt, Photo #2. Place the VSM G3 over the 10mm bolt hole and replace the bolt securing the VSM G3 to the dash. For additional extra rigidity, use the VSM G3 as a guide and drill out a pilot hole with a 5/64" bit and drill. Photo #2. Place the supplied #8 x 1/2" screw in the hole and tighten the side of the VSM G3 to the dash molding with a Phillips screw driver.

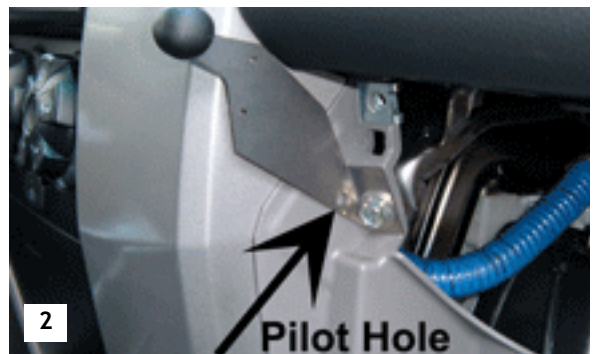

STEP 3. Once the VSM G3 is secure and in place, put the dash back together in the reverse order in which it was dismantled. You have successfully installed your VSM G3.



Note: See the Assembly Instructions for G3 Components for additional information.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty

● ● ● ○ ○

Simple Advanced

View Instruction & Updates
Online at
www.pro-fit-intl.com