



TOYOTA HIGHLANDER (2001-2006)

PART NUMBER: **TY-75-01**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: Hook tools, #2 Phillips screwdriver, 10mm nut driver, 5/64" drill bit and drill, marking pen.

PARTS INCLUDED: **Pro.Fit VSM®**, three (3) #8 x 1/2" screws, instructions.



LOCATION: Right of radio.

STEP 1. Begin by removing the trim bezel that surrounds the radio and climate control module. Insert a hook tool behind the lower left corner of the bezel and pull out gently, releasing a retainer clip. (See photo # 1). Work the hook tool around the bezel, continuing to pull outward until all eight (8) clips are released. Set bezel aside.


STEP 2. Remove the six (6) 10mm bolts that hold the radio and climate control module in place. There are three (3) bolts located on each side of the module. (See photo # 2). Slide the radio out of its cavity and let it hang downward. It is not necessary to disconnect any wires from the radio or climate control.

STEP 3. Align the notched area of the **Pro.Fit VSM®** over the clip hole to the right of the radio. (See photo # 2). Using the **VSM®** as a guide, mark the location of the three (3) screw holes. Drill three (3) pilot holes at the marked location using a 5/64" drill bit and drill. Align the **VSM®** over the pilot holes, insert three (3) # 8 x 1/2" screws and tighten. Reassemble the dash in reverse order.

This completes the installation of your **Pro.Fit VSM®**.

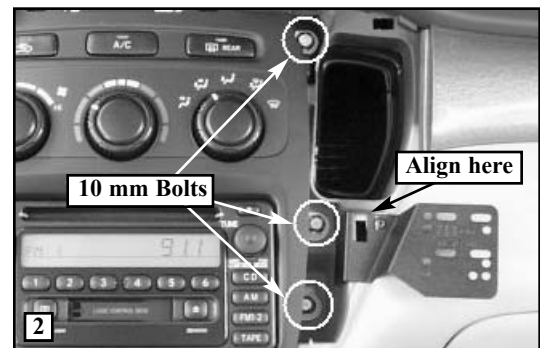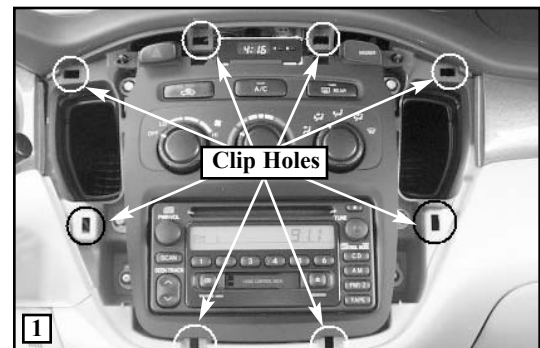

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM®**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation. **Pro.Fit International, Inc.®** 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

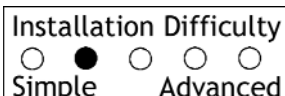

© **Pro.Fit International**, Eagan, MN 2005

