



INSTALLATION INSTRUCTIONS

**VOLVO 610, 660, 770 TRUCKS
(1998-2000)**

PART NUMBER: VO-30-98

**VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: #2 Phillips screwdriver, flat screwdriver, marking pen, 5/64" drill bit and drill.

PARTS INCLUDED: Pro.Fit VSM™, two (2) #10-3/4" screws, instructions.

LOCATION: To the right of the climate control.

STEP 1.

Begin by removing two (2) screws on top of the cup holder assembly. Slide the unit out and set to the side.


STEP 2.

Place the **Pro.Fit VSM™** to the right of the climate control. The bottom of the mount will rest into a small groove in the dash pad. (See 2nd picture.) While holding the mount in place, mark two (2) pilot holes, using the the **Pro.Fit VSM™** as a guide. Set the custom mount aside and carefully drill two (2) 5/64" pilot holes.

STEP 3.

To simplify installation of your custom mount, start both #10-3/4" screws before setting the custom mount in place. Tighten the screws halfway and then slide the custom mount into place. Finish tightening the screws. Reassemble the dash in reverse order.

This completes the installation of your **Pro.Fit VSM™**.

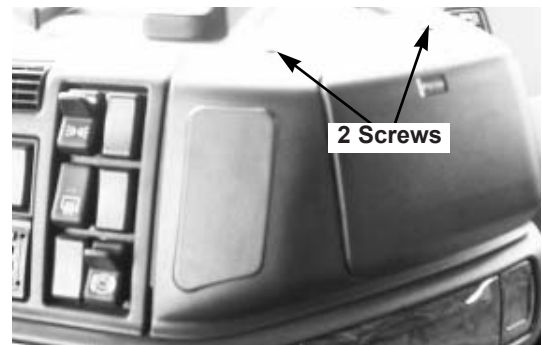

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM™**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fax: 651-688-9876

Web Address: www.pro-fit-intl.com