



VOLKSWAGEN GOLF & GTI (1999.5-2006)
VOLKSWAGEN JETTA (1999.5-2005)

PART NUMBER: VW-50-00

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: T-20 Torx driver, 5/64" drill bit and drill, marking pen, small flat file.

PARTS INCLUDED: Pro.Fit VSM®, one (1) #8 x 1/2" screw, instructions.

LOCATION: To the right of the radio.

STEP 1. Begin by removing the three (3) #20 Torx screws at the bottom of the glove compartment. Open the glove compartment and remove the three (3) #20 Torx screws at the top of it. Insert a thin, flat screwdriver in the middle of the seam where the climate control unit meets the glove compartment molding. Slide the screwdriver up to the top of the seam and gently pry to release the clip opposite the cubby hole. Slide the screwdriver to the bottom of the seam and gently pry to release the clip opposite the climate control.



STEP 2. The following step is for the 2001 model only.

Using a small file, carefully remove the tab shown in photo #2 inset. The tab needs to be filed flush with the panel. Proceed with step 3.




STEP 3. Remove the #20 Torx screw next to the cubby hole (see photo #2 and inset). Align the bottom mounting hole of the Pro.Fit VSM® over the #20 screw hole. Using the Pro.Fit VSM® as a guide, mark the location of the top hole with a marking pen. Set the mount aside. Carefully drill one (1) 5/64" pilot hole at the spot marked. Insert the #20 screw through the bottom mounting hole and tighten. Insert the # 8 x 1/2" screw through the top mounting hole and tighten.



STEP 4. Assemble the dash in reverse order, securing all clips and screws. This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagan Court, Eagan, MN 55121, Ph: 651-688-3588 or 808-388-0073 Fx: 651-688-9876

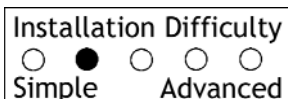

© Pro.Fit International, Eagan, MN 2005

