

HONDA CRV (2007-2009)

PART NUMBER: MV-50-03-G3

Page 26



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM-G3.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

TOOLS REQUIRED: 5/64" drill bit & drill, duct tape, phillips screw driver.

PARTS INCLUDED: VSM-G3, two (2) #8 x 5/8" screws, instructions.


LOCATION: Left end of the upper glove box compartment, under door latch.

STEP 1.

Begin by opening the upper glove compartment door.

STEP 2.

Position the VSM-G3 flat against the right edge of latch area. The ball should be positioned toward the right side. Tape bracket into position and drill starter holes using bracket holes as the guide. Drill just deep enough to get through the plastic molding.

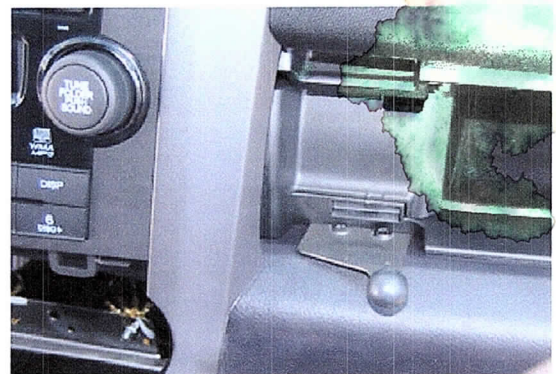

STEP 3.

Carefully mount the bracket using the 2 screws provided. Snug down firmly. Use caution to not over tighten and strip out the screw holes.



STEP 4.

Attach your phone holder or electronics to the A Plate and attach to the VSM-G3 ball. The J Stem is optional for repositioning to your liking. When applying the A Plate or J Stem be sure to push straight onto the bracket. Forcing the bracket up or down may tend to stress the plastic where it is mounted.

This completes the installation of your Pro.Fit VSM-G3.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty

● ○ ○ ○ ○
Simple Advanced

© Pro.Fit International, Eagan, MN 2009

VIEW INSTRUCTIONS & UPDATES

ONLINE @

WWW.PRO-FIT-INTL.COM