



UltiMount V2

PART NUMBER: UL-242BG

Step Two:

Prepare the mounting surface by cleaning the mounting location with the Surface Preparation Packet provided. Wipe an area slightly larger than the flex pad in only one direction and do not use a circular motion. Dry the area with a clean, dry cloth. Wipe dry in the same direction as above.

Clean the same area with the Alcohol Prep Pad provided. Wipe in the same direction as above, dry with a clean cloth and allow to air dry completely. *Note:* The alcohol may leave a film on the surface. Wipe clean with a dry cloth.

Step Three:

It is best to remove the flex pad from the UltiMount V2 before adhering. Remove the decorative cap and phillips screw, then remove flex pad from the extension arm. Remove the liner from adhesive pad and adhere it to the mounting position. Apply firm pressure to the center and edges of the flex pad for a minimum of 1 minute. Let adhesive cure for 72 hours before reattaching the UltiMount V2. Ideal installation temperature is between 60° and 80°F.

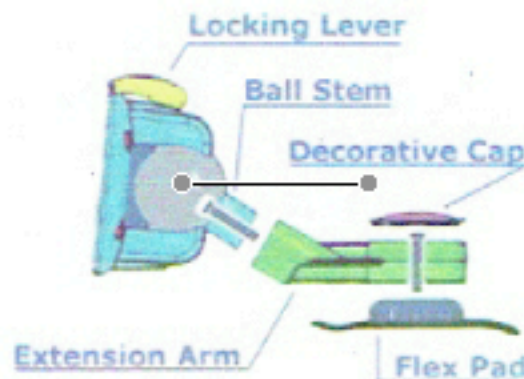


Diagram 4

ProFit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this ProFit Universal Mount ®. ProFit may not be held liable for any personal injury resulting from accident or improper installation. ProFit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

© ProFit International, Eagan, MN 2007

VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM