


A200-A210-A200B-A200BL


GIVI

PARABREZZA UNIVERSALE
UNIVERSAL WINDSCREEN
PARE-BRISE UNIVERSEL
UNIVERSEL WINDSHILDE
PARABRISAS UNIVERSAL

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE
BAUENLEITUNG - ISTRUCCIONES DE MONTAJE

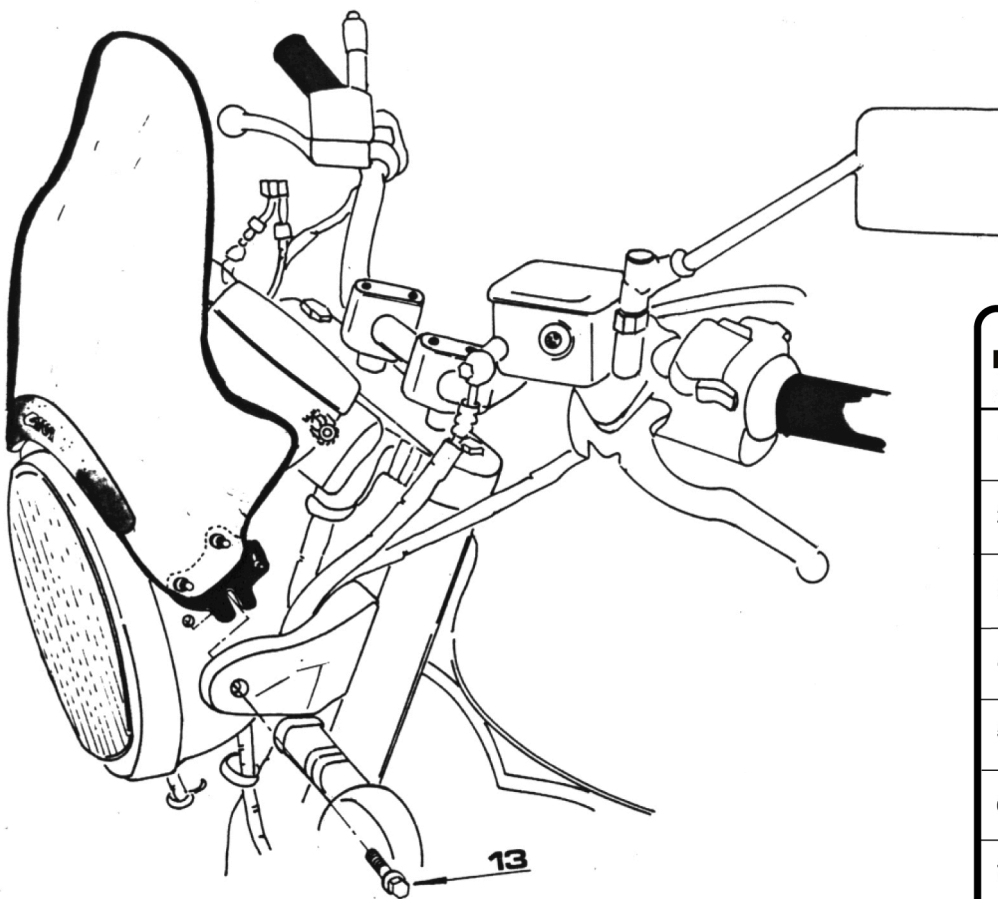

N°	DESCRIZIONE DEL KIT (KIT DESCRIPTION) (DESCRIPTION DU KIT) (BESCHREIBUNG DES BEFESTIGUNGSKITS)	QUANTITA' (QUANTITY) (QUANTITE)
1	AIRSTARS AIRSTAR PARE-BRISE	1
2	PIASTRINA INOX (1dx 1 sx) INOX PLATE PLATINE EN INOX EDELSTAHLPLATTE	2
3	GOMMA RUBBER CAOUTCHOUC GUMMI	2
4	RONDELLA Ø 6 IN INOX WASHER Ø 6 RONDELLE Ø 6 UNTERLEGSCHIBE	2
5	RONDELLA SPECIALE SPECIAL WASHER RONDELLE SPECIALE SPEZIAL-UNTERLEGSCHIBE	4
6	VITE TPSCFI M 6 X 18 INOX SCREW M 6 X 18 VIS M 6 X 18	4
7	DADO M 6 AUTOBLOC. RIBAS. inox NUT M 6 ECROU M 6 SCHRAUBENMUTTER	2
8	BUSSOLA INOX Ø 13 X 8 AXLE BOX Ø 13 X 8 RONDELLE SPECIALE DE SEPARATION Ø 13 X 8 EDELSTAHLBUCHSE Ø 13 X 8	2
9	VITE TCEI M 6 X 10 INOX SCREW M 6 X 10 VIS M 6 X 10 SCHRAUBE M 6 X 10	2
10	TAPPO COPRIVITE NERO COVER SCREW CAP BOUCHON COUVRE VIS SCHRAUBENSTOPSEL	2
11	RONDELLA IN GOMMA Ø16 FORO 6 RUBBER WASHER Ø 16 RONDELLE EN CAOUTCHOUC	4
12	DADO M6 CIECO INOX BLIND NUT M 6 NUT AVEUGLE M 6 BLINDMUTTER	4
13	VITE ORIGINALE ORIGINAL SCREW VIS ORIGINAL ORIGINALE SCHRAUBE	-
14	RONDELLA Ø6x16 IN INOX WASHER RONDELLE UNTERLEGSCHIBE	4

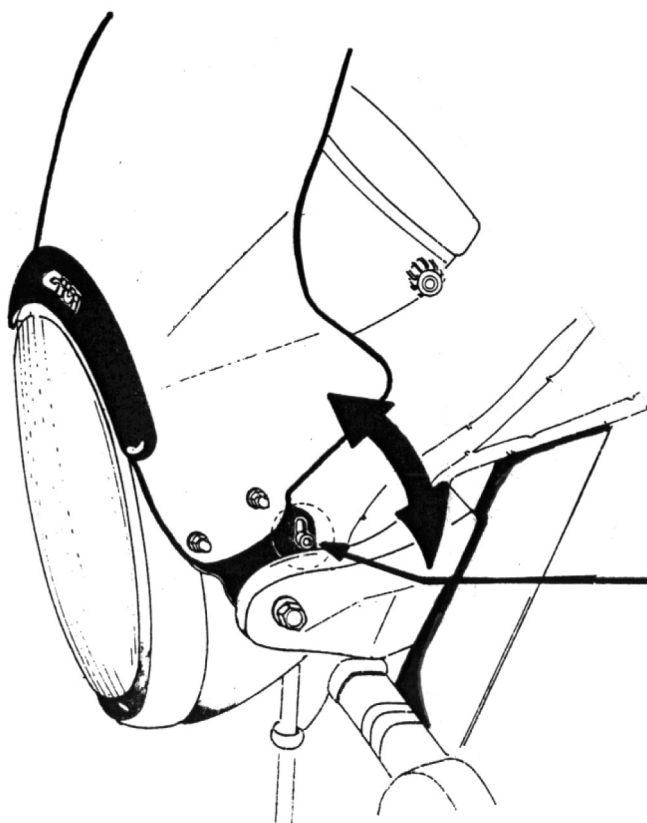

- VITE BLOCCAGGIO
INCLINAZIONE
- INCLINATION
BLOCKING SCREW
- VIS POUR LE BLOCAGE
DE L'INCLINAISON
- SCHRAUBE ZUR EINSTELLUNG
DES NEIGUNGSWINKELS



A200-A210-A200B-A200BL

PARABREZZA UNIVERSALE
UNIVERSAL WINDSCREEN
PARE-BRISE UNIVERSEL
UNIVERSEL WINDSHILDE
PARABRISAS UNIVERSAL

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE
BAUENLEITUNG - ISTRUCCIONES DE MONTAJE

