


# Andover Mailbox Installation

HAND MADE  
BY TRUE  
CRAFTSMEN



## Tools & Supplies:


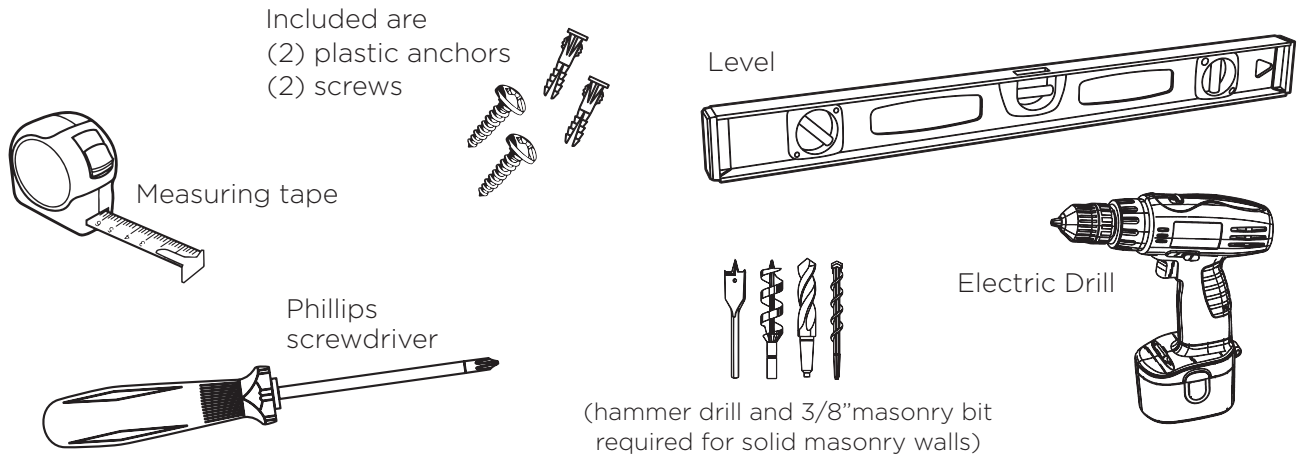


## Instructions:


- 1** Measure the distance between the hardware holes located at the back of your mailbox. From the the center of each hardware hole should be 8" inches apart.
- 2** Measure and mark the same distance on your wall. Ensure that the markings are level, so that your mailbox will hang accordingly.
- 3** With the appropriate tool for your exterior covering, drill through your two marked holes.
- 4** If needed, install the plastic anchors  
(for composite siding, drywall, and masonry walls. Not necessary on wood)
- 5** Install screws. Be sure to leave a  $\frac{3}{4}$ " gap from the wall.
- 6** Hang your mailbox and tighten the screws to secure it.

Continued →


1

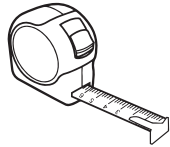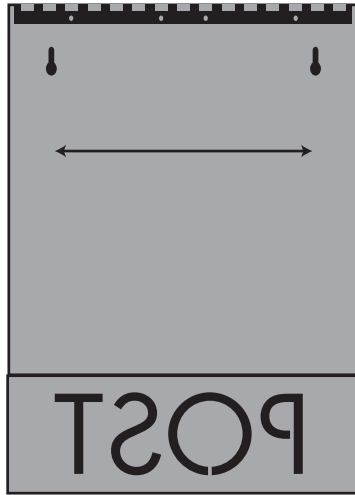

2

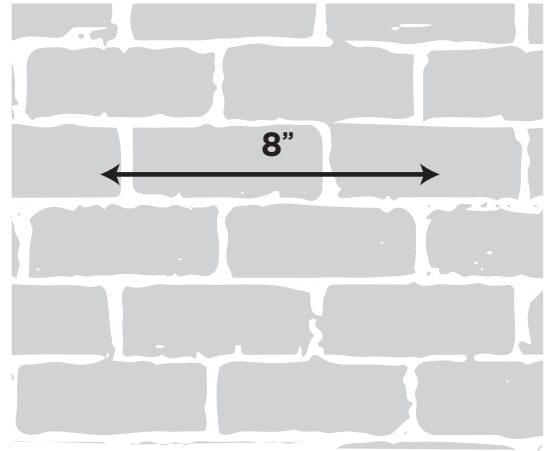


3

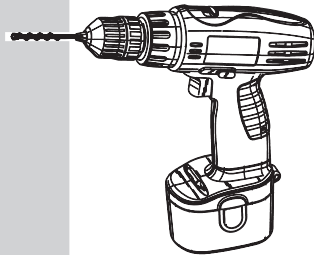


4



5

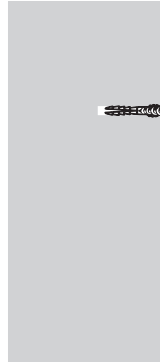

6

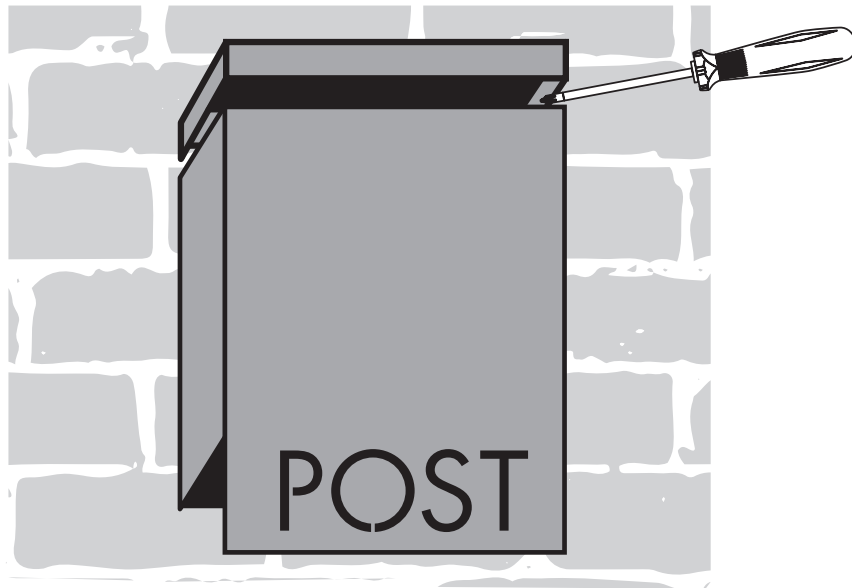

Have questions? Please contact us at [sales@boldmfg.com](mailto:sales@boldmfg.com)