


Hyde Park Mailbox Installation

HAND MADE
BY TRUE
CRAFTSMEN



Tools & Supplies:

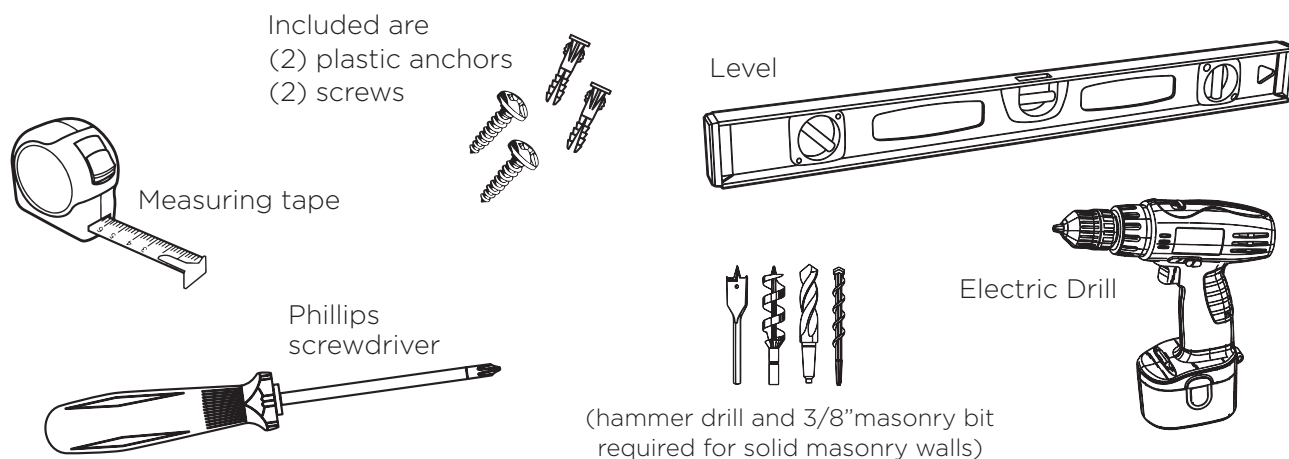

Instructions:

- 1** Measure the distance between the hardware holes located at the back of your mailbox. From the center of each hardware hole should be 12" inches apart.
- 2** Measure and mark the same distance on your wall. Ensure that the markings are level, so that your mailbox will hang accordingly.
- 3** With the appropriate tool for your exterior covering, drill through your two marked holes.
- 4** If needed, install the plastic anchors (for composite siding, drywall, and masonry walls. Not necessary on wood)
- 5** Install screws. Be sure to leave a $\frac{3}{4}$ " gap from the wall.
- 6** Hang your mailbox and tighten the screws to secure it.

Continued →

