

The **MTNTK** BlowHole

Polaris RZR XP 900
Installation Instructions



Disclaimer: Never attempt to adjust or run engine with fan on. Do not stick your fingers into the fan housing as it will cut or dismember. Mountain Tek Performance is not responsible for damages incurred by using this product or improper installation.

208.652.0122


MTNTKperformance.com



2. Loosen the clamp on the clutch exhaust hose. Separate the exhaust hose from the clutch housing.



4. Route wire behind the engine intake hose and up to bed support bracket as shown.

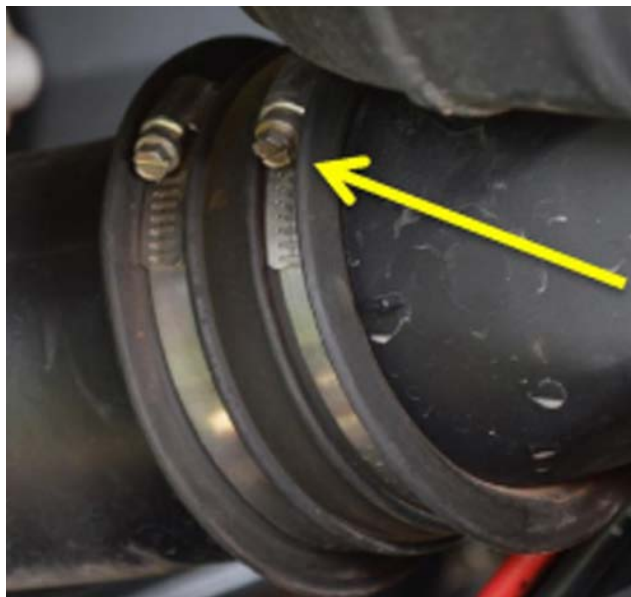

1. To begin, loosen the clamp on the clutch intake duct hose (the end closest to the clutch housing and nearest the front of the clutch housing) and remove from clutch housing.



3. Install the Blow Hole onto the clutch housing as shown then tighten clamp. Reinstall exhaust hose onto the blow hole assembly and tighten the clamp.



5. Route wiring harness along the bed so it is up and out of the way. Plug directly into the taillight as shown. Be sure the wires will not rub, chafe, or melt. Use zip ties to secure wiring harness.