




2. Install Blow Hole onto clutch housing as shown by sliding the silicone reducer over the clutch housing. The wire harness should be directed as shown. Tighten clamp.



4. Route the wire harness behind the engine intake hose and up to bed support bracket as shown. Use wire ties to secure harness.

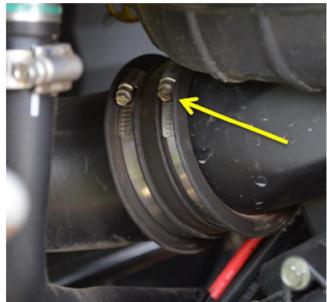

1. Loosen the clamp on the clutch intake duct hose (the end closest to the clutch housing and nearest the front of the clutch housing) and remove from clutch housing.



3. Install intake duct hose onto the Blow Hole assembly as shown. Tighten the stock clamp onto the Blow Hole.



5. Plug harness directly into the taillight as shown. Be sure the wires will not rub, chafe, or melt.