


Disclaimer: Never attempt to adjust or run engine with fan on. Do not stick your fingers into the fan housing as it will cut or dismember. Mountain Tek Performance is not responsible for damages incurred by using this product or improper installation.

208.652.0122

MTNTKperformance.com

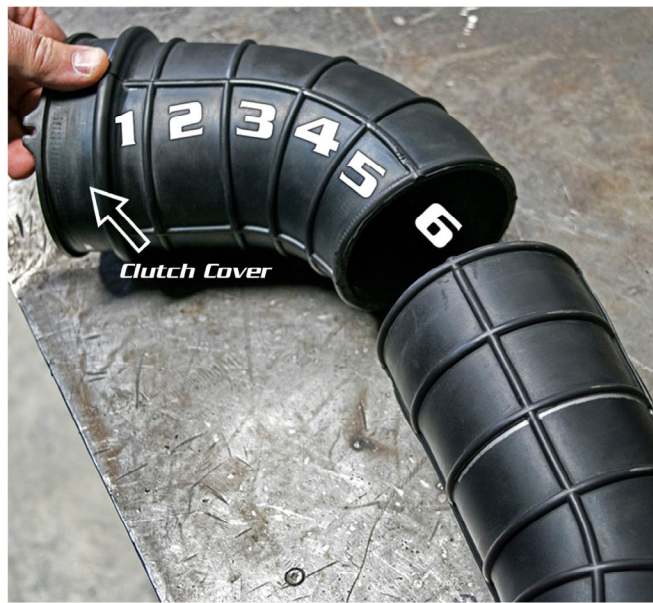

2. Using a silver or white marker, mark section six of the tube as shown in picture. Using a razor blade or knife, carefully cut the entire section (six) out of the intake tube as shown.



4. Install the intake tube back onto the machine and adjust tubes so wiring harness is towards the machine and logo is facing out. Tighten all clamps.



1. Locate the clutch housing intake tube and loosen clamp on clutch cover. Then remove intake tube from both intake and clutch cover.



3. Install the Blow Hole and clamps as shown. Slide intake tube onto the Blow Hole as shown. Leave clamps loose for adjustments. This is a tight fit. Use heat and lubrication to install.



5. Route wiring harness along the bed so it is up and out of the way. Plug directly into the taillight as shown. Be sure the wires will not rub, chafe, or melt. Use zip ties to secure wiring harness.