

The **MTNTK** Blow Hole


'17-'19 Can-Am Maverick X3 X-MR
Installation Instructions



Disclaimer: Never attempt to adjust or run engine with fan on. Do not stick your fingers into the fan housing as it will cut or dismember. Mountain Tek Performance is not responsible for damages incurred by using this product or improper installation.

208.652.0122

MTNTKperformance.com

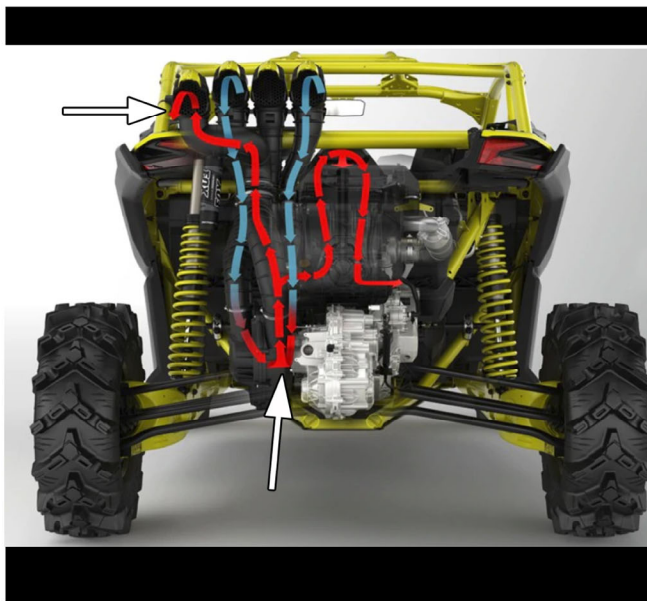

2. Install the Blow Hole by slipping the silicone over the clutch cover exhaust duct first and then slide the top silicone over the upper snorkel duct.



4. Locate the factory tail light connector and plug Blow Hole directly into the tail light as shown. This model of Blow Hole WILL BLOW HOT AIR OUT of the clutch cover.



1. Remove clutch exhaust duct tube between the clutch cover and snorkel by loosening the clamps on both ends of the duct hose. This clutch duct tube will not be used. Keep the stock hose clamps for later use.



3. Route the wiring harness over the cage as shown and proceed to route wire up towards the tail lights. Be sure to route wire so it does not rub or chafe. Use wire ties if needed.