




POLARIS MATRYX CHASSIS BLOWHOLE #10220

FITS ALL MAYTRIX CHASSIS MODELS


INSTALLATION INSTRUCTIONS

1. REMOVE LEFT HAND SIDE PANEL
2. REMOVE HOOD
3. REMOVE LEFT HAND CONSOLE FRONT PUSH DART

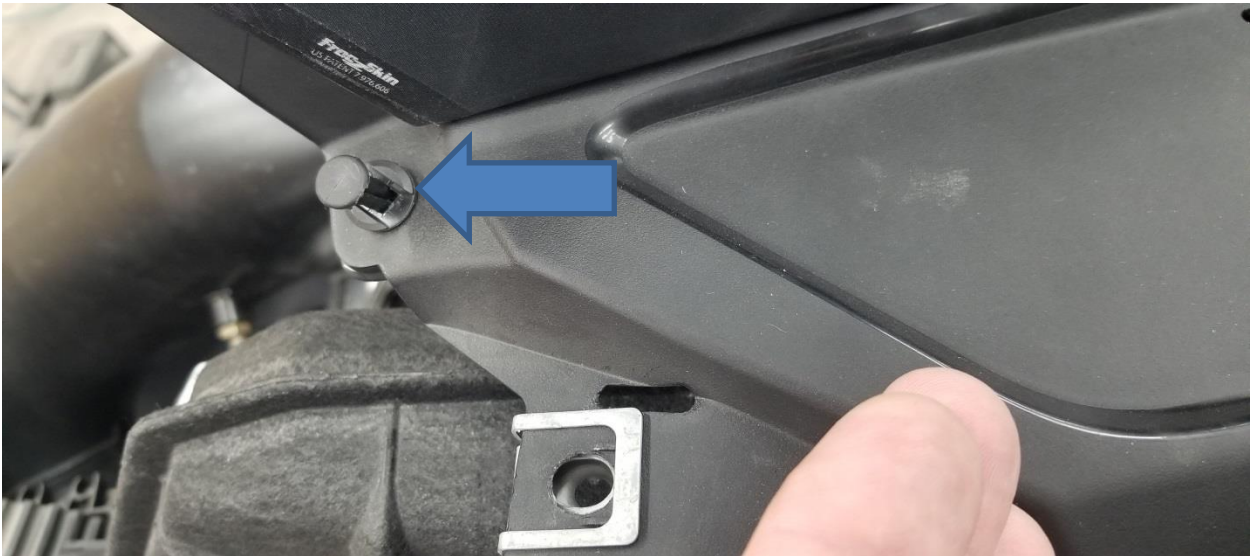

**950 W. 4TH N. ST ANTHONY, ID 83445 | P. 208-652-0122 |
EMAIL:ORDERS@MTNTKPERFORMANCE.COM**

4. TAPE PROVIDED TEMPLATE ONTO LEFT HAND CONSOLE. **THE TEMPLATE IS ON THE LAST PAGE OF INSTRUCTIONS.** BE SURE TO KEEP THE TEMPLATE OFF FROM THE CORNER RADIUS. THE TEMPLATE SHOULD LAY FLAT ON THE CONSOLE. FOLLOWING THE TEMPLATE MARK THE AREA TO BE CUT OUT OF THE CONSOLE AND THE 4 RIVET HOLES THAT NEED TO BE DRILLED.

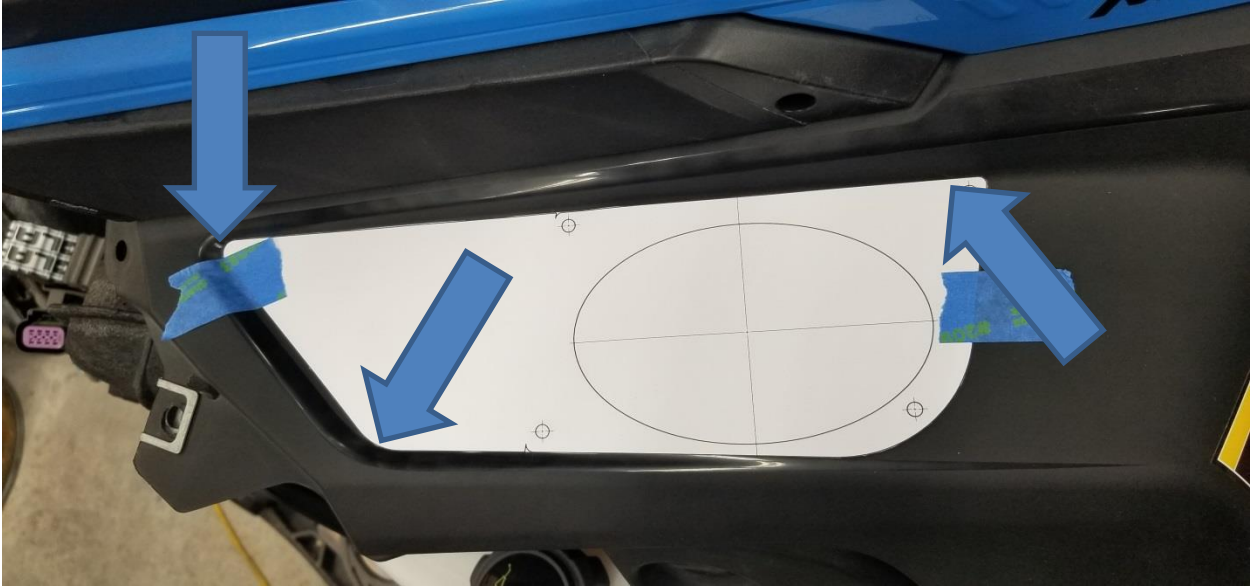

5. CUT OUT AREA TO BE REMOVED AND DRILL 4 RIVET HOLES WITH 3/16" OR #11 DRILL BIT.



950 W. 4TH N. ST ANTHONY, ID 83445 | P. 208-652-0122 |
EMAIL:ORDERS@MTNTKPERFORMANCE.COM

6. LOCATE ELECTRICAL CONNECTOR BAG BEHIND AIR BOX, AND THEN FIND THE RCA ACCY POWER CONNECTOR INSIDE THE BAG. SEE PICTURES BELOW.



950 W. 4TH N. ST ANTHONY, ID 83445 | P. 208-652-0122 |
EMAIL:ORDERS@MTNTKPERFORMANCE.COM

7. REMOVE RCA ACCY POWER CONNECTOR CAP AND CONNECT BLOWHOLE CONNECTOR INTO THE RCA ACCY POWER CONNECTOR. REASSEMBLE THE CONNECTOR BAG AND TUCK BACK IN BEHIND THE AIR BOX. THIS WILL PROVIDE A LITTLE EXTRA CLEARANCE FOR THE BLOWHOLE TUBE.



8. RIVET BLOWHOLE COVER PLATE THROUGH CONSOLE TO BLOWHOLE TUBE PLATE WITH THE 4 PROVIDED RIVETS.



9. REINSTALL ALL THE REMOVED PARTS.

**950 W. 4TH N. ST ANTHONY, ID 83445 | P. 208-652-0122 |
EMAIL:ORDERS@MTNTKPERFORMANCE.COM**

OVERALL LENGTH SHOULD BE 10.625"

REMOVE AREA INSIDE ELIPSE

