



Installation Instructions

JBLT™ Z-trak™ is designed to mount to the inside of the front bed box of a pick up truck just behind the cab. To install, find the right to left center of the front bed box top rail and mark the lower edge with a piece of tape. Then find the center of the top flange of the Z-trak™ and mark it with another piece of tape, **Fig 1**.

Place the top flange of the Z-trak™ towards the lower edge of the top rail and line up the two pieces of tape to ensure it is centered as shown in **Fig 2 & Fig 3**. Make sure the Z-trak™ is level from side to side by measuring from the top of the top rail down and marking both ends with tape. The bottom flange of the Z-trak™ attaches directly to the front bed box wall, **Fig 3**.

Items Included

- One 56" length of Z-trak™ in either the 1.25, 1.50, 1.75, or 2.00 size in galvanized or black powder coat
- 20 #12 x 1", self-drilling screws

Tools Required

- Impact Drill
- 5/16 socket bit
- Tape Measure
- Masking Tape
- Someone to hold Z-trak™ in position while another person places a screw in each end

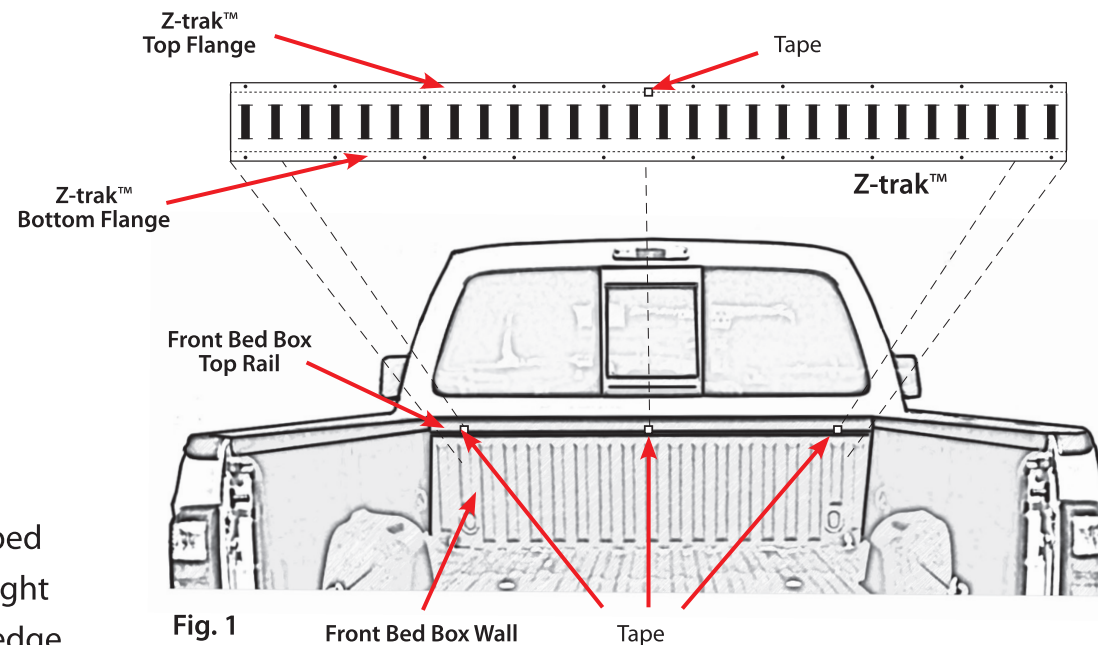


Fig. 1 Front Bed Box Wall Tape

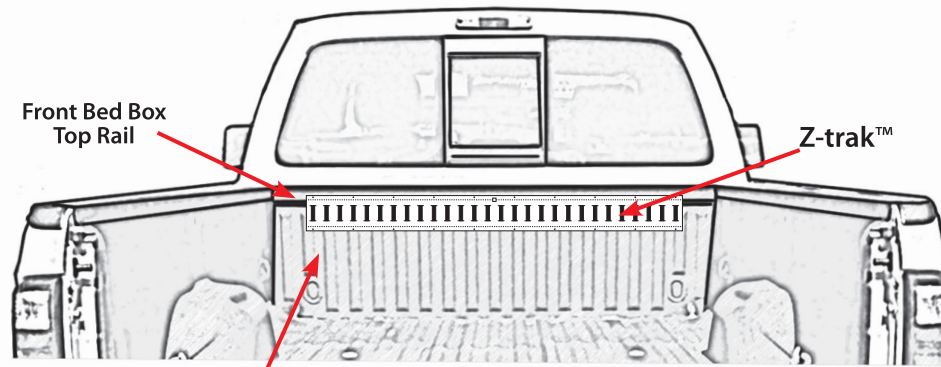


Fig. 2 Front Bed Box Wall

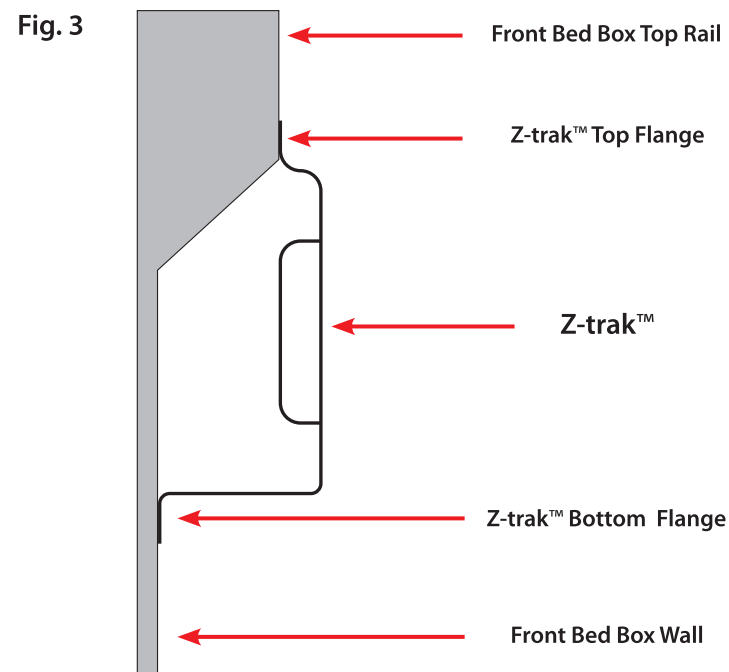


Fig. 3

CAUTION, DO NOT OVERTIGHTEN THE SCREWS.

The bed box wall is made of thin material and over-tightening of the screws will make them less—rather than more—secure. Also, once the screws are tight, do not remove them and replace them. This also makes them less secure. If you do have to remove the screws for any reason, we suggest you replace them with a larger size (#14). Start by placing a screw in the far right hole of the top flange. Insure the Z-trak™ is level, then install a screw in the far left hole of the top flange. Then install the rest of the screws.

Also, although the Z-trak™ itself is very strong, even when properly installed the load capacity is limited by the thin-walled structure to which it is attached. It will secure any reasonable load for hauling and transport purposes including those associated with the use of JBLT™ appliances—wheel chocks, bike racks, headache racks, etc. But we do not recommend applying a heavy load to the Z-trak™ such as using it as an anchor point for winching or using a come-along to pull a disabled snow machine or ATV, or a big game animal or other heavy items into the truck.

Wheel Z-choks™ are sold separately.

Z-clip™ rings and extended Z-clip™ rings also sold separately.

JBLT™

316 North 850 West
Logan, UT 84321

435.881.2267

©2020 JBLT • 2020.2075 • Rev 1