


## 1. Gather your tools

Find your own hammer and double check you have the right number of accessories in the plastic bag provided with your divan bed base:

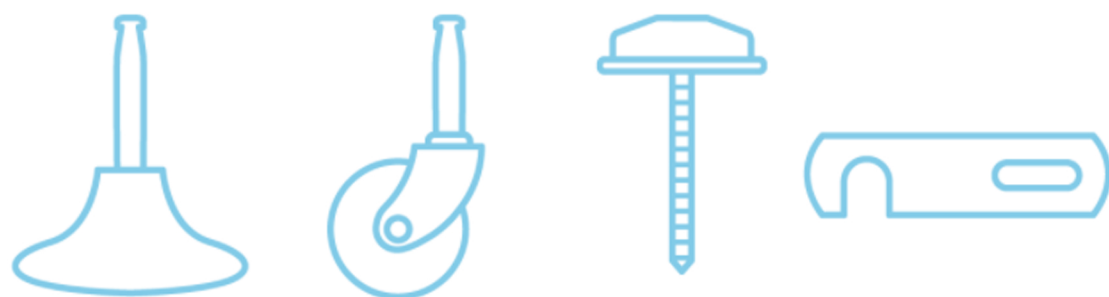


## 2. Remove all of the packaging carefully

This includes the staples keeping the drawers or sliding drawers shut and those securing the corner protectors to your divan bed.

## 3. Turn your Divan bed base upside-down

Insert a glider/castor into the socket on each corner and gently tap them into place with your hammer.

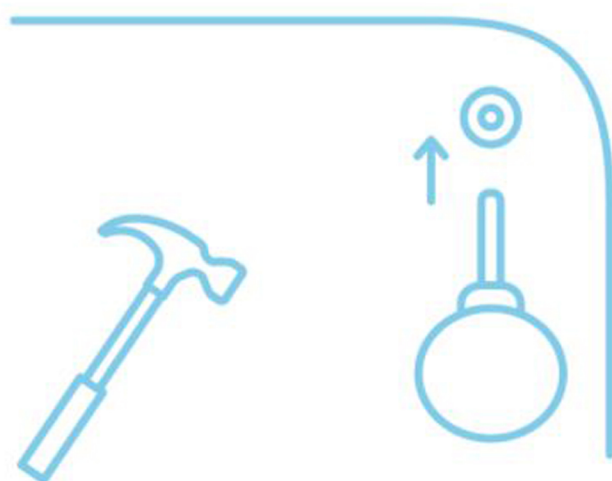

## 4. Push your bed bases together

If your divan bed is in two sections or more, push them together, flat end to flat end. Unscrew one bolt and slacken the second, on both sides of your bed base – connect the sections with a joining clip and tighten your bolts securely.



## 5. Attach your headboard to your divan bed base

Remove the spacers from your headboard bolts and any stickers covering the bolt holes on your headboard – these will be approximately 15cm from the edge of your bed. Insert your headboard through the bolt holes, check it's level and tighten the bolts securely.

