Before you start: The bases can be heavy, we recommend that you build the bed with at least one other person. Remove all the packaging and dispose of it carefully. Please keep out of reach of children.

Ensure you remove any loose staples carefully using pliers.

OTTOMAN BASE

Please read the instructions before removing the securing straps. The base lid is under pressure and can cause injury if not handled correctly.


To assemble your divan base, you will need:

A rubber mallet, large flat-ended screwdriver, scissors, pliers.

What's in the box:

Single base – 4 castors/glides, 4 headboard bolts, 4 spacer blocks, 4 plastic caps, 4 metal washers.

Double base – 8 castors/glides, 4 headboard bolts, 4 plastic caps, 4 spacer blocks, 4 metal washers, 2 metal connecting clips, 2 plastic headed bolts to connect base lid.

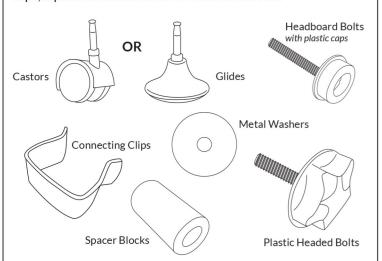

Got everything you need?


With one hand on the top of the lid of the first base half, remove the securing strap. This is attached to the underside with staples, we recommend using pliers.

Gently raise the lid keeping one hand on top. The gas struts are held under pressure and can open suddenly if not controlled. Repeat this procedure for the other half of the base.

Place the two halves together on their sides with the lids open and the square ends pushed together. You will see predrilled holes along the underside of the base.

Push each castor/glide into the hole and gently tap in with a rubber mallet. Do not use excessive force as this will damage both the castor/glide and the base.

Using the Connection clips join the two halves together, one on each side (If it's a single base you can skip to and attach your headboard).

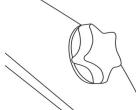

Still with the base on its side, use the plastic top bolts to join the two lids. On the underside of the lids the predrilled holes are marked with stickers. Pierce the cloth with the scissors and screw the bolt firmly through both halves.

Carefully lay the base back down onto its castors/glides, being careful to keep both parts together to avoid disconnecting the clips. (We suggest you have a person at each end). Don't drop or push the bed over as this may damage the castors/glides and the base.

As the gas struts are under pressure we suggest you leave the lids open until you are ready to put your mattress on top to avoid them springing open.

HEADBOARD

If your headboard came with the base use the instructions below to attach it. If you bought a different brand headboard you will need to work from the instructions that came with that headboard for best results as fixings may vary.


To attach your headboard, you will need:

A large cross-ended screwdriver, scissors.

STRUTTED HEADBOARDS

What's in the box:

Strutted Headboards: 2 long screws, 4 metal washers, 4 headboard bolts, 4 plastic caps, (4 plastic spacers on ottoman.)

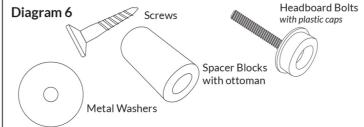


Got everything you need?

Decide which end of your base you require the headboard. If you have an ottoman base decide which side you want the ottoman to open. Both ends of the base have predrilled holes marked out with stickers.


Pierce the cloth with the scissors.

For Strutted headboards - standard base

Fold the struts down to position and secure with the screws.

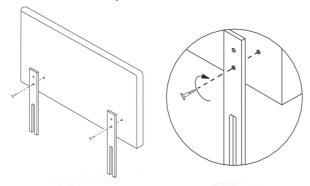

Assemble the screws and loosely screw into the divan base. Do not tighten fully. Once all the screws are in place gently slide the headboard over the screws to the desired height. Depending on the thickness of your mattress the struts may not reach the ground. Once you are happy with the height of your headboard, tighten all the screws. The headboard should sit on top of the mattress when on the base.

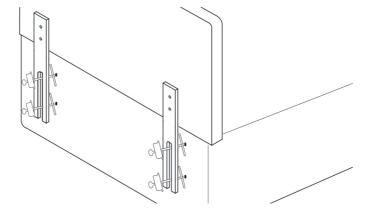


For Strutted headboards - ottoman base

Assemble the screws including the plastic space tubes. Do not fully tighten the screws. Adjust the height of the headboard, we suggest you also test the position with the ottoman lid open to make sure there is

enough space for the mattress and divan lid to raise.

Once you are happy with the position, tighten the screws. The headboard should sit on top of the mattress when on the base. Make sure the screws are not too tight to allow the ottoman to open without bending the headboard struts.

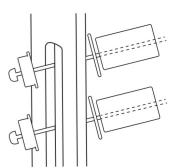

FLOORSTANDING HEADBOARDS

What's in the box:

Floorstanding Headboards: 4 long screws, 4 plastic washers, 4 metal washers, 4 plastic spacer tubes.

For Floorstanding headboards - all bases

Assemble the screws including the spacer tubes. Position your headboard against the bed and line up the cutouts on the headboard with the predrilled holes in the base.

The headboard should be sat squarely on the floor.

Place the spacers and metal washers between the headboard and the base. Loosely attach the screws and check the position. Once you are happy, fully tighten the screws. Do not drag the bed into position with the headboard to avoid damage to the headboard and base.

