


œuf[®]


MOSS NIGHTSTAND

ITEM # 1MSNS-x

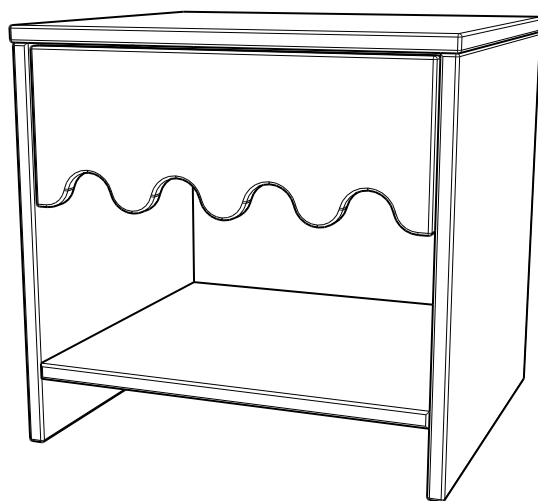




idp68236


Made in Latvia

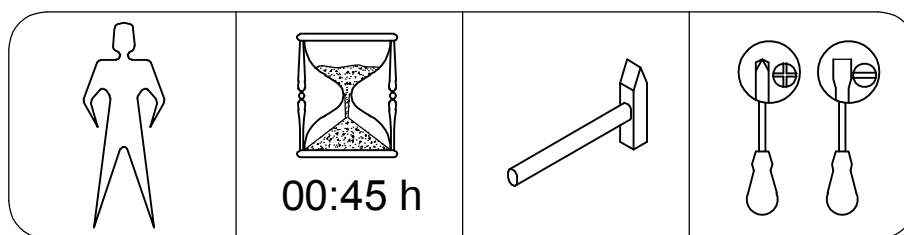

Fittings List


Liste des Pièces

A	 Ø8x30	8 pcs
B	 Ø6x30	4 pcs
C	 B34x5x11	12 pcs
D	 Ø15x13,8	12 pcs

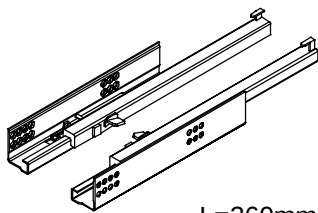
E	 Ø7,3x14	4 pcs
F	 Ø5x10,5	4 pcs
G	 L=360mm	1 pcs
H	 Ø3,5x15	4 pcs


Parts List


Liste des Pièces

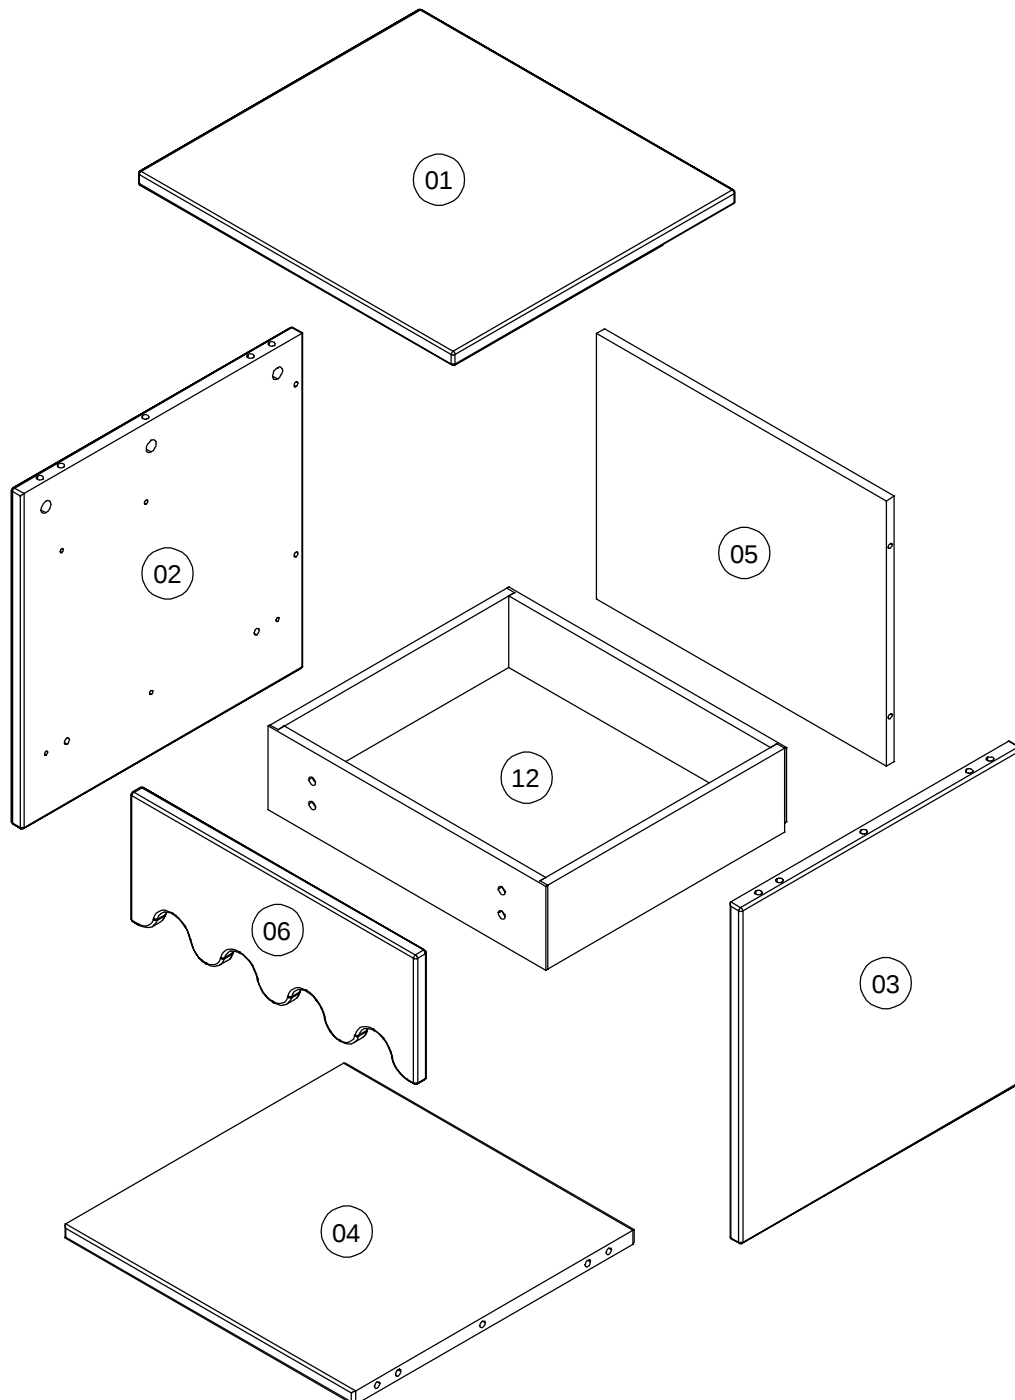


1

A		8 pcs
Ø8x30		

C		12 pcs
B34x5x11		

B		4 pcs
Ø6x30		


D		12 pcs
Ø15x13,8		

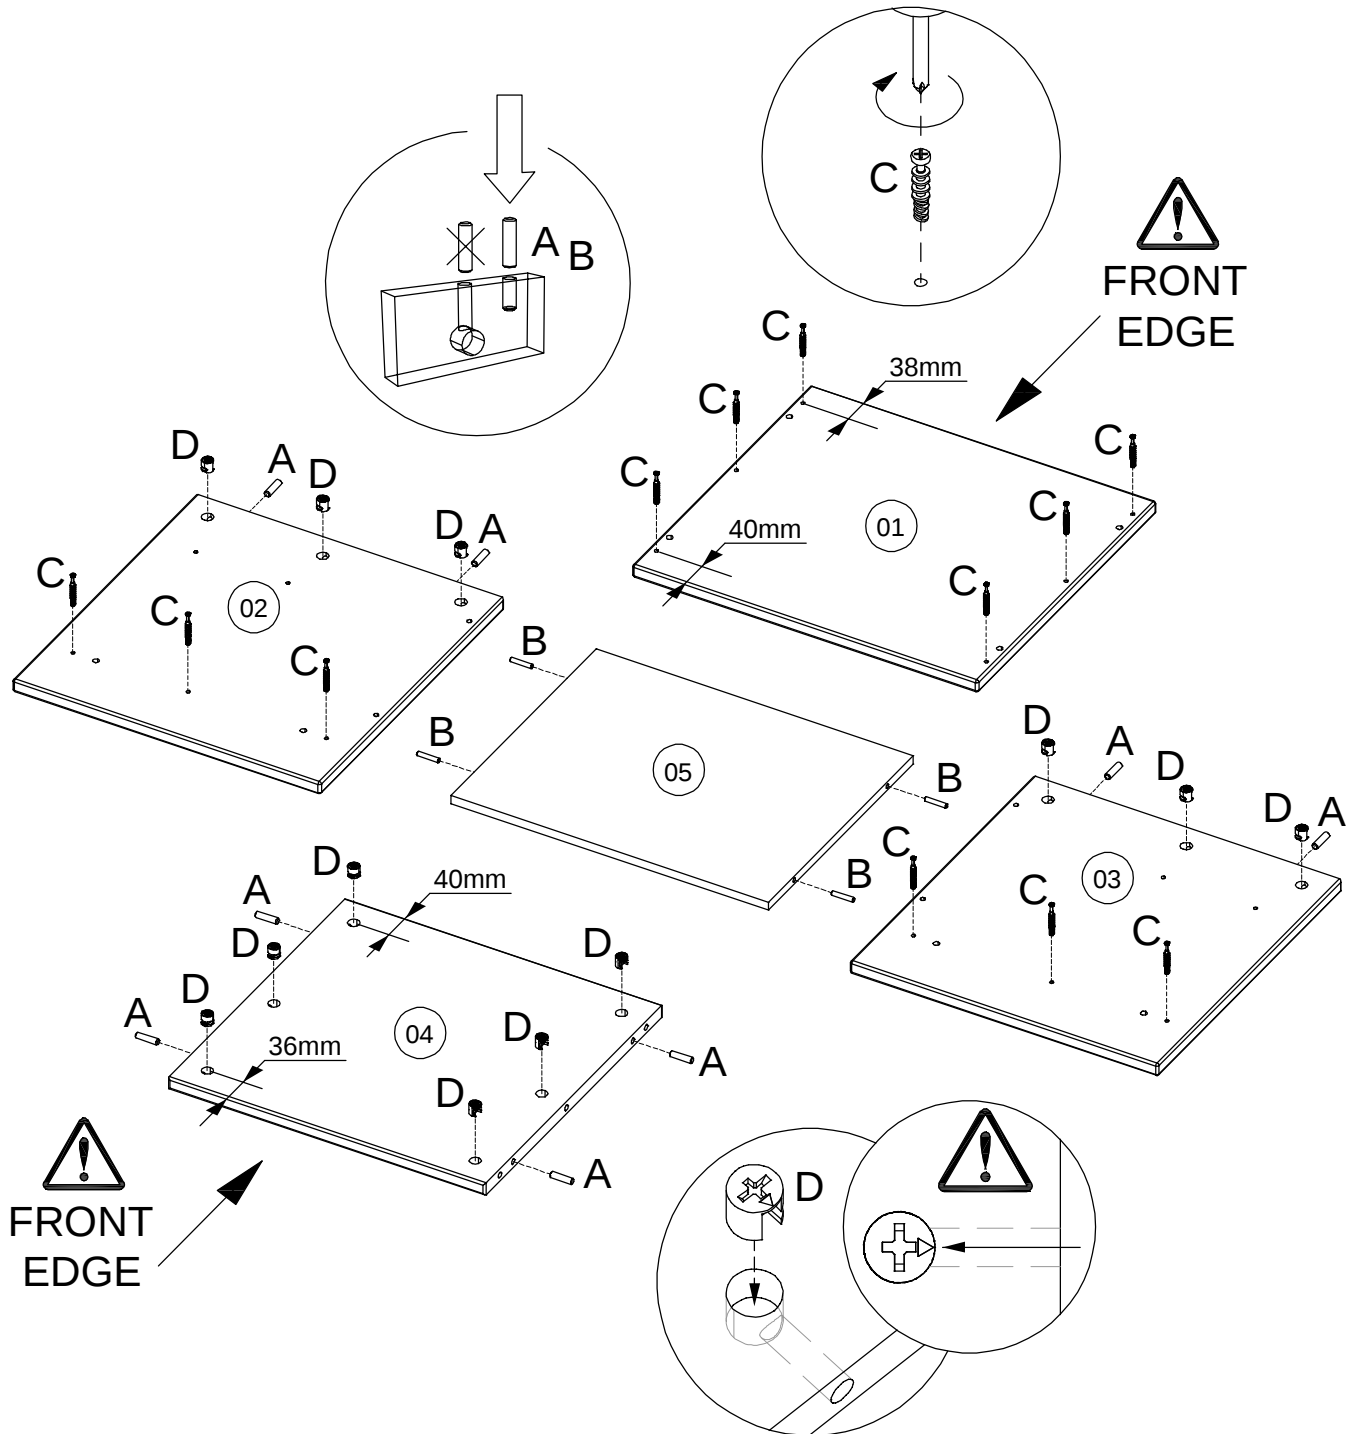



2

F		4 pcs
Ø5x10,5		

H		4 pcs
Ø3,5x15		

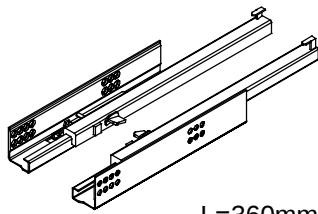G		1 pcs
L=360mm		




FRONT
EDGE

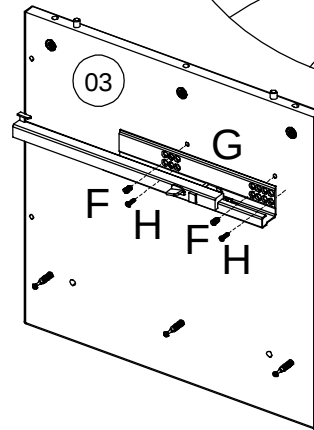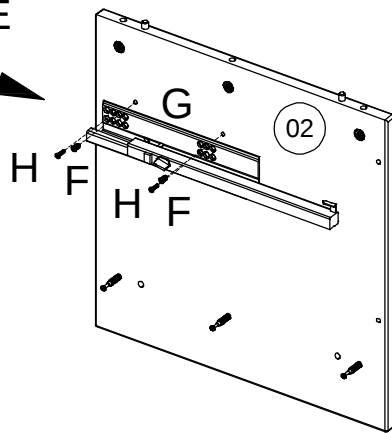


FRONT
EDGE




FRONT
EDGE

3

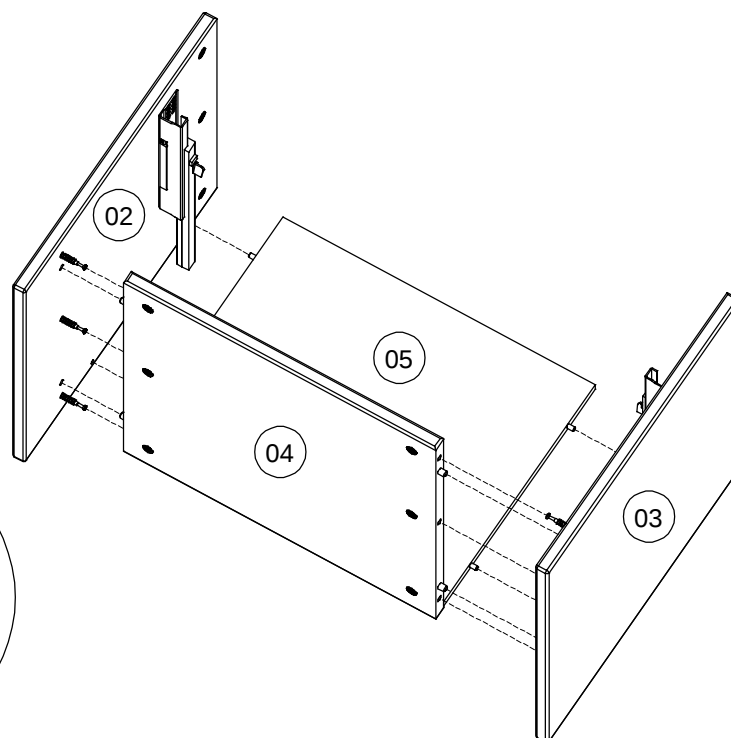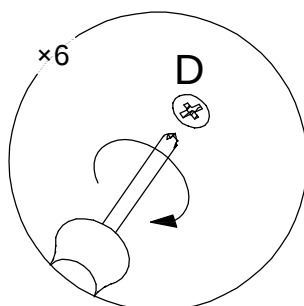
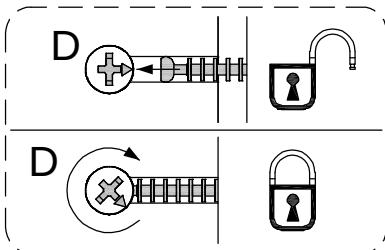


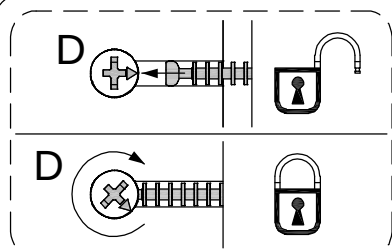

4

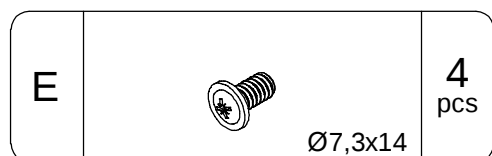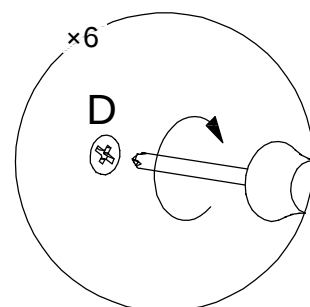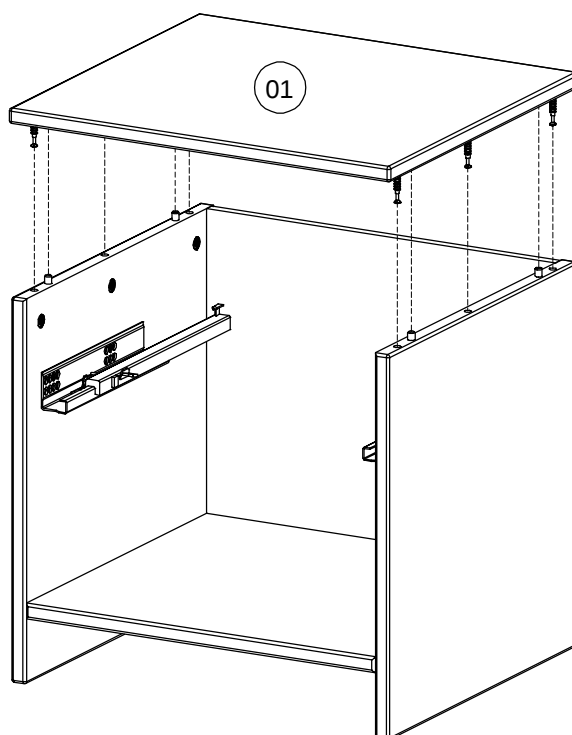

5



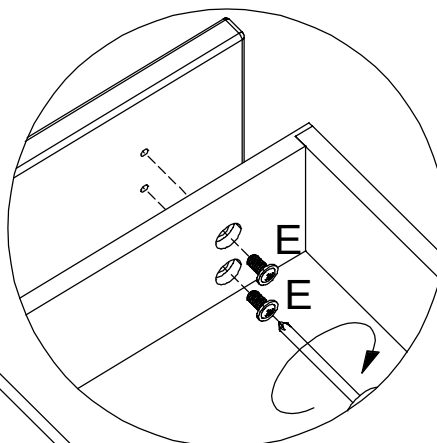
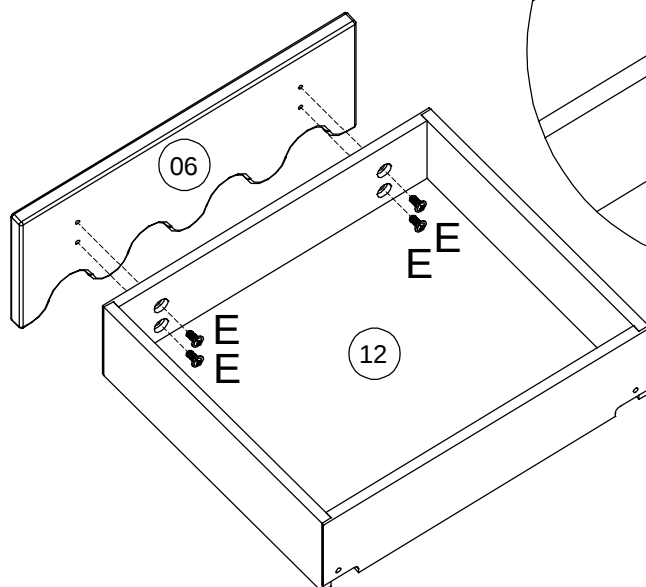


Installing the drawer
Einhängen der Schublade
Fixation du tiroir






Ensure the metal tab goes into the hole at the back of the drawer box!

6

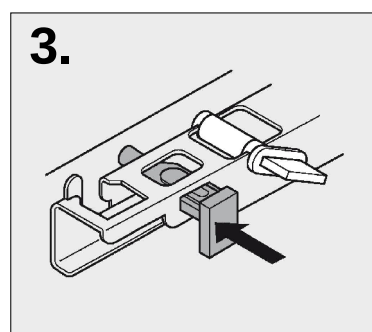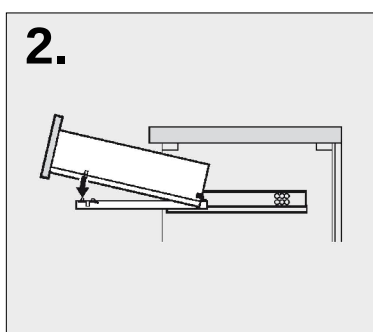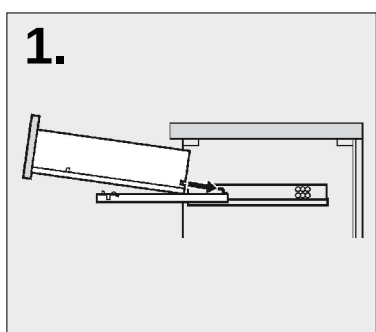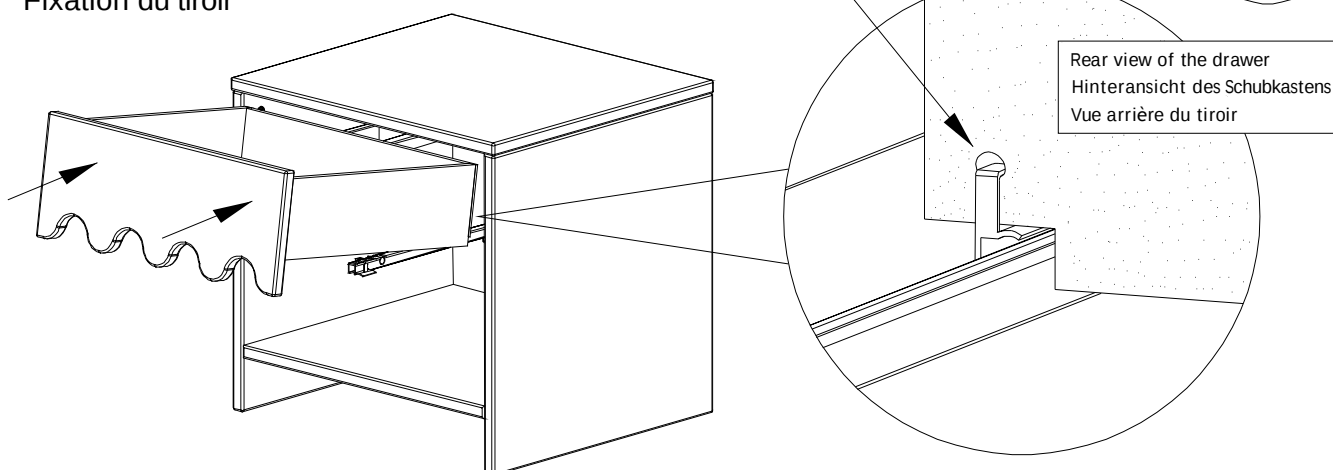

Removal of drawer
Aushängen der Schublade
Suppression de tiroir

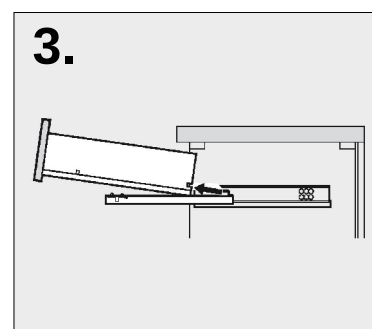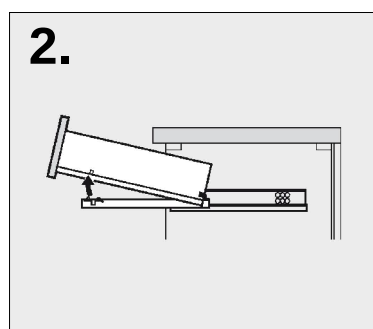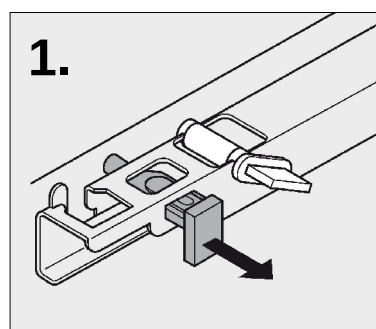

Height adjustment
Höhenverstellung
Réglage de la hauteur

