



anony


408 - 9 Davies Ave.
Toronto, ON
M4M 2A6
+1 416 994 9617
sales@anony.ca

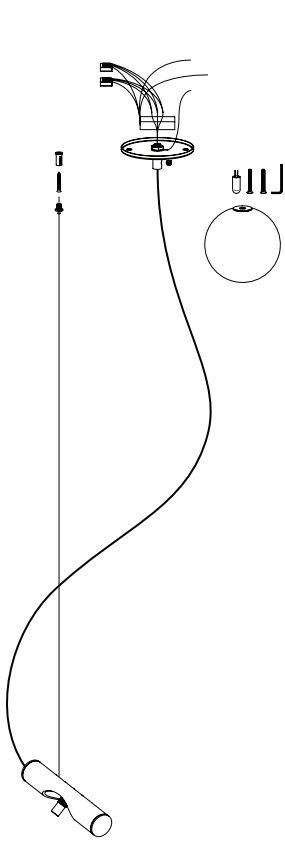

1. Disconnect power

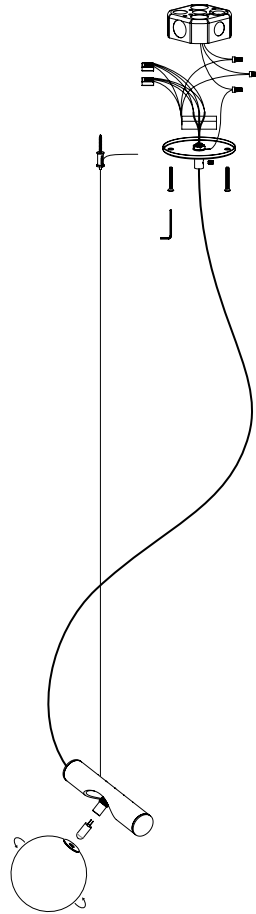


2. Connect live, neutral, & ground
3. Screw canopy plate to junction box
4. Tighten strain relief
5. Mark point onto ceiling
6. Drill gripper body onto ceiling

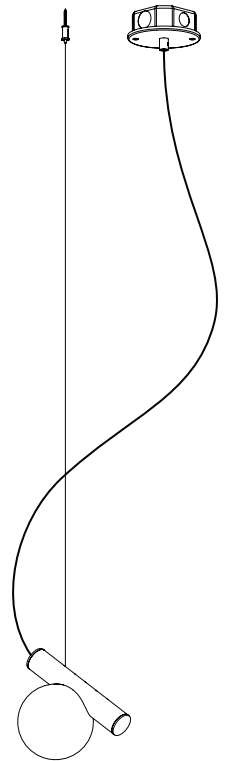


7. Insert G4 LED bulb & screw glass
8. Adjust shade to preferred angle
9. Adjust cable

anony


408 - 9 Davies Ave.
Toronto, ON
M4M 2A6
+1 416 994 9617
sales@anony.ca

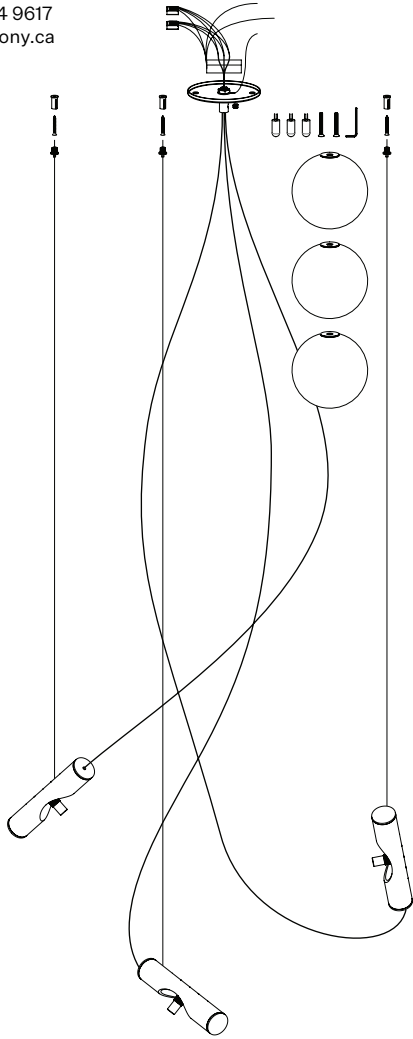

1. Disconnect power

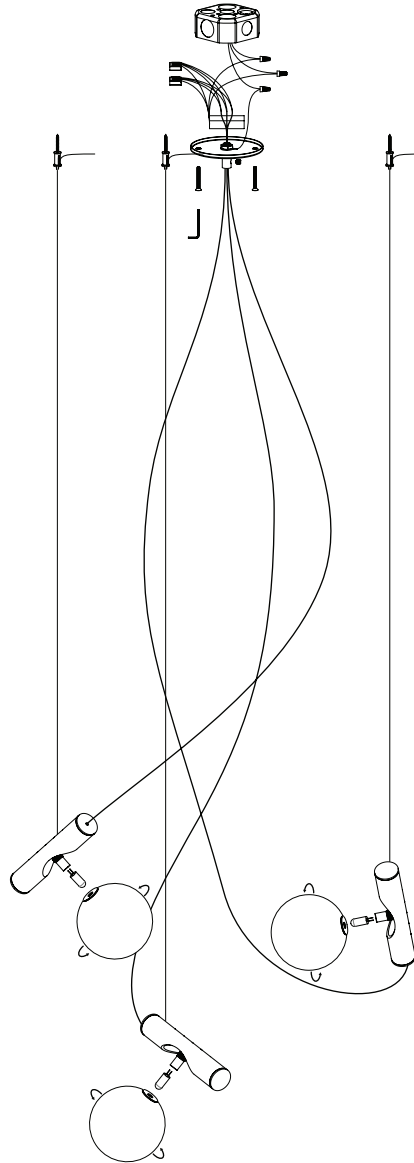

2. Connect live, neutral, & ground
3. Screw canopy plate to junction box
4. Tighten strain relief
5. Mark points onto ceiling
6. Drill gripper bodies onto ceiling

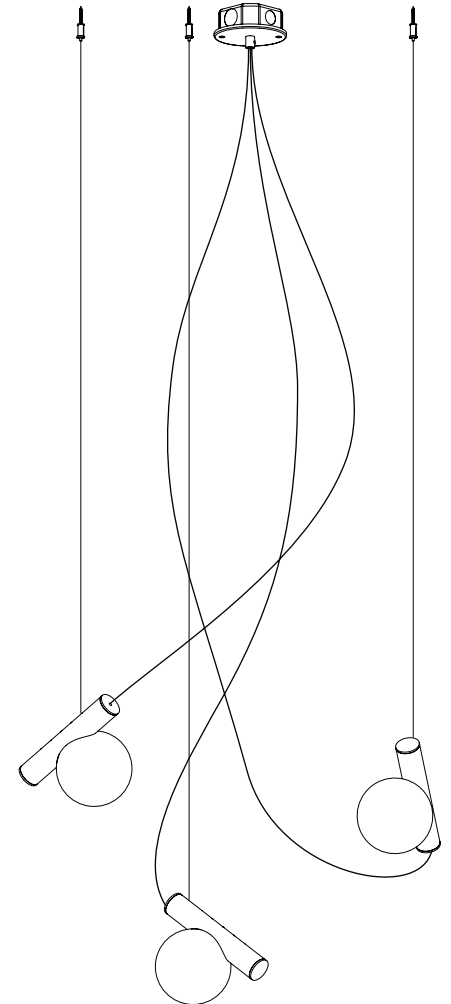

7. Insert G4 LED bulb & screw glass
8. Adjust shade to preferred angle
9. Adjust cable