
Parts & Hardware

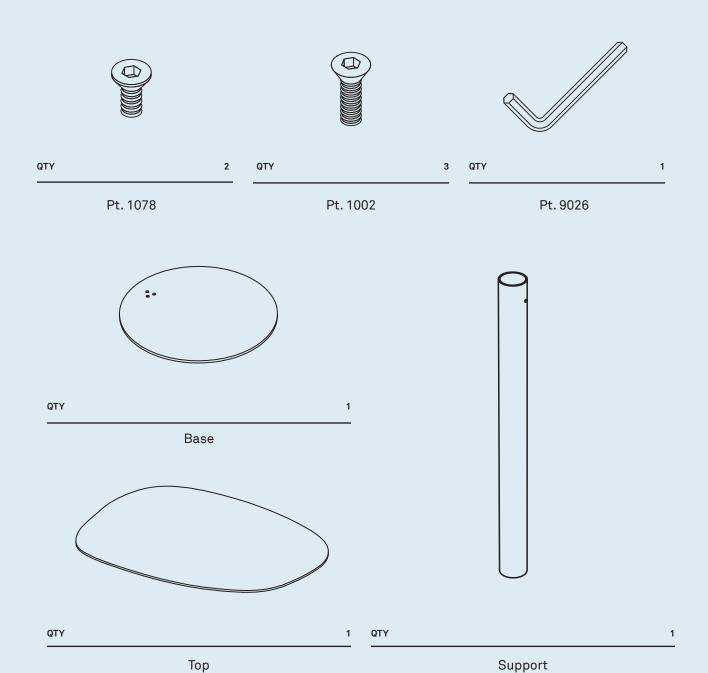



1 | 844.425.8368 SWOLE SIDE TABLE

Step 01

ATTACHING THE SUPPORT.

Place the top panel face down on a soft surface. Align the hole pattern with the callout as shown. Attach using the provided hardware.

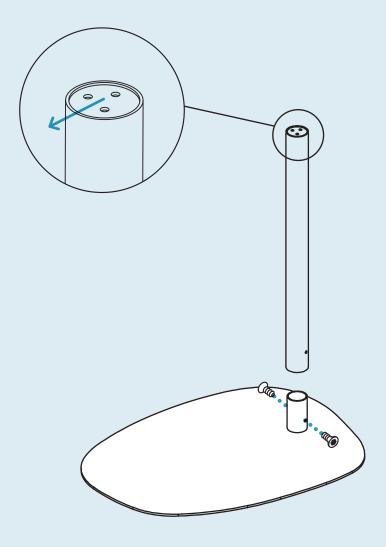

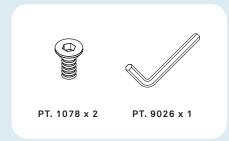



ASSEMBLY NOTES SERVICE@BLUDOT.COM | 2


Step 02

ATTACHING THE BASE.

Align the base as shown. Attach the base using the provided hardware.

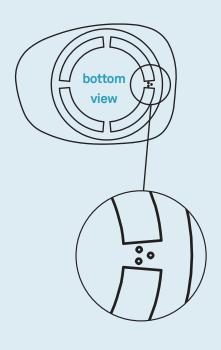

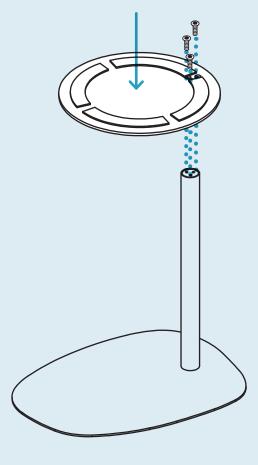

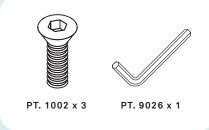

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner approved for use on painted furniture. Wipe completely dry with a soft cloth.

