


# INSTALLATION & USAGE GUIDE

1. Position E-Track Plates on trailer taking into consideration relevant codes of practice

2. Attach all 6 E-Track plates using appropriate length nuts and bolts. Grade 8.8 high tensile bolts with nylock nuts or spring washers are recommended. The length of the bolt is determined by the trailer floor plate thickness.

3. Ensure the "E" clip is correctly engaged into plate 1. Place the strap over the tyre and engage the twin idler into plate 2. Engage the last "E" clip into plate 3. Tighten ratchet using ratchet handle. Tighten until the strap is firm. Do not overtighten.

4. To comply with the load restraint guide we suggest using retractable ratchets to stabilise the rear of the car, ensuring they are attached to an unsprung component of the car- ie axle

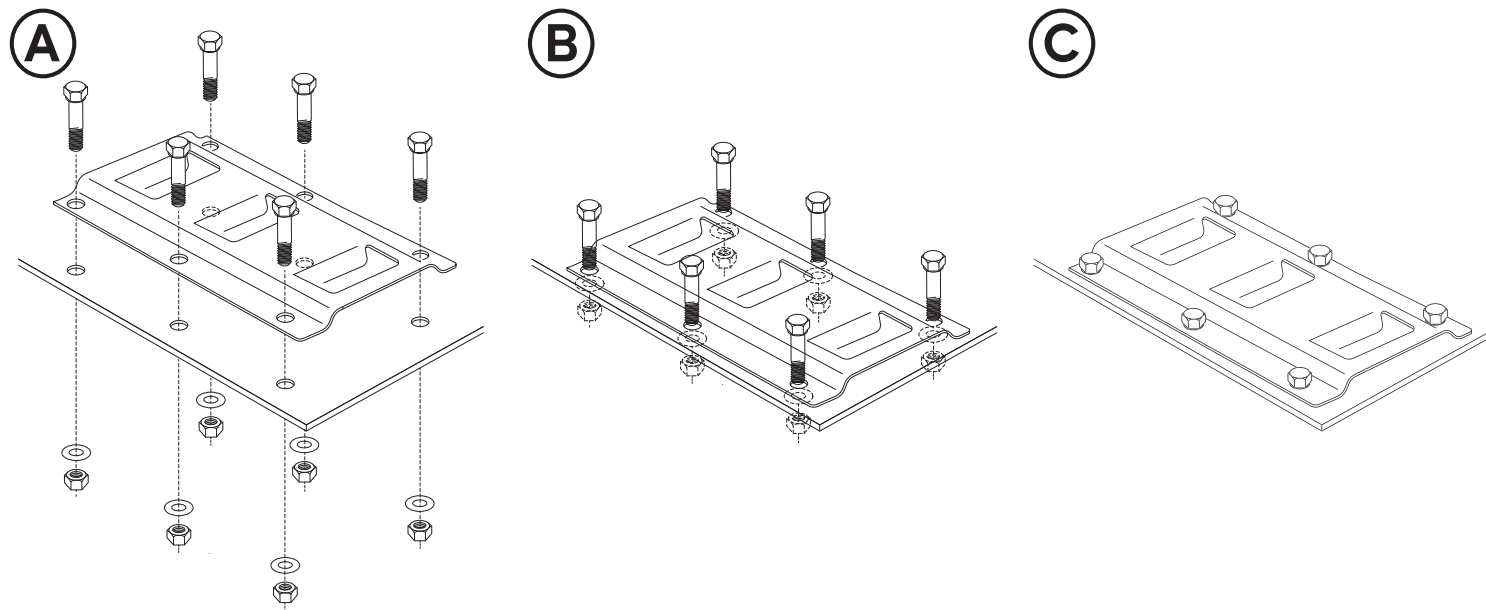

## TRAILER PLACEMENT

