

# Stealthbox®

## INSTALLATION GUIDE for the SB-GM-CFMINI/10w3v2 (1993-'02 Chevrolet Camaro & Pontiac Firebird)



This Stealthbox is a product which requires professional installation skills and tools.

Please read this installation guide thoroughly before beginning the project. It will guide you step by step through the installation. Several of the steps in this process may require two people to accomplish.

It is absolutely vital that the enclosure be properly mounted to the vehicle according to these instructions. Failure to mount the enclosure properly presents two problems: 1) The sub-bass performance will suffer due to the movement of the enclosure caused by the force exerted by the woofer(s) and 2) A loose enclosure presents a serious safety hazard in the event of a collision or sudden deceleration.

*Please enjoy your JL Audio Stealthbox responsibly.*

**JL AUDIO®**  
*Ahead of the Curve™*

[www.jlaudio.com](http://www.jlaudio.com)

**START  
HERE**



**STEP 1:** Remove the driver's side trim panel, disconnect the speaker wires, if applicable.



**STEP 2:** Remove the driver's side carpet from the cubby-hole in the corner of the hatch. This piece of carpet will not be used in the installation. Vehicle owner should keep this carpet for possible future use, when removing the Stealthbox.



**STEP 3:** Insert the enclosure into the cubby-hole, taking care to lift and tuck the wiring harness above the enclosure as you slide it in. Push the enclosure firmly into place.

**Make sure the enclosure is all the way in!!!**



**STEP 4:** Using the supplied four self-tapping screws, secure the enclosure's mounting bracket to the flooring of the vehicle.

Applying black paint to the tops of the screw heads, just make this install that much more special.

**Important: Once the screws are tightened, spray under coating onto the screw tips underneath the car to prevent rust and leaks. Failure to do so may result in corrosion and could present a safety hazard over time.**



**STEP 5:** Run speaker wires to the enclosure. At this time, check the woofer for proper operation.

**Continued on Next Page →**

Cont.  
From  
Previous  
Page



**STEP 8:** Reconnect the factory speaker wires and replace the driver's side trim panel over the enclosure.



**CONGRATULATIONS!  
INSTALL COMPLETE.**

**Included Hardware:**  
(4) #10 x 5/8" pan head self tap


**Difficulty Of Installation:**



**Specifications:**

**Enclosure Type:** Sealed  
**Driver Type:** 10W3v2-D2  
**Nominal Impedance:** 4Ω  
**Cont. Power Handling:** 300Watts

JL Audio recommends using a high quality amplifier such as the JL Audio 250/1. The diagram below shows the recommended crossover, infrasonic filter and equalizer settings for the 250/1 when being used to power your Stealthbox®.

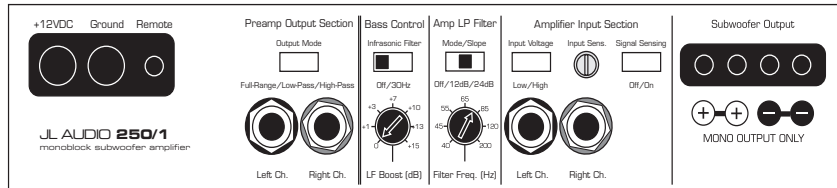

The JL Audio 250/1 is a very versatile audio component. Please consult the owner's manual for detailed information about installing and tuning this amplifier.

**Mid/High Frequency Driver Information:**

**Front Location Driver Size:**  
6.5"

**Applicable JL Audio Products:**  
TR,VR,XR & ZR 650-CSi/CXi



**Rear Location Driver Size:**  
6.5"

**Applicable JL Audio Products:**  
TR,VR & XR650-CXi

