

# SB-T-TACEXT/1OW3 STEALTHBOX™

## Fits 1996-2000 Toyota Tacoma Extended Cab Trucks

### Installation Guide:

This Stealthbox is a product which requires professional installation skills and tools. Please read this installation guide thoroughly before beginning the project. It will guide you step by step through the installation. Several of the steps in this process may require two people to accomplish.

It is absolutely vital that the enclosure be properly mounted to the vehicle according to these instructions. Failure to mount the enclosure properly presents two problems: 1) The sub-bass performance will suffer due to the movement of the enclosure caused by the force exerted by the woofer and 2) A loose enclosure presents a serious safety hazard in the event of a collision or sudden deceleration.

**STEP 1:** Remove the back pad and trim located above rear seat.



**STEP 2:** Remove the lower rear trim panel.



**STEP 3:** Insert supplied speed clips onto the bracket located on the lower area of the rear wall of the truck. The two clips go over the inner two holes on this bracket.



**STEP 4:** Install supplied spacer onto the plastic trim clip holder on the rear of the trim panel. This will prevent cracking the panel when it is reinstalled.




**STEP 5:** Reinstall the lower rear trim panel. Install the supplied bracket onto the Stealthbox. Place the Stealthbox in the vehicle and drill the two holes through the plastic panel using the holes in the bracket as guides. The holes should align with the holes in the spacers installed in Step 4.




**STEP 6:** Remove Stealthbox.


**STEP 7:** Locate factory bolt by feeling for horseshoe shaped indent under carpet. Bolt is located in between the center of both rear seats approximately 6" away from rear wall.

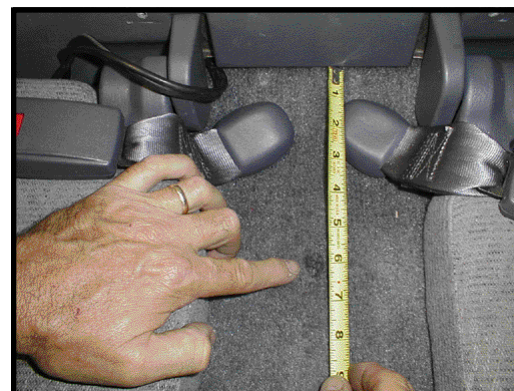


**STEP 8:** Cut carpet around factory bolt (Approximately one inch diameter) so that the bolt could be easily removed.

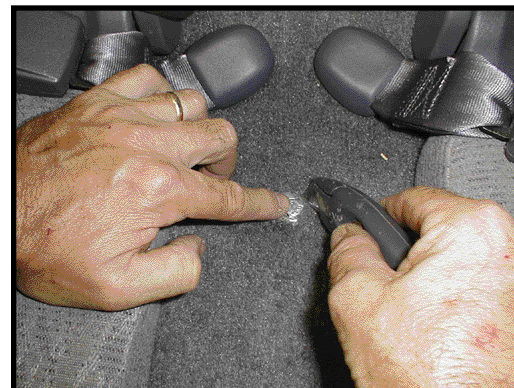


STEP 9: Remove factory bolt using a 10mm socket. Discard factory bolt.

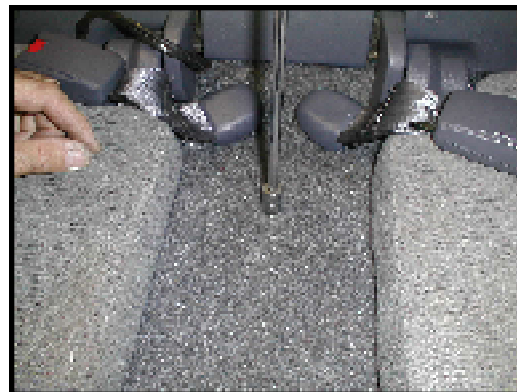

STEP 10: Drill through factory threaded hole using 1/2" drill bit.

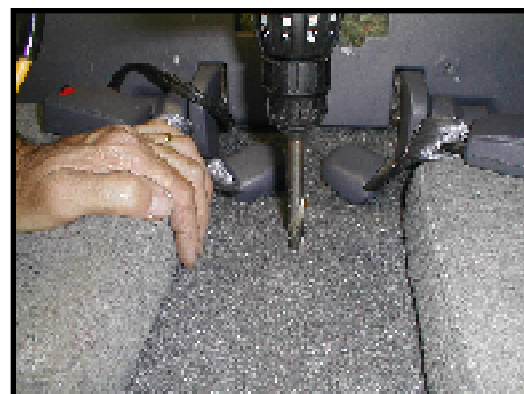

**STEP 11:** Run speaker wire. Place Stealthbox into vehicle and test before securing. Secure Stealthbox at all three locations (bottom bolt and both rear sides).

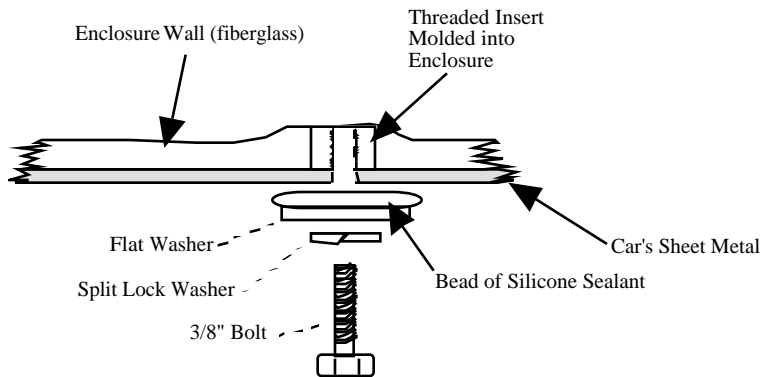

**STEP 12:** Reinstall back pad and trim.

This completes the installation.

**Specifications:**

- Driver: 10W3-D2
- Enclosure type: Sealed
- Power handling: 250 Watts Continuous
- Final Impedance: 4Ω

**Hardware List:**

- 8 1/4" flat washers
- 2 1/4" lock washers
- 1 3/8" flat washer
- 1 3/8" lock washer
- 2 1/4" bolts
- 1 3/8" bolt
- 2 speed clips

