

# Stealthbox®

INSTALLATION GUIDE  
for the

**SB-T-TUNDC/8W7**

SKU# 94340 & 94346 - 94347

2007 - 2013 Toyota Tundra Double Cab



*Thank you for choosing a JL Audio Stealthbox® for your automotive sound system. With proper installation, your new vehicle-specific enclosed subwoofer system will deliver years of listening pleasure.*

*We strongly recommend that you have your new Stealthbox® installed by your authorized JL Audio dealer. The installation professionals employed by your dealer have the necessary tools and experience to disassemble and reassemble your vehicle properly. Also, keep in mind that your warranty coverage extends to 2 years if your system is installed or approved by your authorized JL Audio dealer. If you prefer to perform your own installation, please read this installation guide completely before beginning the process.*

**JL AUDIO®**  
*Ahead of the Curve™*

## ! IMPORTANT

If you choose to perform the installation yourself, it is absolutely vital that the Stealthbox® be properly mounted to the vehicle according to these instructions. Failure to mount the enclosure properly presents two problems:

- 1) The sub-bass performance will suffer due to the movement of the enclosure caused by the force exerted by the woofer(s).
- 2) A loose enclosure presents a serious safety hazard in the event of a collision or sudden deceleration.

**INSTALLATION  
DIFFICULTY:**

**1** OUT OF **5**

**ESTIMATED TIME:  
1 HOUR**



### STEP 1

Remove any contents from the rear seats.



### STEP 2

Flip up the driver's side rear bottom cushion.




### STEP 3

Remove the two bolts that secure the mounting foot to the rear bulkhead and floor.



**STEP 4**  
Remove the bolt that secures the seat belts to the floor.

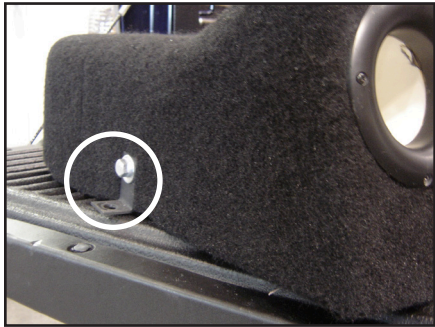


**STEP 5**  
Place a supplied lock washer and then flat washer onto each supplied hex bolt.

Place a supplied L-bracket onto each bolt assembly. The bolt assembly is to pass through the hole on the longer side of each L-bracket.

Secure a L-bracket to the left side of the Stealthbox®.



**STEP 6**  
Secure the other L-bracket to the right side of the Stealthbox®.

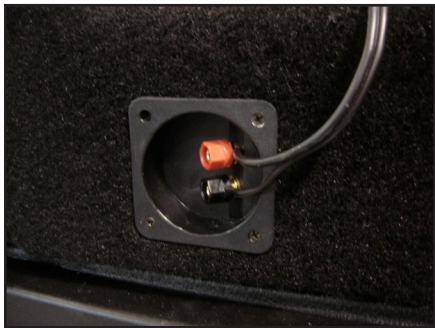

**STEP 7**  
Run speaker wire from the amplifier's location to the Stealthbox® location and check for proper operation of the woofer.



**STEP 8**  
Place the Stealthbox® into the mounting area.



**STEP 9**  
Lift the rear seating up and slide the Stealthbox® under the seating. The woofer and port faces the rear of the truck.


When placing the rear seat back down. Make sure that the hooks that are located on the backside of the seat is aligned with the hooks on the rear wall. If these hooks do not align, then the rear seating will not function correctly.



**STEP 10**  
Using the factory bolt that was removed in **STEP 3**, secure the rear seat mount to the bulkhead.



**STEP 11**  
Using the factory bolt that was removed in **STEP 3**, secure the L-bracket and the rear seat mount to the floor.

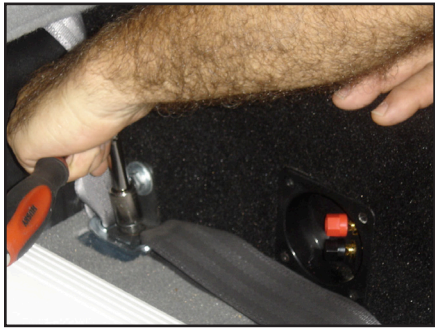

**STEP 12**  
Using the factory bolt that was removed in **STEP 4**, secure the L-bracket and the seat belts' mount to the floor.



**STEP 13**  
Lower the rear seat and replace any removed contents.



**CONGRATULATIONS**  
You have completed the installation for this model!

Please refer to the Power Recommendation section for an amplifier recommendation and basic set-up help.

**INCLUDED HARDWARE**


- (2) 3/8-inch -16 x 1-inch Hex Bolt
- (2) 3/8-inch Split Lock Washer
- (2) 3/8-inch Flat Washer
- (2) L-Bracket

**SPECIFICATIONS**

**Enclosure Type:** Bass Reflex (ported)  
**Driver Type:** 8W7  
**Nominal Impedance:** 3 ohms  
**Continuous Power Handling:** 500 Watts

**POWER RECOMMENDATION**

JL Audio recommends using a high quality amplifier such as the JL Audio XD600/1v2. The diagram below shows the recommended crossover settings for the XD600/1v2 when being used to power your Stealthbox®.

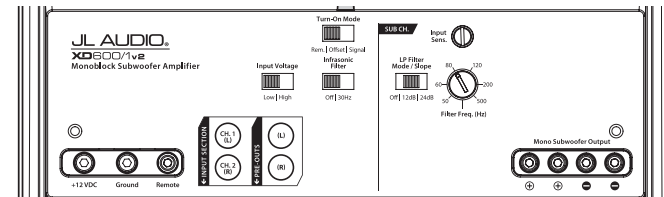

The JL Audio XD600/1v2 is a very versatile audio component. Please consult the owner's manual for even more detailed information about installing and tuning this amplifier.

**MID/HIGH FREQUENCY DRIVER FITMENT**

A variety of JL Audio coaxial and component systems will fit in the factory speaker locations of you vehicle.

**Front Speaker Size / Location:** 6-inch x 9-inch / Front Doors  
**Fits JL Audio Models\*\*:** \*TR690-TXi & \*C2-690tx



**Rear Speaker Size / Location:** 6.5-inch / Rear Doors  
**Fits JL Audio Models:** \*TR650-CXi, \*TR650-CSi, \*C2-650x, \*C2-650, \*C3-650, \*C5-650x, \*C5-650, & \*ZR650-CSi

\*Spacer ring is required for proper mounting.  
\*\*Other size speakers may be used, custom mounting ring is required.

**JL AUDIO®**  
*Ahead of the Curve™*

(954) 443-1100

www.jlaudio.com

All specifications are subject to change without notice. "JL Audio" and the JL Audio logo, "Stealthbox" and the Stealthbox logo are registered trademarks of JL Audio, Inc. "Ahead of the Curve" and its respective logo is a trademark of JL Audio, Inc.  
JLA-SKU# 011247 - 09.20.2016 • Printed in USA • ©2016 JL Audio, Inc.  
For more detailed information please visit us online at [www.jlaudio.com](http://www.jlaudio.com).

