




FIREWOOD STORAGE

ASSEMBLY INSTRUCTIONS

Assemble both boxes, then use the untreated bolts and nuts to secure the back panel to the shed. Place magnets on the bottom box in each corner for extra stability.

Use the untreated bolts and nuts to screw the back plate onto the box.

The bolts will rust along with the wood storage.

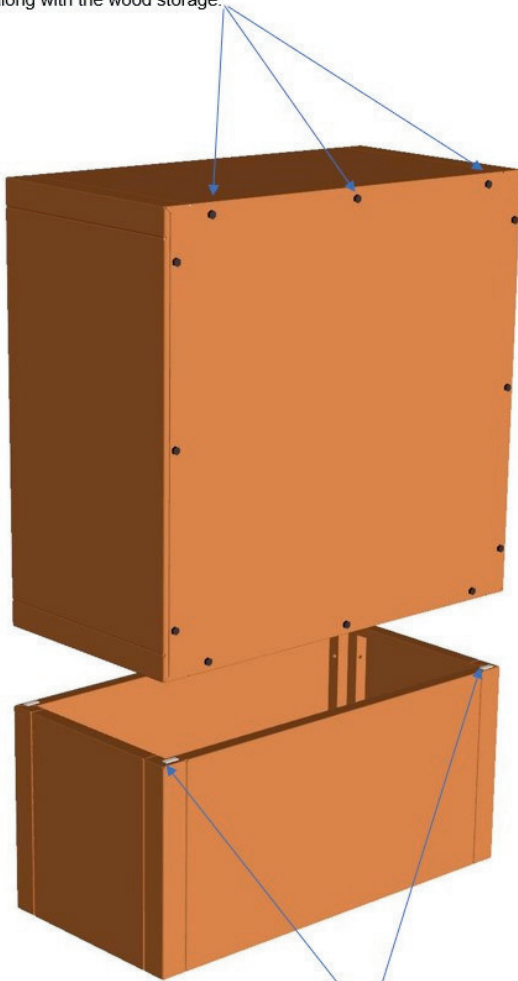

The magnets are placed on the bottom box at each corner.

ELEMENTS

The firewood storage includes the following:

- 2 boxes: 80 x 80 x 40 cm and 80 x 40 x 40 cm
- Untreated bolts and nuts
- Back panel
- Magnets

Tools: Screwdriver or screw machine and a set of wrenches.

Note: The bolts will rust over time, which is intended to match the aesthetic of the firewood shed.

MAINTENANCE AND PATINATION

Initially corten steel may stain the base slightly. Depending on the weather, the patination will continue for several months. After this, the staining will only minimally transfer. After assembly, we recommend washing all visible surfaces with soapy water to remove manufacturing oil and ensure a uniform patination.

The cut edges on the galvanized plates will develop some corrosion over time. This is intended by design and has no impact on durability.

