



GARBAGE SCREEN CUBY #3

ASSEMBLY INSTRUCTIONS

Using a soft surface will prevent scratching the material.
It is recommended to have at least two people for this task.

ELEMENTS

Step 1:


- Start by assembling the garbage screen by mounting the corner posts, front panels (625 mm), and side panels (850 mm).

Step 2:

- If your model is for 3 or 4 receptacles, a reinforcement should be installed across the top bolt holes in the front panels.

Step 3:

- Secure the shed to the base using concrete screws or similar.
 - Tip: To reduce the risk of staining the base, the garbage screen can be raised one bolt head from the base using the included bolts.

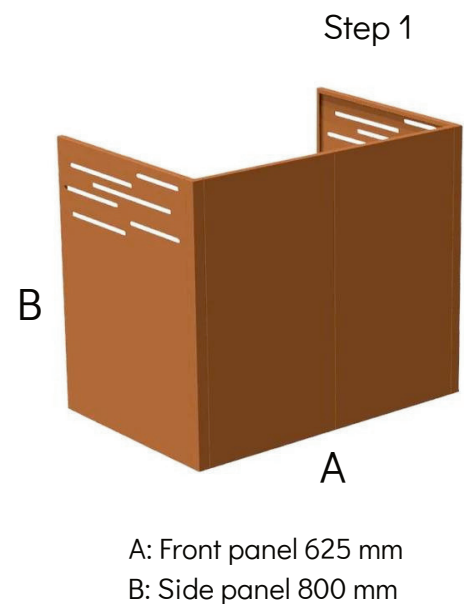

MAINTENANCE AND PATINATION

Initially corten steel may slightly stain the base. Depending on the weather, the patination will continue for several months. After this, the staining will only minimally transfer. After assembly, we recommend washing all visible surfaces with soapy water to remove manufacturing oil and ensure a uniform patination.

The cut edges on the galvanized plates will develop some corrosion over time. This is intended by design and has no impact on durability.

