



# CUBY

## ASSEMBLY INSTRUCTIONS

### REQUIRED TOOLS

2 pcs. 13 mm wrench (10 mm for wheels).

We recommend that assembly on a flat surface.


### ASSEMBLY

CUBY is assembled with corner posts, side plates and possibly cross braces for long models.

M8 bolts and nuts for all sides, corner posts and possibly the bottom plate.

The bottom plate is best assembled in sections. Bolt heads pointing down are used as feet.

Wheels (optional) are mounted with M6 bolts and nuts.

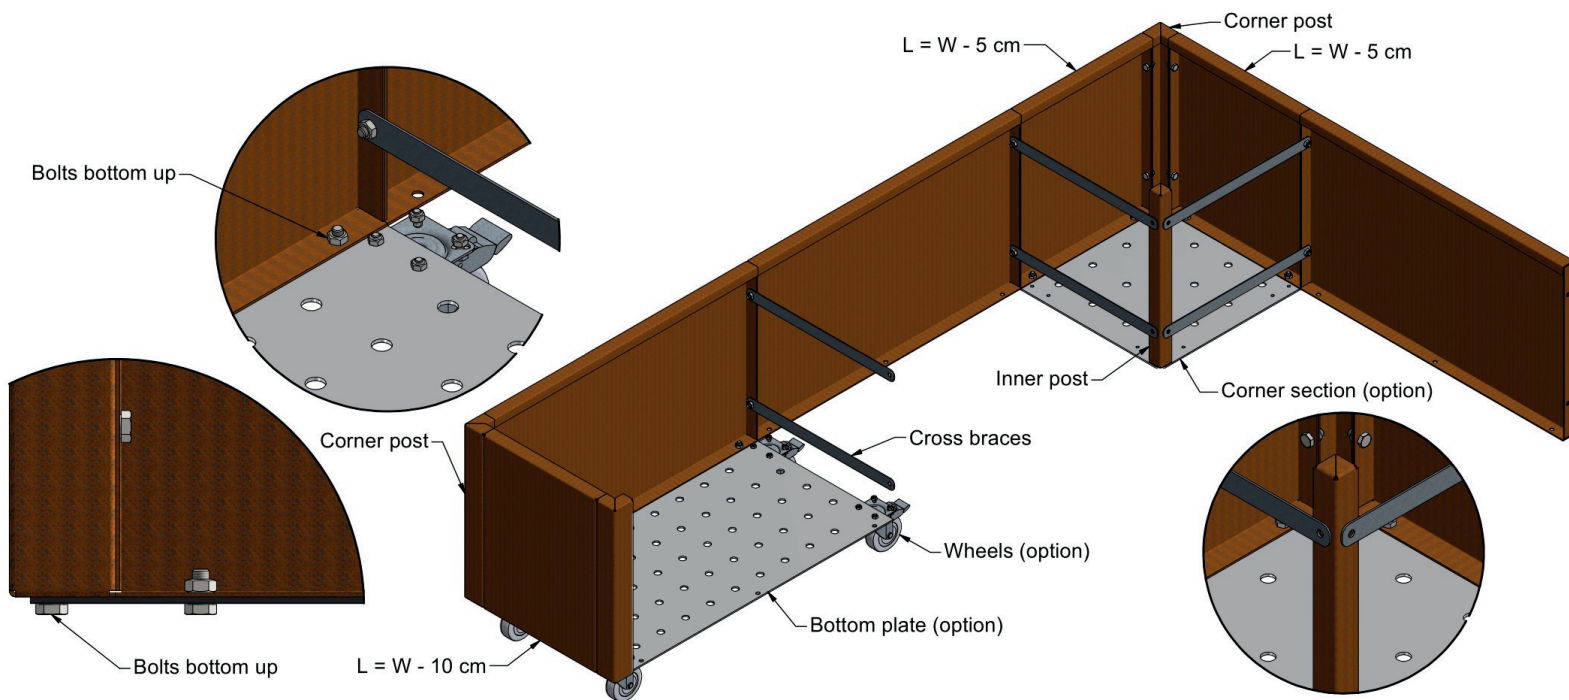

### MAINTENANCE AND PATINATION

Initially, corten steel may stain the base slightly. Depending on the weather, the patina will continue for several months. After that, the stain will transfer only minimally.

After installation, we recommend washing all visible surfaces with soapy water to remove manufacturing oil and to ensure a uniform patina.

The cut edges of the galvanized plates will develop some corrosion over time. This is intended by design and does not affect durability.

