

INTERIOR KIT

FOR ROCO 'LINZ'/OMM 32 WAGONS

ASSEMBLY INSTRUCTIONS





CONTENTS

1. WOOD FLOOR
2. INTERIOR WOOD PANELS
3. BRAKEMAN'S WOOD FLOOR
4. PROFILES




GLUE FLOOR

-RECOMENDED GLUE: 'ULTRAGLUE' OF AMMO (MIG JIMENEZ)
-ALSO: WHITE GLUE / ALIPHATIC GLUE





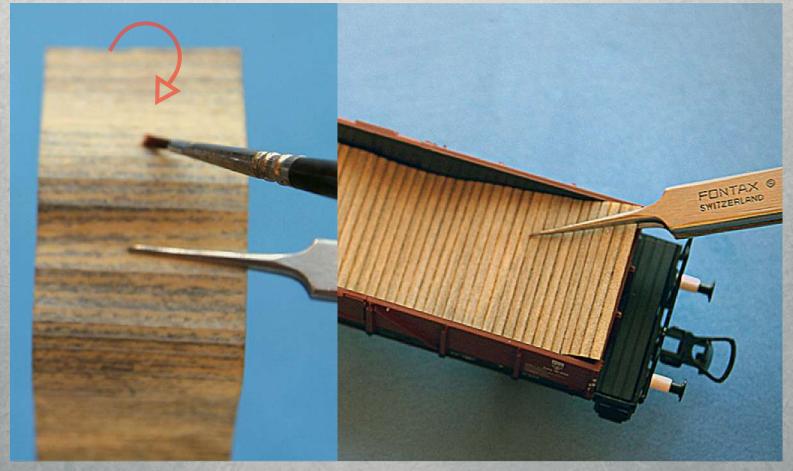





GLUE WAGONS ENDS:

—ROTATE AND CUT THE BACK —IMPORTANT! BOTH ENDS HAVE DIFFERENT HEIGHT



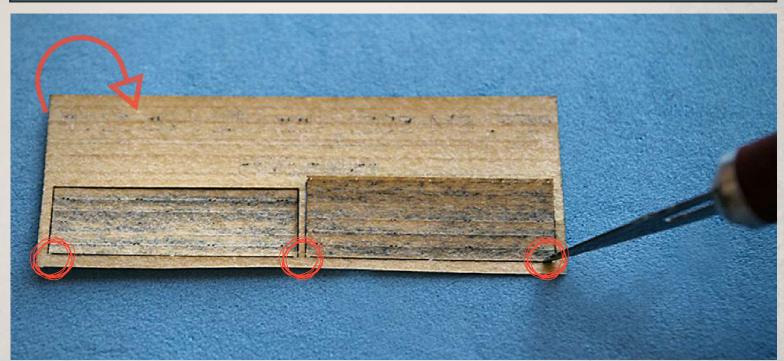

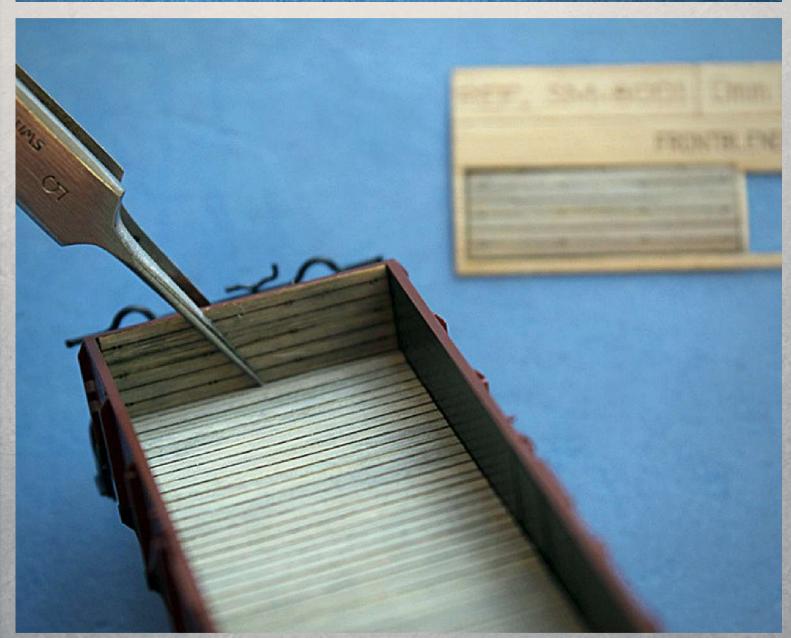






GLUE SIDE PANELS

—DIFFERENTIATE LEFT AND RIGHT PANEL



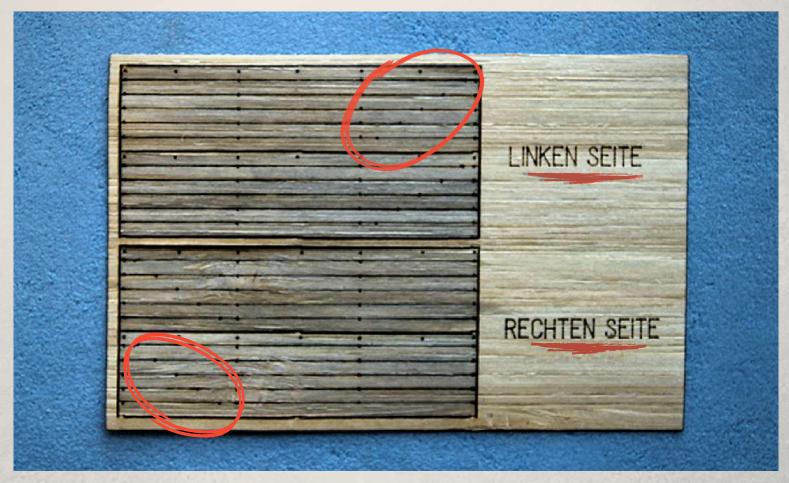

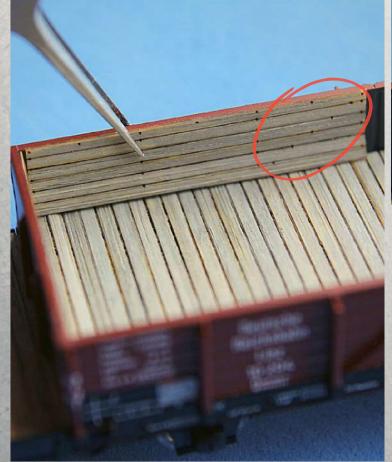

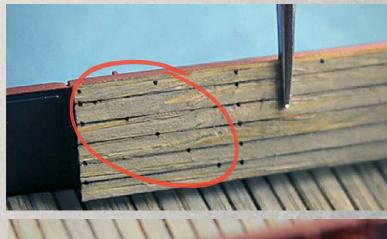







GLUE DOOR PROFILES

—PAINT AND CUT PROFILES



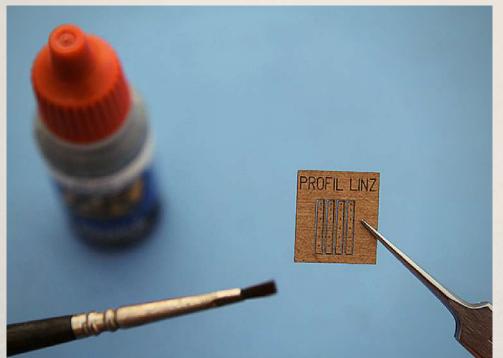

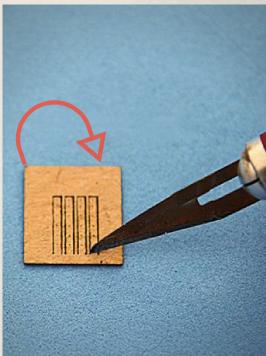





GLUE BRAKEMAN'S FLOOR

—REMOVE PLASTIC PIECE



