


- · Prior to installation please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- · Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- · Professional installation recommended.




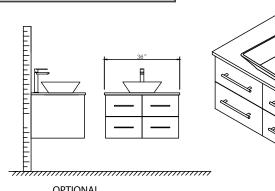


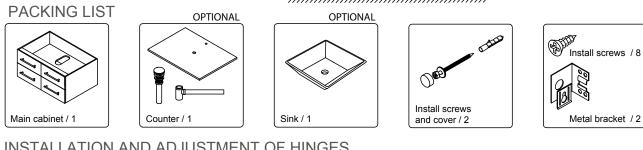


INSTALLATION AND ADJUSTMENT OF HINGES















REQUIRED TOOLS NOT IN BOX

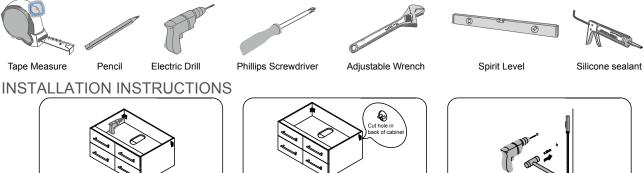


① Drill holes to match stud placement in wall.




④ Attach vanity to wall.



2 Installer must cut appropriately sized hole in back of cabinet to accomodate existing placement of hot&cold wall valves and drain

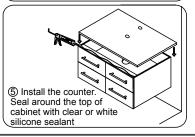

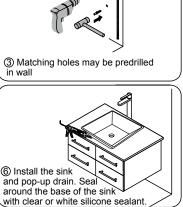

WC-WHEDO9-36 Overmount Installation Guide