

Your **NEW Weiser Ultrabrights** LED turn signal indicator upgrades



PACKAGE CONTENTS:

- 2 x LED turn signal/indicator inserts
- 1 x locking key

INSTALLATION INSTRUCTIONS

or check out the installation video at:
www.weisertechnik.com

INSTALLATION INSTRUCTIONS



FIGURE 1



FIGURE 2



1. *Figures 1 & 2* - Carefully remove the screw from the front of the indicator housing. Remove lens, taking care not to damage the locating arm on the lens (this plastic is easily stressed if forced).
2. *Figures 3 & 4* - Remove bulb assembly and reflector as one – a small flat-end screwdriver may help ease this out. Remove terminal wires from the back of the bulb assembly (needle nose pliers may help).
3. *Figure 5* - Fit indicator locking key (supplied) into the locating slot on the arm of the indicator; match the same position as on old bulb reflector assembly.



FIGURE 3



FIGURE 4



FIGURE 5



FIGURE 6



FIGURE 7

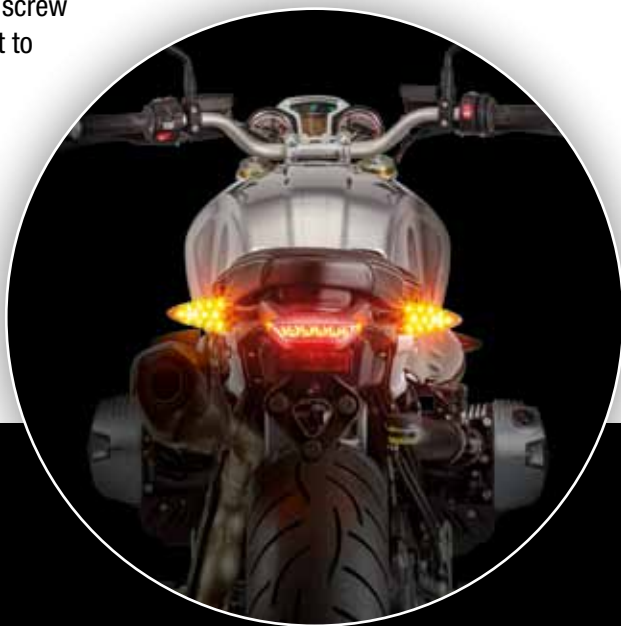


FIGURE 8

- Figure 6* - Re-attach male/female terminal connectors to the rear of the LED assembly (long nose pliers again may help big fingers). Note: if the indicator does not flash, you may have the terminals reversed. Check before re-assembly of lens.
- Figure 7* - Line up the LED assembly with the locking key and carefully push back into housing. Make sure wiring is not trapped.
- Figure 8* - Replace lens and screw into housing, taking care not to stress the arm on the lens. Do not force.



All images shown are Ultrabrights Extreme. Same fitting instructions apply to Ultrabrights Original+.



ULTRABRIGHTS



Extreme

Original+

For further information, please visit:

weisertechnik.com or email: info@weisertechnik.com