
RMS INSTRUCTION

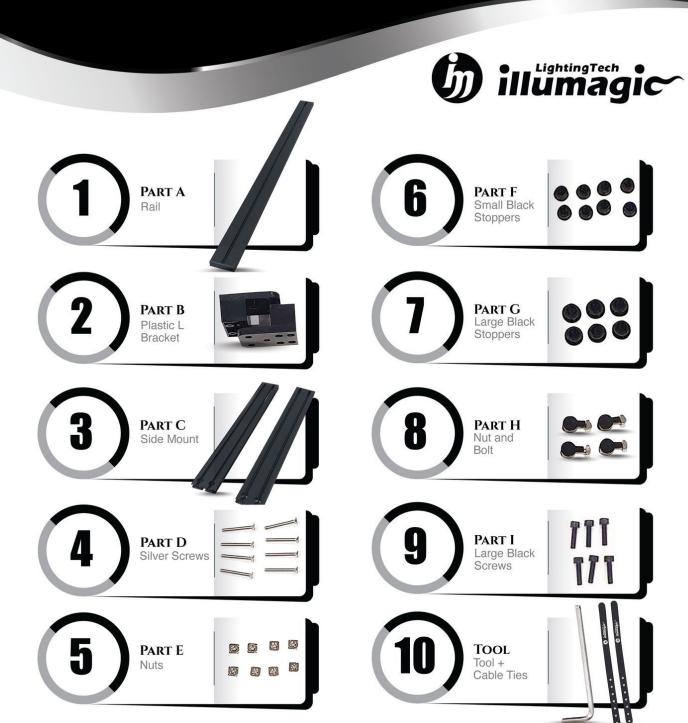




9

A

Р



Remove side caps from the RAIL (Part A) and lay on a flat surface.



Take 2 pieces of the NUTS & BOLTS (Part H) and unscrew the nut slightly so as to expose more of the screw. The next step will show in more detail.

NOTE If the nut falls off, be sure to reinstall it with the curved side facing outward.



Slide NUTS & **BOLTS (Part H) into** each track of the RAIL (Part A) and reinsert the side caps you removed in Step 1 into the end of the RAIL. Refer to Fig A.

DALUA




Take the SIDE MOUNT (Part C) and with the rounded slots facing inward and at the bottom, line up with the end of the RAIL (Part A). Refer to Fig B.



Slide the NUTS **AND BOLTS (Part** H) into the rounded slots on the SIDE MOUNTS (Part C) and then tighten with the TOOL provided. Refer to Fig C







9 A

Р

RMS **INSTALLATION GUIDE**



Repeat steps 2 through to 5 for the opposite side of the RAIL. Refer to Fig E



Fig. E



Thread the NUTS (Part E) onto the SILVER SCREWS (Part D). NOTE Just like before, make sure the rounded end of the NUTS (Part E) are facing outward and thread onto the SILVER SCREWS (Part D) to appear as they do in Fig G.



Fig. G



Remove the bottom side caps on the SIDE MOUNTS (Part C).



With the wider end of the PLASTIC L **BRACKET (Part B)** slide all the NUTS (Part E) into the 2 tracks at the bottom of the SIDE MOUNT (Part C). It gets much easier once the first 2 nuts slide in. Refer to Fig H.



Fig. H



9

A

Place the SILVER SCREWS (Part D) into the 4 corresponding holes in the PLASTIC L BRACKET (Part B) Refer to Fig F.



Fig. F

Place the side cap back onto the end of the SIDE MOUNT (Part C) and align the PLASTIC L **BRACKET (Part B)** with the end of the SIDE MOUNT. Fasten the Silver Screws and cover them with the small **BLACK STOPPERS** (Part F). Refer to Fig I.









🔀 accounts@daluaaustralia.com.au



RMS **INSTALLATION GUIDE**



12

9

A

4

Take the BLACK SCREWS (Part I) and partially screw into the 3 corresponding holes on the L BRACKET. You can then place the LARGE BLACK STOPPERS (Part G) on the ends of these **BLACK SCREWS.** Refer to Fig J.



Now you may carefully place your assembled mounting system onto your aquarium and fasten the BLACK SCREWS onto the glass.

► Here are some of the versatile mounting options for the Blaze and X4 series of Illumagic Lighting.











