


# Window Projection Material

## USER GUIDE

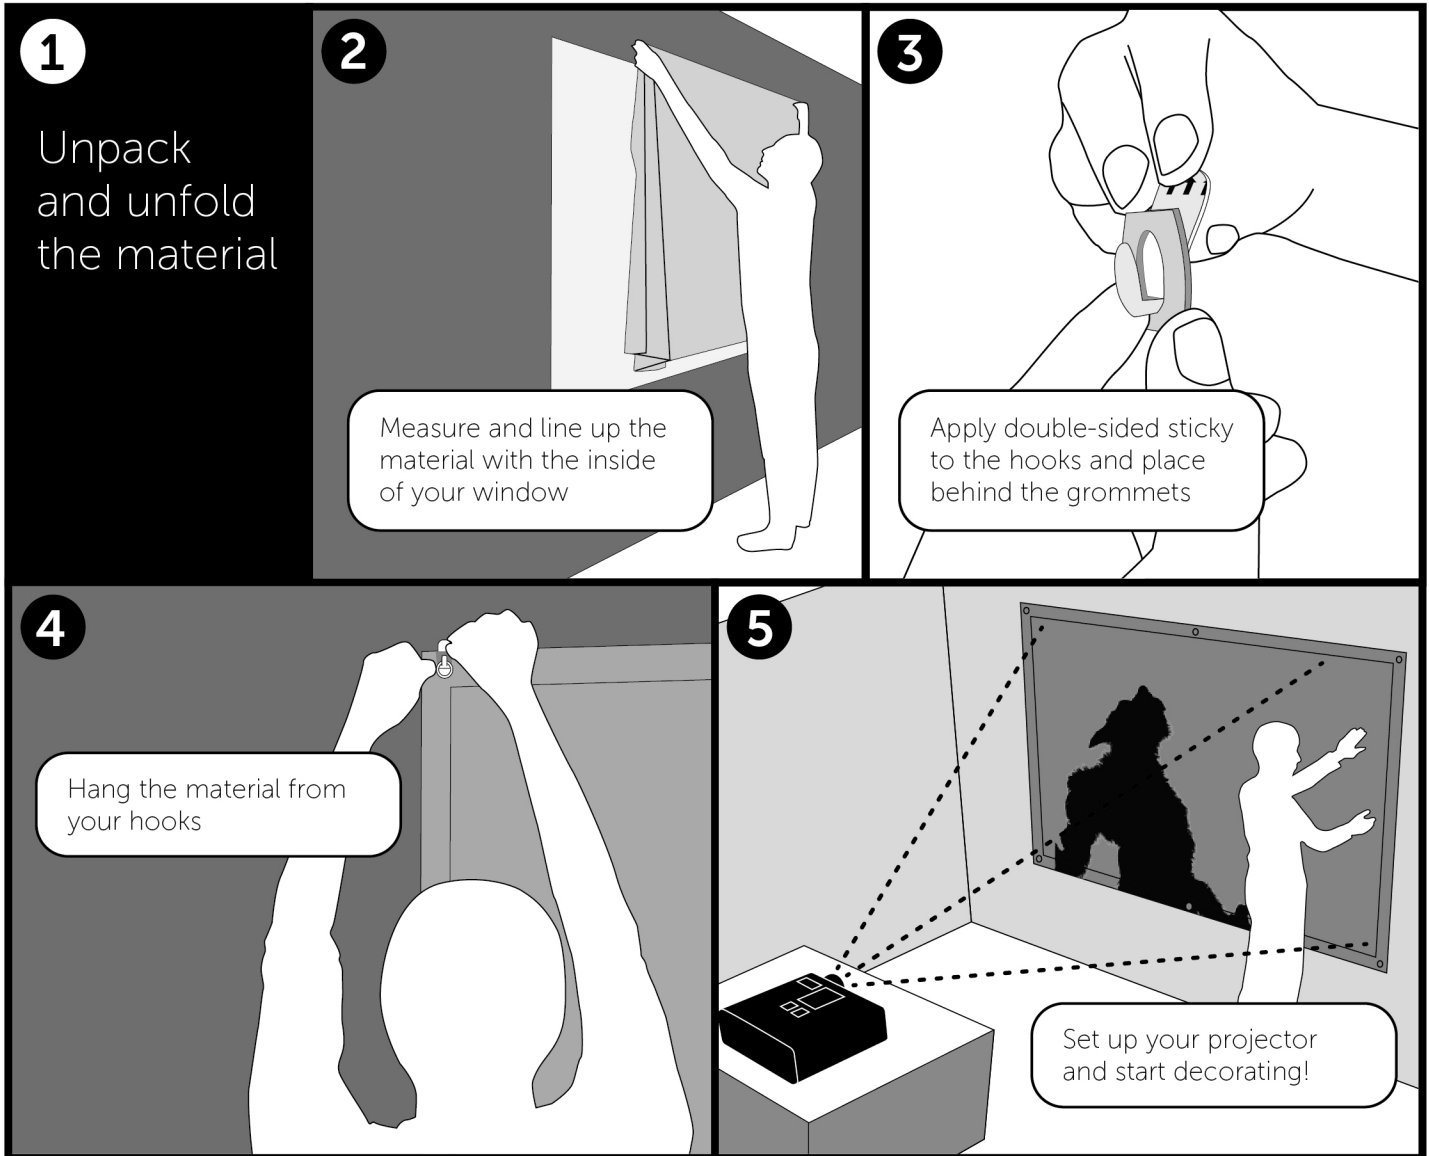

### PRO TIPS

- 1/ To remove creases, use a clothes iron on its lowest heat setting.
- 2/ To clean, soak material in hot water with a dash of vinegar and then hang dry.
- 3/ Turn off any light sources near your window (both inside and outdoors) for the clearest effect.