
RETURN PANEL WITH WALL-CLAMPS INSTRUCTION MANUAL

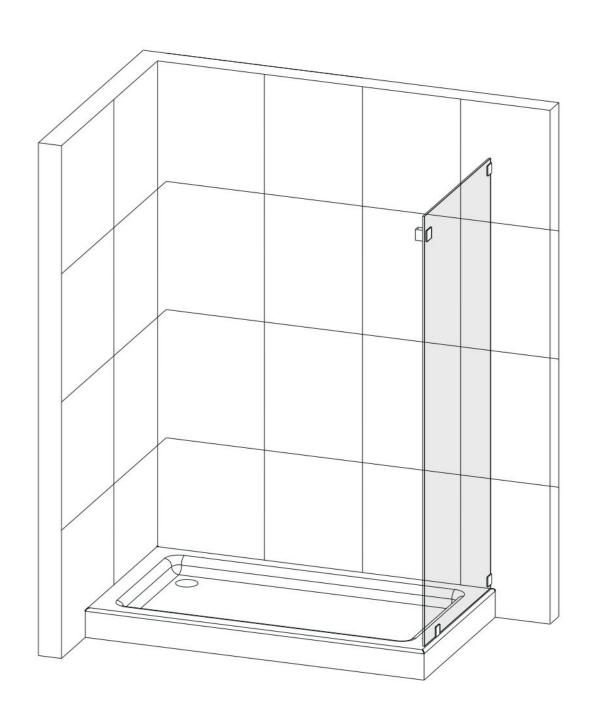



Please keep this manual and product code number for future reference and for ordering replacement parts if necessary.

GENERAL INSTRUCTIONS

- Read this manual carefully and completely before proceeding.
- It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION OVER CERAMIC TILES

- If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.
- Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.

NOTICE

- Caulking: no sealant is required inside the shower, unless otherwise stated.
- Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR


- Never use scouring powder pads or sharp instruments on metal pieces or glass panels.
 An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and aluminum parts looking new.
- We recommend wiping the glass panels with a squeegee after each use.

This is the installation instruction for Return Panel, which need to be installed prior to the shower door installation.


TOOLS REQUIRED

SPIRIT LEVEL	POWER DRILL	PENCIL	SILICONE	MALLET
TAPE MEASURE	SCREW DRIVER	6mm&3mm(1/4" & 1/8") DRILL BITS	HACKSAW	SAFETY GLASSES

^{*} Use a 6mm ($\frac{1}{4}$ ") drill bit for ceramic when drilling into ceramic tiles

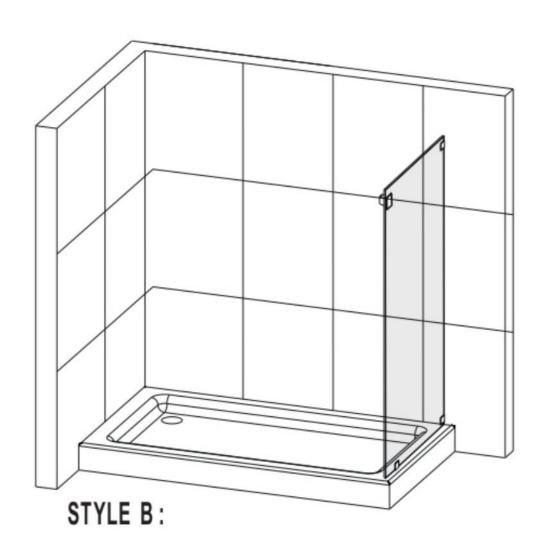



PARTS LISTING

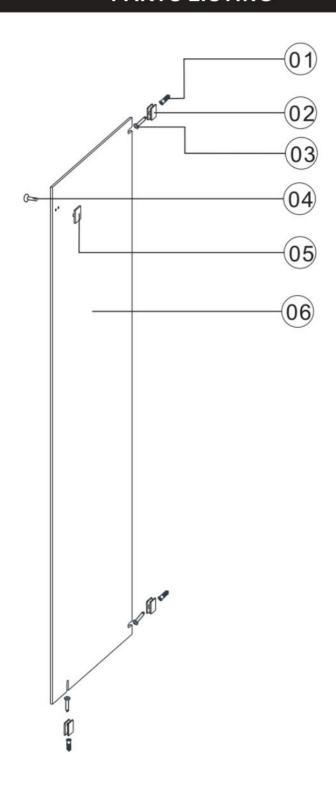


STYLE B:


ITEM	PARTS	DIAGRAM	QTY
1	Wall plugs Ø6	€ No.	3
2	Wall mount bracket	0	3
3	Screw St4x30	8	3
4	Screw M6x25	B	1
5	Connector cap	0	1
6	Return panel	[,]	1

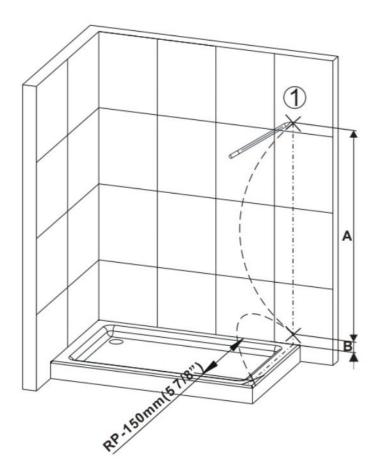


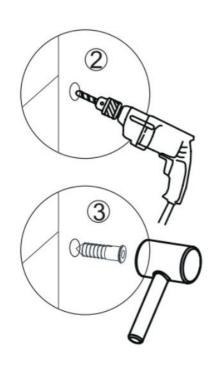


Product Height	В
1524mm(60")	
1676mm(66")	
1828 mm (72")	
1905mm(75")	50mm (1 15/16")
1930mm(76")	
1981 mm(78")	
2006mm(79")	

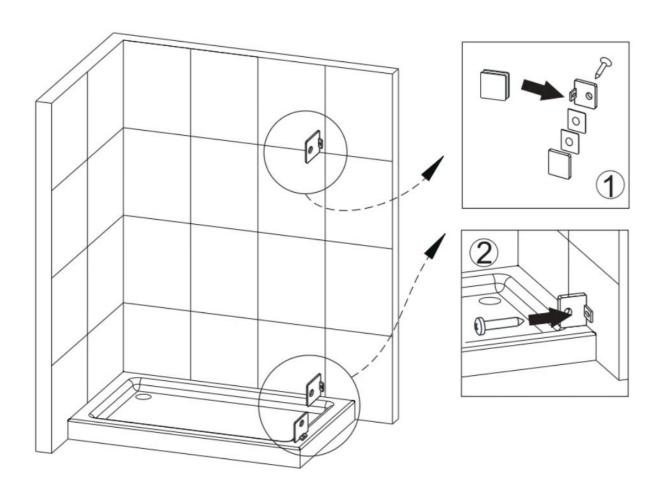


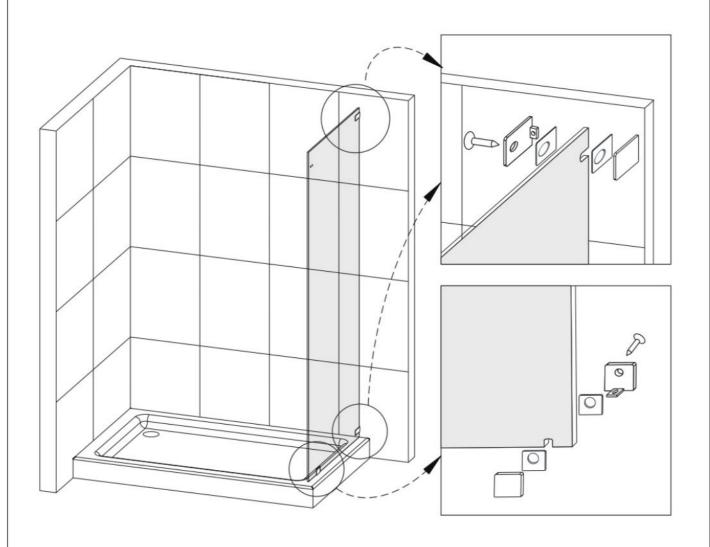


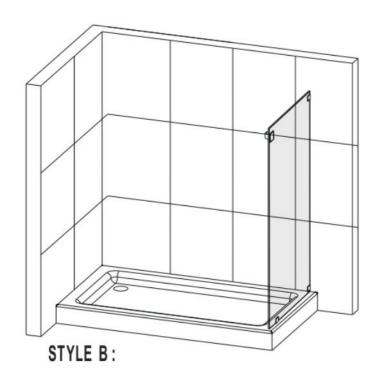

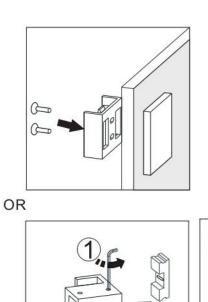

SHOWER DOOR MODEL: DS01

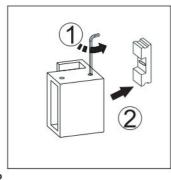

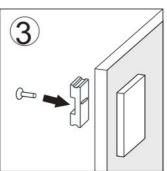

OR

