

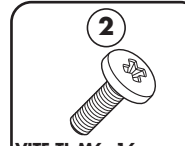
GIVI**art. E111**

SCHIENALINO
 BACKREST
 DOSSÈRET
 BEIFÄHRER-RÜCKENLEHNE
 RESPALDO

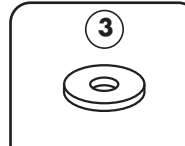
ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCCIONES DE MONTAJE
 BAULEITUNG - INSTRUCCIONES DE MONTAJE



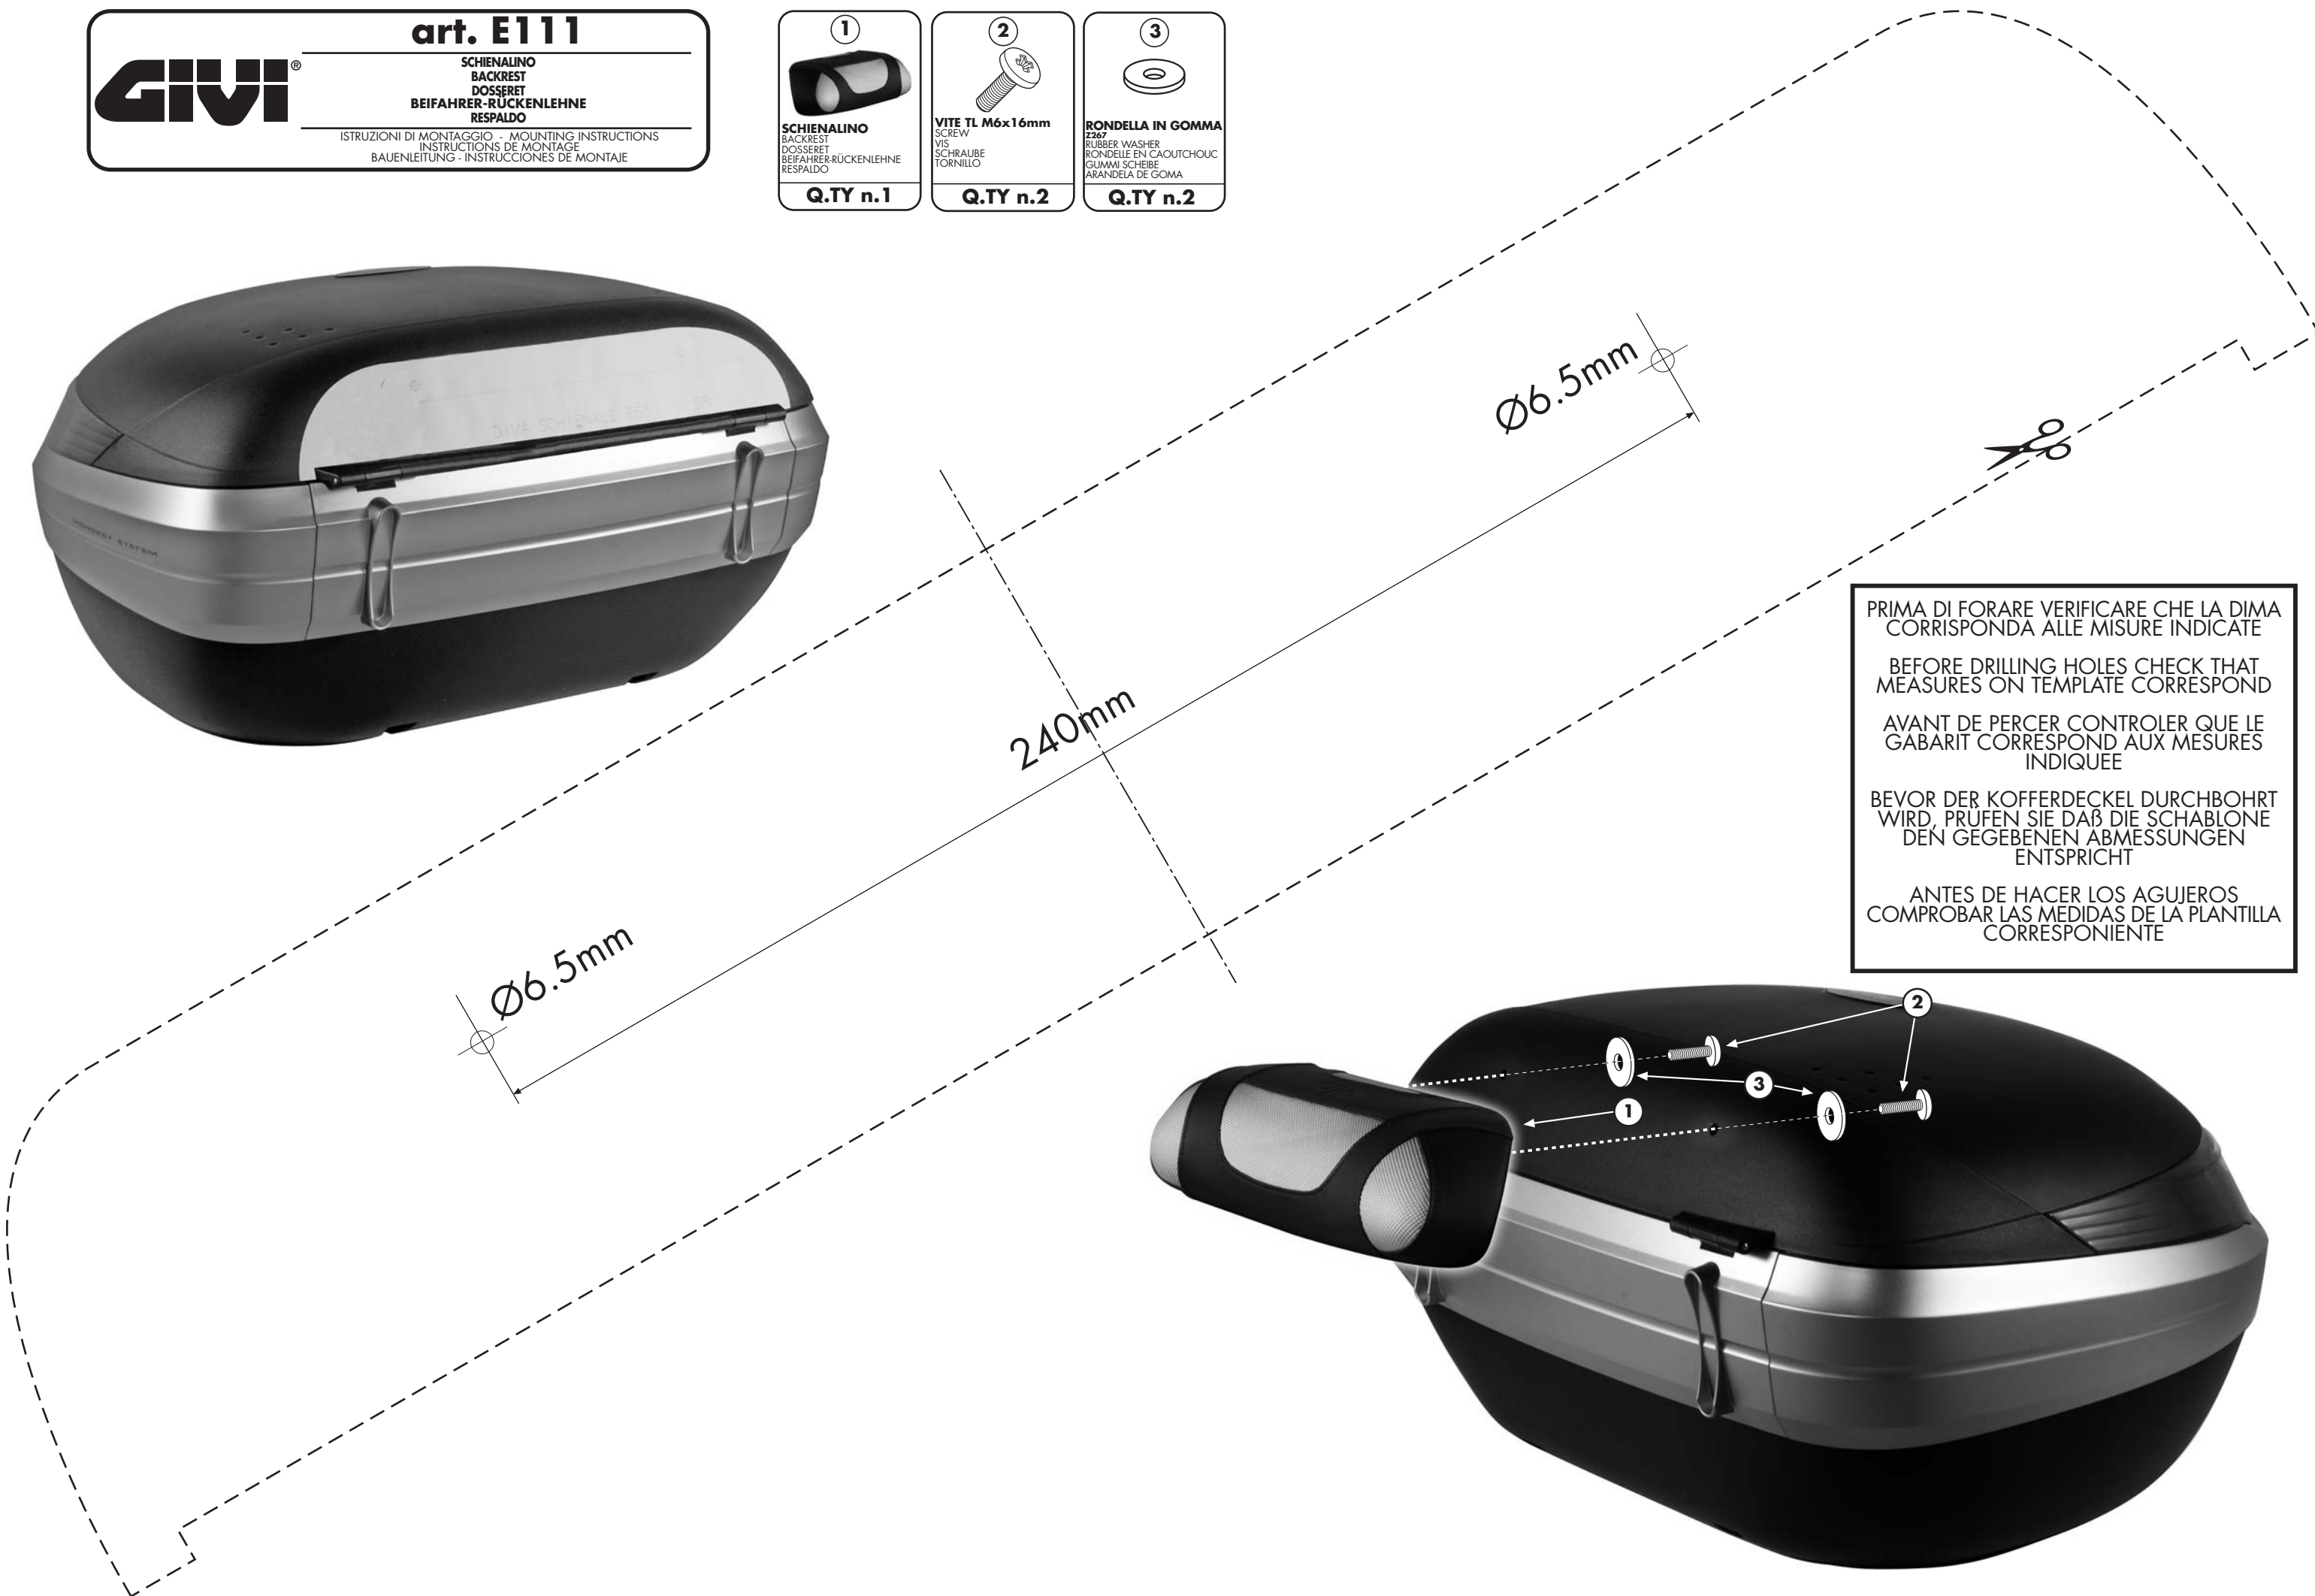
1
SCHIENALINO
 BACKREST
 DOSSÈRET
 BEIFÄHRER-RÜCKENLEHNE
 RESPALDO

Q.TY n.1

2
VITE TL M6x16mm
 SCREW
 VIS
 SCHRAUBE
 TORNILLO

Q.TY n.2

3
RONDELLA IN GOMMA
 Z967
 RUBBER WASHER
 RONDELLE EN CAOUTCHOUC
 GUMMI SCHEIBE
 ARANDELA DE GOMA

Q.TY n.2

PRIMA DI FORARE VERIFICARE CHE LA DIMA
 CORRISPONDA ALLE MISURE INDICATE

BEFORE DRILLING HOLES CHECK THAT
 MEASURES ON TEMPLATE CORRESPOND

AVANT DE PERCER CONTROLER QUE LE
 GABARIT CORRESPOND AUX MESURES
 INDIQUEE

BEVOR DER KOFFERDECKEL DURCHBOHRT
 WIRD, PRÜFEN SIE DAB DIE SCHABLONE
 DEN GEGEBENEN ABMESSUNGEN
 ENTSPRICHT

ANTES DE HACER LOS AGUJEROS
 COMPROBAR LAS MEDIDAS DE LA PLANTILLA
 CORRESPONIENTE

