
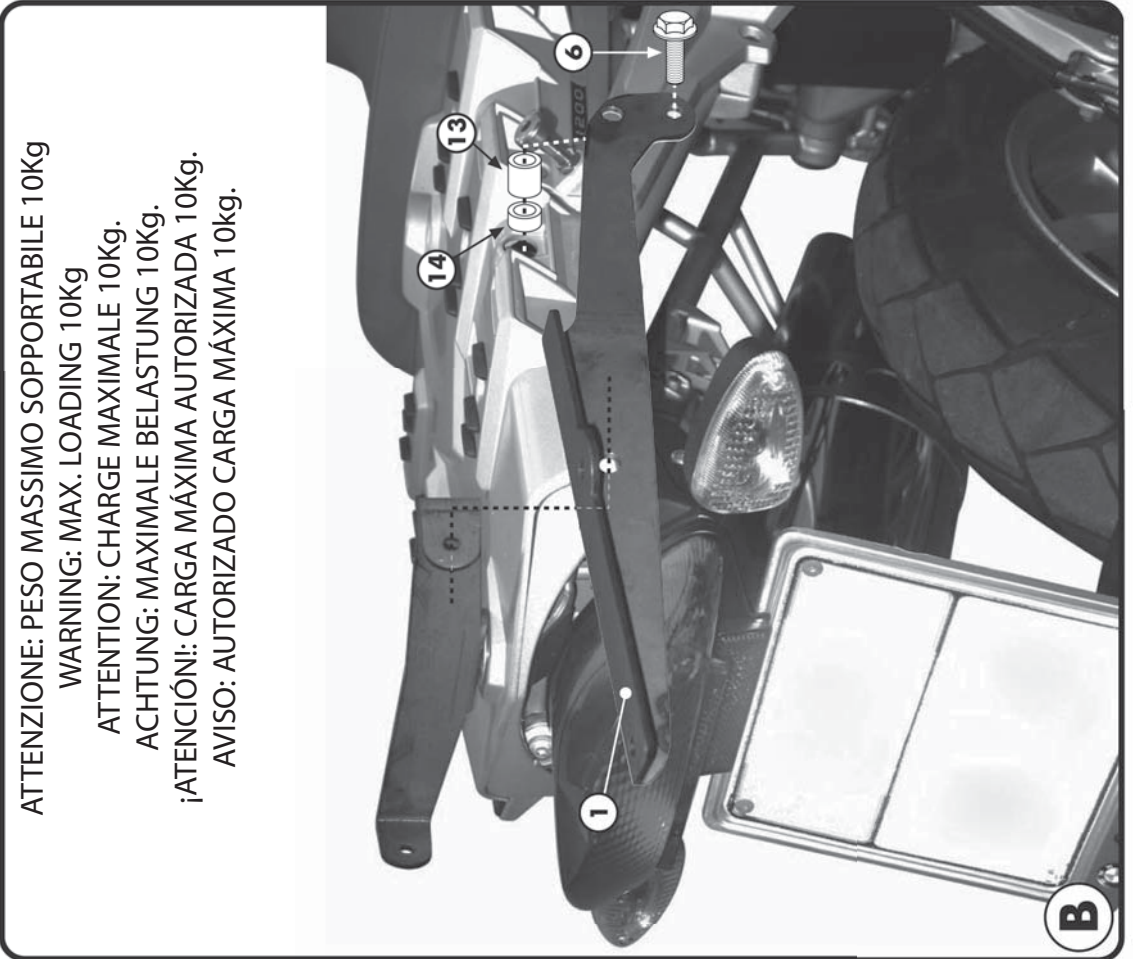
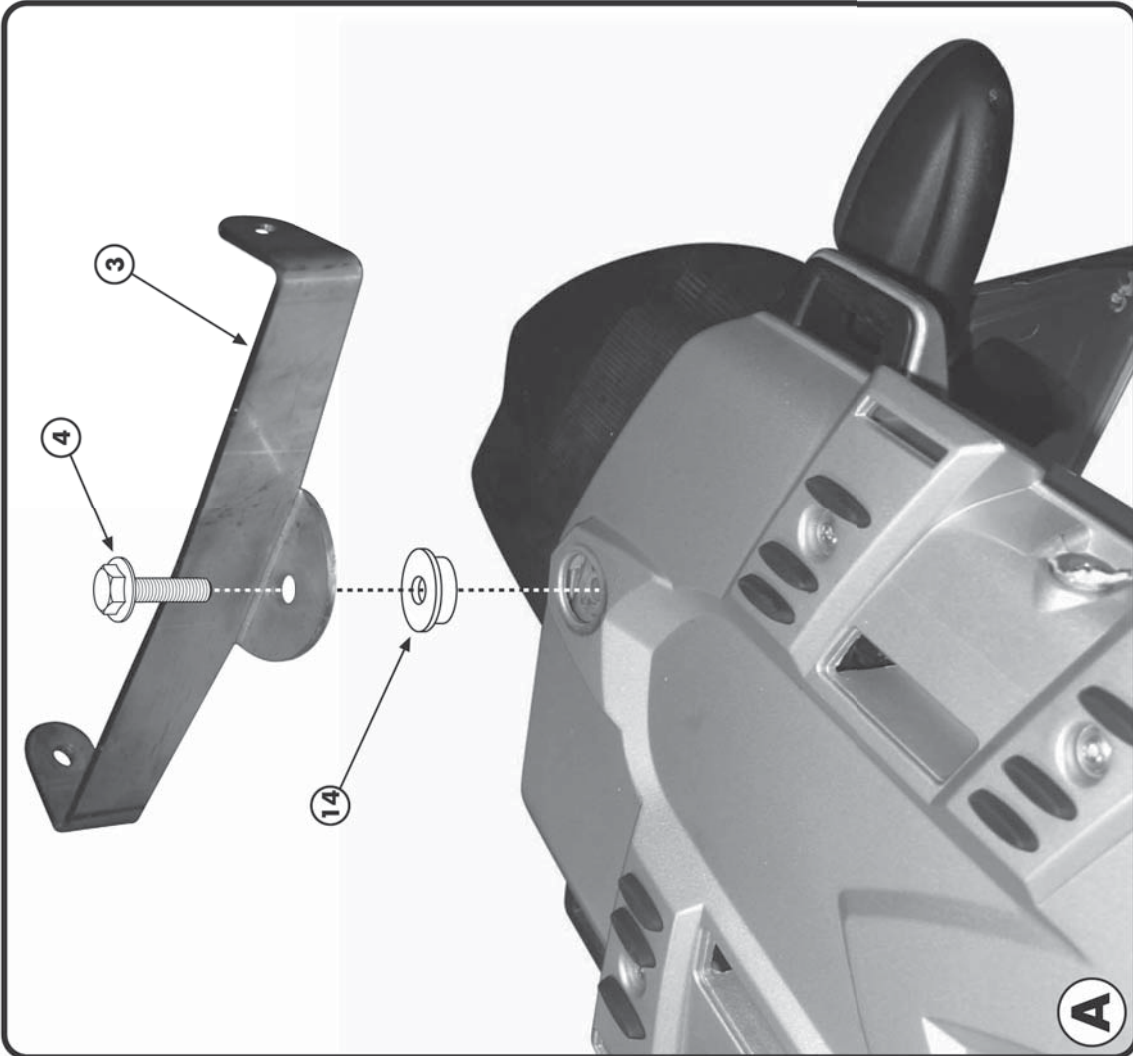
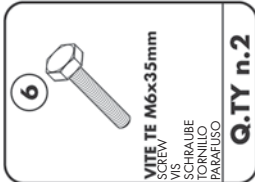
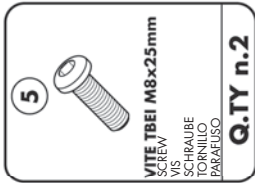
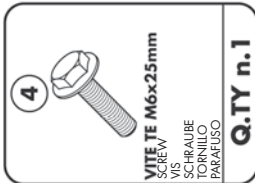
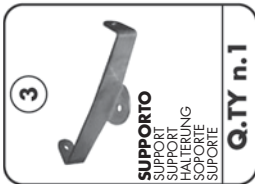


PORTAVALIGIA SPECIFICO - SPECIFIC CASE HOLDER
PORTE-VALISE SPECIFIQUE - SPECIFISCHER KOFFER-TRÄGER
PORTA-EQUIPAJE ESPECIFICO - TRANSPORTADOR ESPECIFICO

BMW R1200GS '04/'08

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCCIONS DE MONTAGE
BAUANLEITUNG - INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM

SR689 - KR689

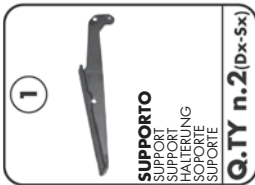

ATTENZIONE: PESO MASSIMO SOPPORTABILE 10Kg

WARNING: MAX. LOADING 10Kg

ATTENTION: CHARGE MAXIMALE 10Kg.

ACHTUNG: MAXIMALE BELASTUNG 10Kg.

¡ATENCIÓN! CARGA MÁXIMA AUTORIZADA 10Kg.

AVISO: AUTORIZADO CARGA MÁXIMA 10kg.


PORTAVALIGIA SPECIFICO - SPECIFIC CASE HOLDER
 PORTE-VALISE SPECIFIQUE - SPECIFISCHER KOFFER-TRÄGER
 PORTA-EQUIPAJE ESPECIFICO - TRANSPORTADOR ESPECIFICO

BMW R1200GS '04/'08


ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCCIONES DE MONTAJE
 BAUANLEITUNG - INSTRUÇÕES DE MONTAJE - INSTRUÇÕES DE MONTAJE


13  **DISTANZIALE Ø18x7mm
SPACER Ø8,5mm, V497**
 ENTRETOISE
 DISTANZBLECK
 DISTANCIADOR
 ESPACADOR
Q.TY n.-


14 **COMPONENTI ORIGINALI**
 ORIGINAL PARTS
 PARTES ORIGINALES
 ORIGINALBAUTEILE
 COMPONENTES ORIGINALES
 COMPONENTES ORIGINAIS
Q.TY n.-

15  **RONDELLA fibx20mm**
 WASHER
 RONDELLE
 SCHEIBE
 ARANDELA
 ARRUELA
Q.TY n.4


16  **PIASTRA MONOKEY**
 PLATINE
 PLATINE
 PLATTE
 PARRILLA
 PRATO
Q.TY n.1

17  **RONDELLA fibx14mm**
 WASHER
 RONDELLE
 SCHEIBE
 ARANDELA
 ARRUELA
Q.TY n.2


18  **VITE TBEI M8x30mm**
 SCREW
 VIS
 SCHRAUBE
 TORNILLO
 PARAFUSO
Q.TY n.2


19  **DADO A.B. M8**
 BUSH
 ECROU
 MUTTER
 TUERCA
 PORCA
Q.TY n.4


7  **RONDELLA Ø8mm**
 WASHER
 RONDELLE
 SCHEIBE
 ARANDELA
 ARRUELA
Q.TY n.2



8  **VITE TCEI M6x35mm**
 SCREW
 VIS
 SCHRAUBE
 TORNILLO
 PARAFUSO
Q.TY n.4

9  **RONDELLA Ø6mm**
 WASHER
 RONDELLE
 SCHEIBE
 ARANDELA
 ARRUELA
Q.TY n.4

10  **RONDELLA Ø6x20mm**
 WASHER
 RONDELLE
 SCHEIBE
 ARANDELA
 ARRUELA
Q.TY n.4

11  **DADO A.B. M6**
 BUSH
 ECROU
 MUTTER
 TUERCA
 PORCA
Q.TY n.4

12  **COPRIFORO**
 5091
Q.TY n.6

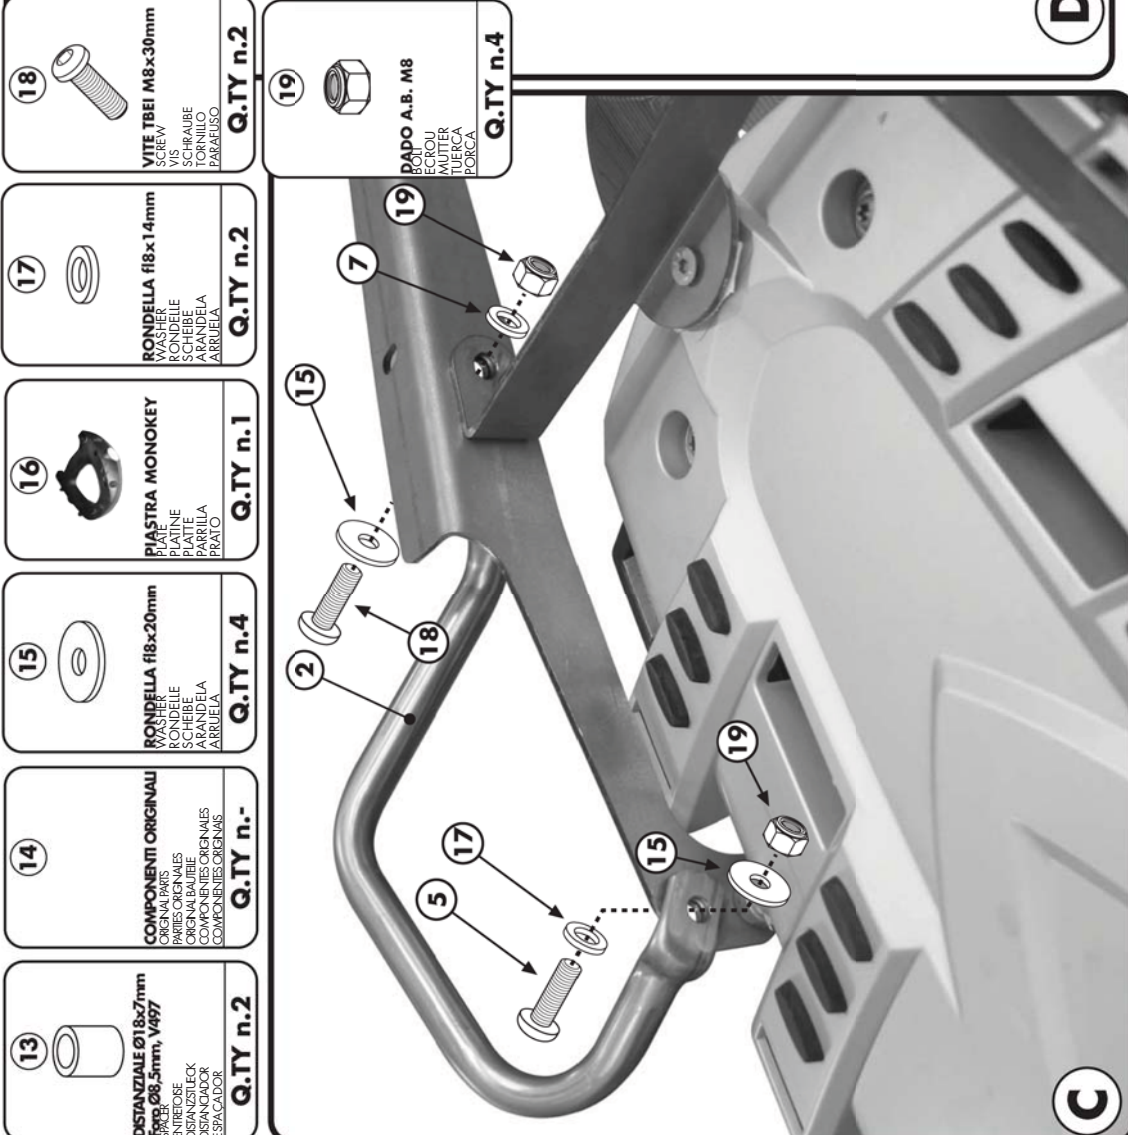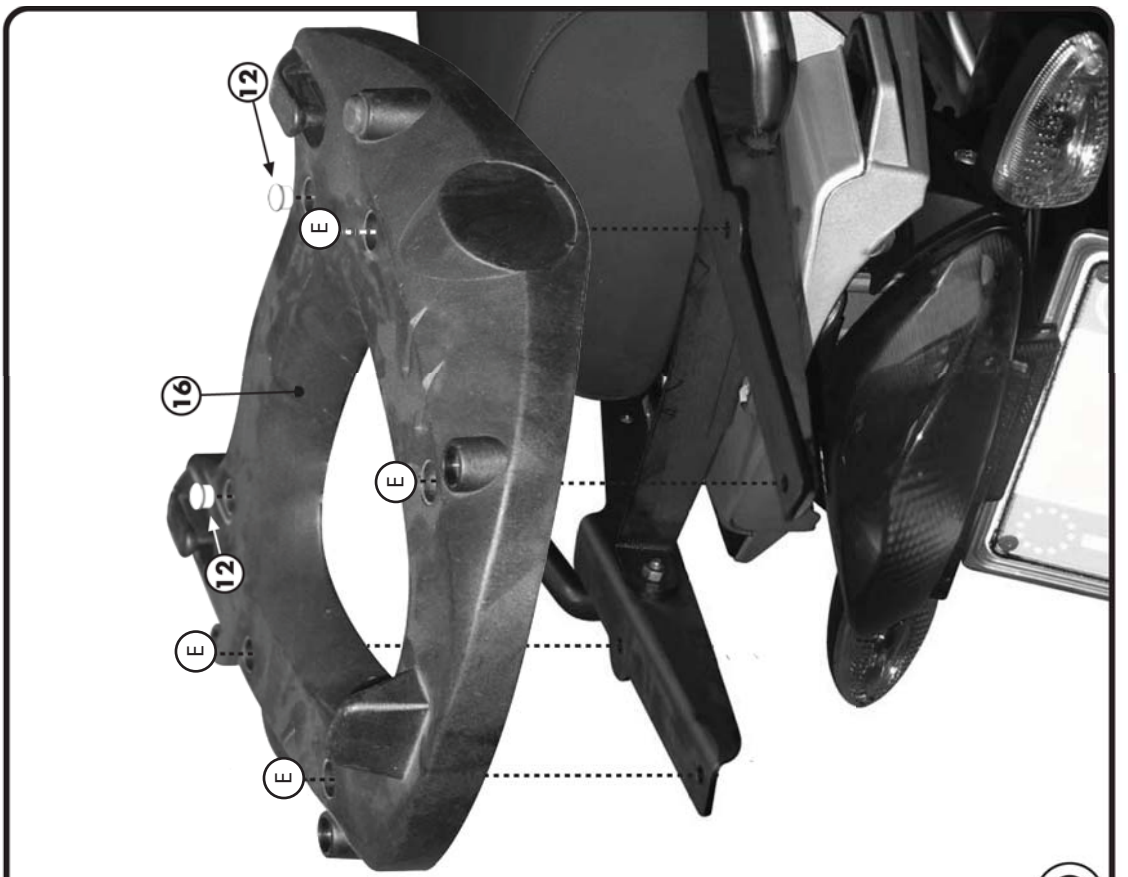





PORTAVALIGIA SPECIFICO - SPECIFIC CASE HOLDER
 PORTE-VAISE SPÉCIFIQUE - SPEZIFISCHER KOFFER-TRÄGER
 PORTA-EQUIPAJE ESPECÍFICO - TRANSPORTADOR ESPECÍFICO

BMW R1200GS '04/'08

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCTIONS DE MONTAGE
 BAUANLEITUNG - INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM

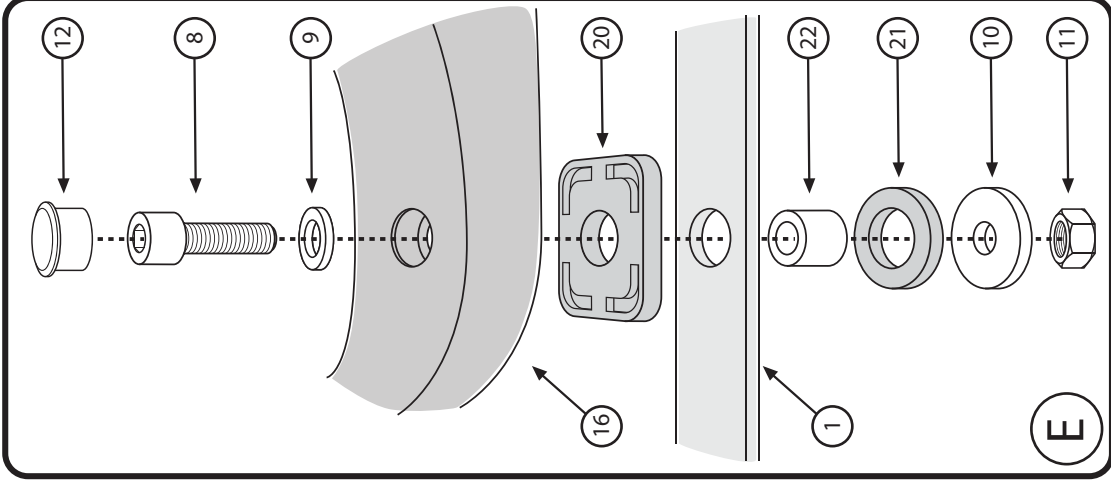SR689 - KR689



<p>20</p>  <p>GOMMINO Z1822 RUBBER WASHER CAOUTCHOUC GUMMI GOMA BORBACHA</p> <p>Q.TY n.4</p>	<p>21</p>  <p>RONDELLA IN GOMMA Z1823 RUBBER WASHER CAOUTCHOUC GUMMISCHLEIBE GOMMA ARBUELA</p> <p>Q.TY n.4</p>	<p>22</p>  <p>DISTANZIALE Ø11x11mm foro Ø3,5mm V897 SPACER RUBBER WASHER DISTANZSTÜCK DISTANZADOR ESPACADOR</p> <p>Q.TY n. 4</p>
---	---	---