
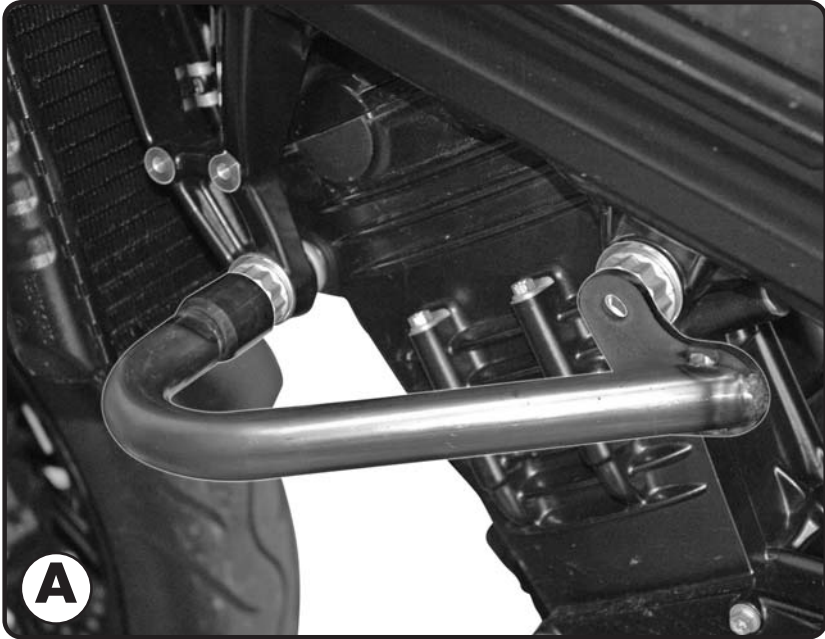






PARAMOTORE SPECIFICO - SPECIFIC ENGINE GUARD - PARE-CARTER SPECIFIQUE  
 SPEZIFISCHER STURZBÜGEL - DEFENSA DE MOTOR ESPECÍFICA - PARAMOTOR ESPECÍFICO

# BMW F800R 2009

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCTIONS DE MONTAGE  
 BAUANLEITUNG - INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM



- |  |  |  |   |  |  |
|--|--|--|---|--|--|
| <p>1</p>  <p><b>PARAMOTORE</b><br/>ENGINE GUARD<br/>PARE-CARTER<br/>STURZBÜGEL<br/>DEFENSA DE MOTO<br/>PARAMOTOR</p> <p><b>Q.TY n.2(dx-sx)</b></p> | <p>2</p>  <p><b>VITE TBEI M10x85mm</b><br/>passo 1/50<br/>SCREW<br/>VIS<br/>SCHRAUBE<br/>TORNILLO<br/>PARAFUSO</p> <p><b>Q.TY n.2</b></p> | <p>3</p>  <p><b>VITE TBEI M8x16mm</b><br/>SCREW<br/>VIS<br/>SCHRAUBE<br/>TORNILLO<br/>PARAFUSO</p> <p><b>Q.TY n.2</b></p> | <p>4</p>  <p><b>SUPPORTO</b><br/>v717<br/>SUPPORT<br/>SUPPORT<br/>HALTERUNG<br/>SOPORTE<br/>SUPORTE</p> <p><b>Q.TY n.2</b></p> | <p>5</p>  <p><b>DISTANZIALE Ø20x8mm</b><br/>Foro Ø10mm, V552<br/>SPACER<br/>ENTRETÔISE<br/>DISTANZSTÜCK<br/>DISTANCIADOR<br/>ESPACADOR</p> <p><b>Q.TY n.3</b></p> | <p>6</p> <p><b>COMPONENTI ORIGINALI</b><br/>ORIGINAL PARTS<br/>PARTES ORIGINALES<br/>ORIGINAL BAUTEILE<br/>COMPONENTES ORIGINALES<br/>COMPONENTES ORIGINAIS</p> <p><b>Q.TY n.-</b></p> |
|--|--|--|---|--|--|

