

MMR BILLET ALUMINIUM PADDLE SET – MINI F56

Product part number: MMR04-1401

Please take the time to read these instructions thoroughly before proceeding. When performing the installation, read the entire numbered instruction before working on the car. If you feel that you do not have the requisite skill, please arrange for a qualified mechanic to perform the installation.

Ease of Fitment:

(the greater the star rating the easier the installation.)



Required Tools:

- T20 Torx Bit
- Long Ended Pick
- Trim Removal Tool

Included in the box:

- x 1 MMR Gear Shift Paddle Set



STEP 1

Firstly you will need to remove the air bag on the steering wheel to do this first remove the battery.

After this using a T20 Torx Bit press through the holes in the back of the steering wheel to free the air bag.



STEP 2

Now the steering wheel air bag has been removed you can now start removing the paddles. To do this remove the T20 bolt that is located at the back of the paddle.

This will now free up the section of the steering wheel that houses the steering wheel controls. Now that this is free, using a trim remove tool lightly pry the steering wheel control off of the wheel.



STEP 3

Now the steering wheel controls have been removed you can now remove the steering wheel paddle ready to install the new paddles.


To do this, use a T20 torx bit and remove the screw shown on the picture.



STEP 4

Now the paddle has been removed from the wheel you can now remove the pin that is holding the paddle on. To do this simply use a long ended pick and push the pin through the paddle until the paddle is released from the mechanism.

Please note there is a spring inside the paddle, be careful that this doesn't get lost as the paddle is being removed.

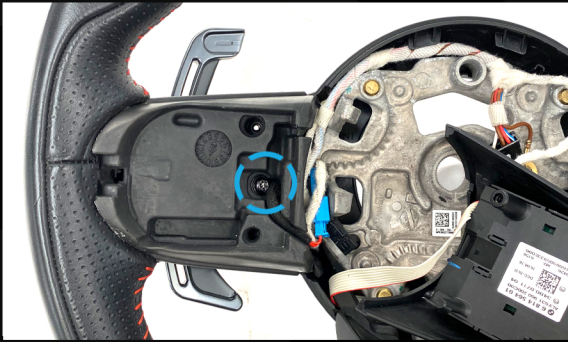

STEP 5

Next you can insert the new paddle back onto the shift mechanism and re-insert the lock pin to retain the paddle.

Once the paddle is connected to the assembly it can now be re-installed onto the steering wheel, to do this simply place the paddle onto the back of the steering wheel and re-insert the T20 screw as highlighted.



STEP 3

Now the paddle has been re-installed onto the back of the steering wheel you can reinstall the steering wheel controls onto the front of the steering wheel.

Once the steering wheel controls have been pushed back into place the T20 screw can now be re-installed onto the back of the steering wheel.



STEP 3

Once the steering wheel controls are now screwed in at the back you can now re-insert the air bag onto the steering wheel.