

# SHARKSKIN

## The Ultimate Roof Underlayment

# COMP<sup>®</sup>

### SHARKSKIN COMP<sup>®</sup> 10 SQ. ROLL Instructions and Information

SHARKSKIN COMP<sup>®</sup>

**Use:** Under asphalt composition shingles, metal and tile\* roof systems


\*under tile install two-ply installation

**Roll size:** 48"x 250' approx. Roll weight: 40 lbs. approx.

**Coverage:** approx. 960 sq. ft. per roll or less depending upon overlap and roof design.


**Installation:** SHARKSKIN COMP<sup>®</sup> roofing underlayment should generally be installed above ventilated attic spaces in most cases. SHARKSKIN COMP<sup>®</sup> is considered a vapor barrier, check with local building codes. **Preparation:** The deck surface must be dry and free of dust, dirt, loose nails, debris and other protrusions. **Damaged sheathing must be replaced.** SHARKSKIN COMP<sup>®</sup> is laid horizontally parallel to the eave of the roof with the printed side up. Overlaps run with the flow of water in a shingling manner, a minimum 3-inch horizontal laps and a minimum 6-inch vertical laps. Use straight blade utility knife or scissors to cut. **SHARKSKIN COMP<sup>®</sup> has a maximum 6 month exposure rating.**

**Fastening:** SHARKSKIN COMP<sup>®</sup> is attached to the roof deck with No.12 gauge corrosion-resistant steel or stainless steel ring shank fasteners, having 1-inch diameter corrosion resistant metal round cap, tin tag, or plastic round top caps or plastic caps fastened with corrosion resistant staples. **See Diagram 1.**

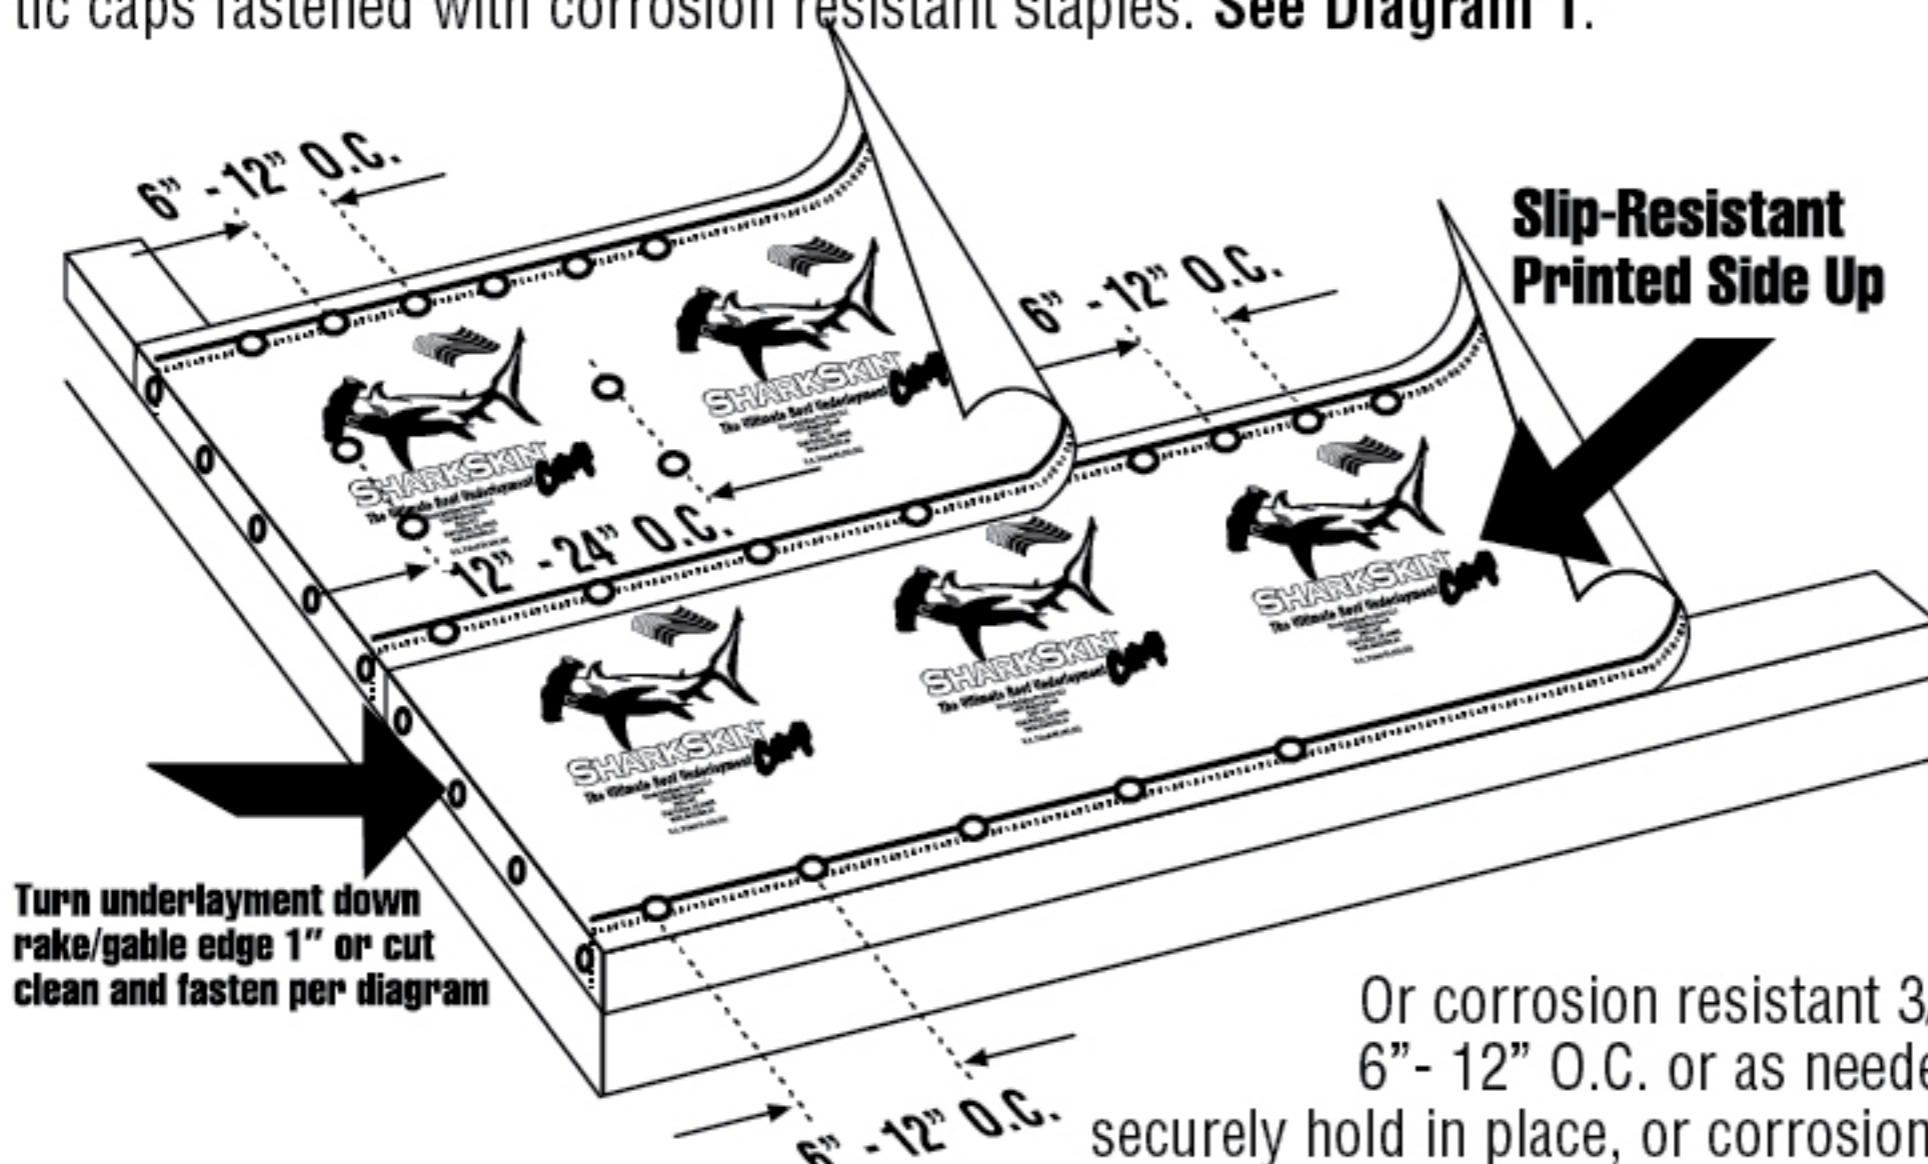

**BE CAREFUL TO OBSERVE SAFE ROOFING CODES & PRACTICES (OSHA). USE CAUTION WHEN WALKING OR STANDING ON SHARKSKIN COMP<sup>®</sup>. COEFFICIENT OF FRICTION MAY CHANGE WITH WET, DUSTY OR ICY CONDITIONS. FAILURE TO USE PROPER SAFETY GEAR AND FOOTWEAR CAN RESULT IN SERIOUS INJURY.**

Or corrosion resistant 3/8" EG roofing nails installed a minimum 6" - 12" O.C. or as needed at all seams (per Diagram 2 below) to securely hold in place, or corrosion resistant or stainless steel hammertacker staples. Hammertacker staples must be installed **per Diagram 2** below. **NO STAPLES** in the field of the roof. **ONLY STAPLE AT HORIZONTAL AND VERTICAL LAPS.** EXPOSED STAPLES MUST PENETRATE THROUGH TWO LAYERS OF SHARKSKIN COMP<sup>®</sup>. IMPROPER INSTALLATION WILL VOID ANY WARRANTY CLAIM. See Hammertacker Staple Installation\* **Diagram 2** below.

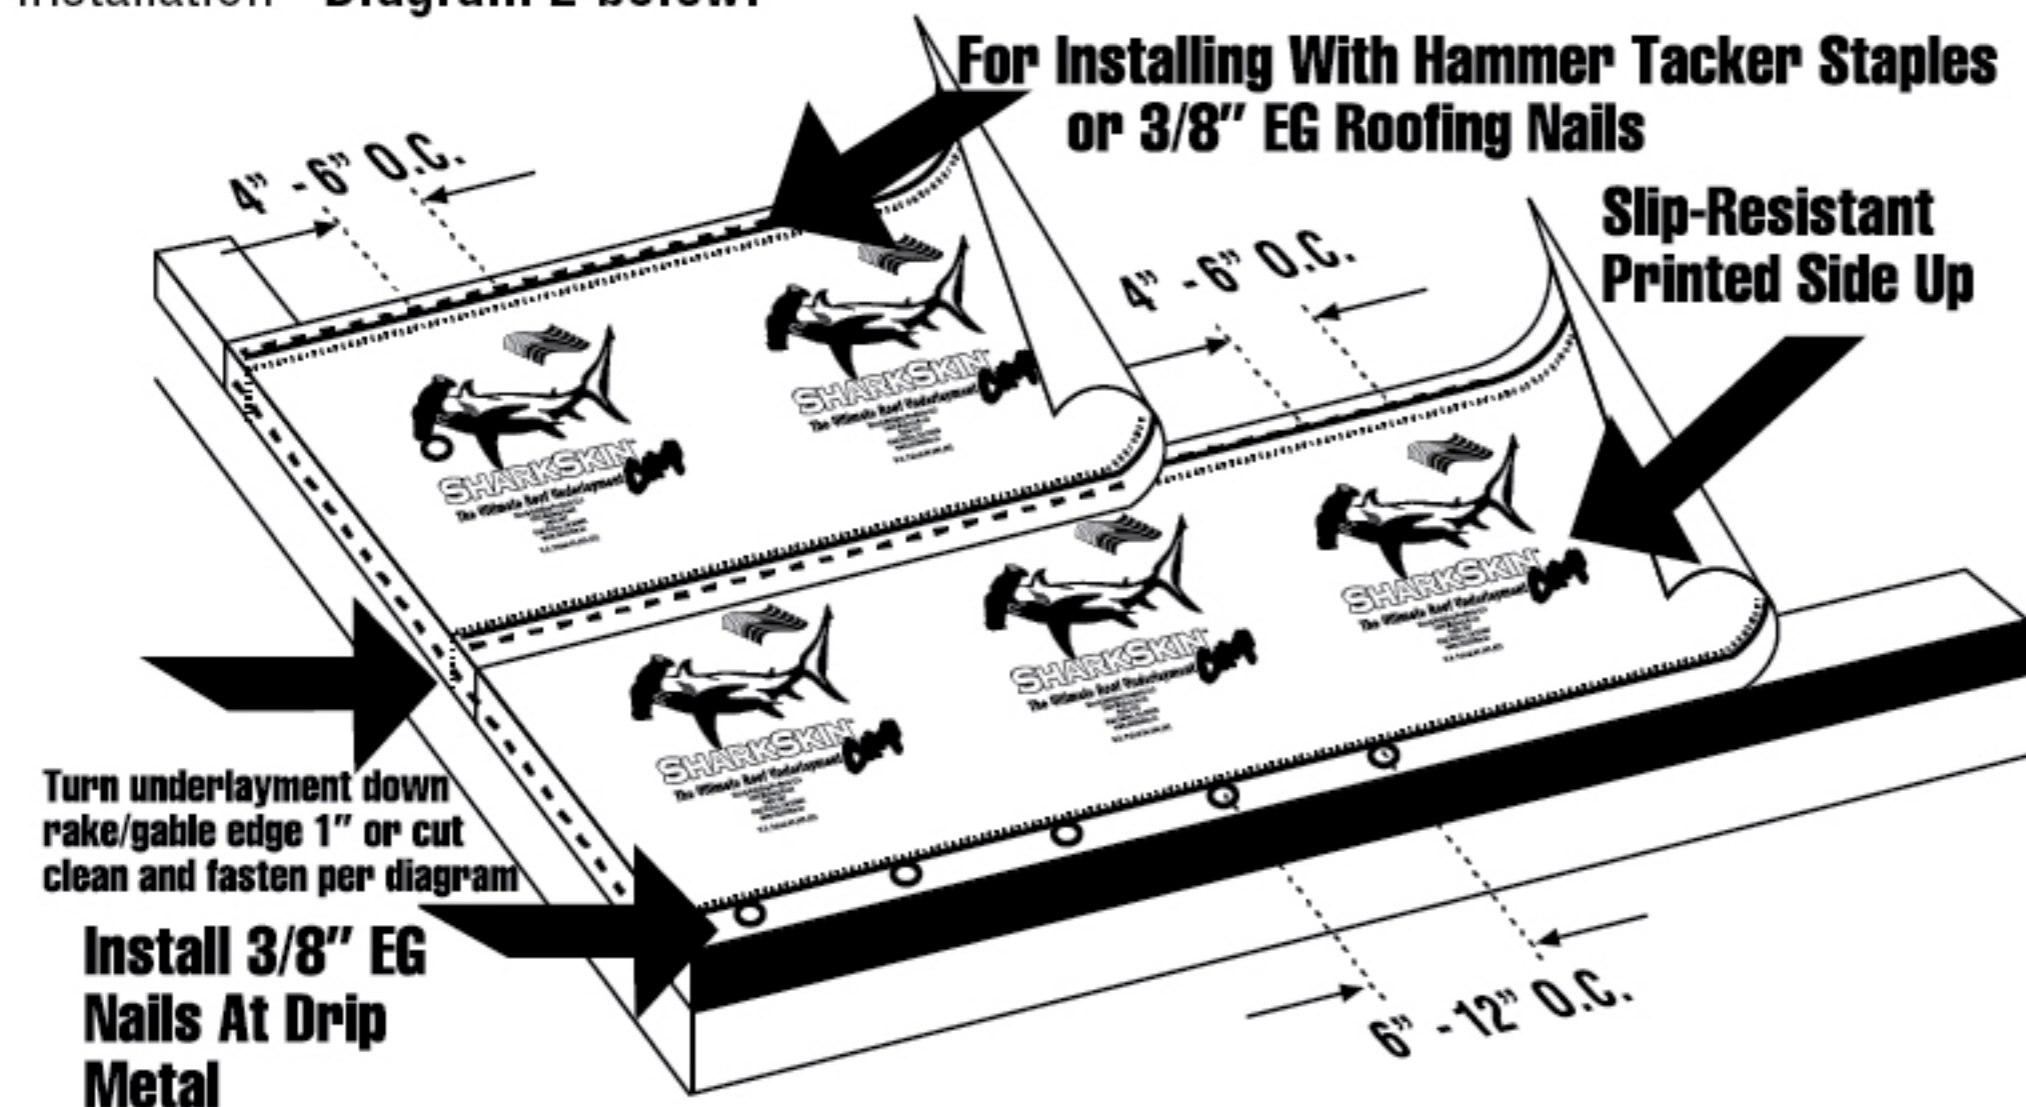

TEXAS DEPARTMENT OF INSURANCE



Florida Building Code



ESR-1708  
ICC-ES AC188  
EXCEEDS ASTM D226

MIAMI-DADE COUNTY APPROVED

U.S. Patent #8,765,251  
U.S. Patent #6,308,482

Kirsch Building Products LLC  
1464 Madera Road, #N Suite 387  
Simi Valley, CA 93065  
www.sharkskinroof.com  
1-877-742-7507



The underlayment shall be fastened as necessary to hold in place to allow for safe walk ability for the installer. \*HAMMERTACKER STAPLE INSTALLATION.  
COPYRIGHT ©2009 by Kirsch Research and Development LLC.