

THERMOSTATIC Or **SHOWER** Step 2 **MANUAL** Step 4 Step 1. Screw the thread into the water pipe in Step 4. The rain shower head connects side the wall. to the arm. Step 2. Screw the main body into the thread. Step 3. Rotate and fix with the alien wrench ◆ Install The handheld shower Head Step 1 Step 1. Screw the thread into the water pipe inside the wall. Step 2. Screw the main body into the thread. Step 3. Rotate and fix with the alien wrench Step 4 Step 4. Connect handle holder with hose and handle shower


Product List

Please check the accessories with following table, if there is anything missing, please contact customer service immediately.

Ceiling mounted shower items











Product List							
Serial number	name	Quantity	Serial number	name	Quantity		
1	Top shower head	1	10	Hand shower holder decoration cup	1		
2	ceiling mounted shower arm	1	10	Hand show holder	1		
3	Shower arm decoration cup	1	12	Hand shower	1		
4	Embedded box	1	13	Shower hose	1		
(5)	Shower valve	1	14	Kits	1		
6	panel	1	15	gloves	1		
7	handle	1	16	Teflon tape	1		
8	Massage shower decoration cup	6	17	Instruction manual	1		
(0)	Maccago chower	c					


Product List

Please check the accessories with following table, if there is anything missing, please contact customer service immediately.

Wall mounted shower items












Serial number	name	Quantity	Serial number	name	Quantity
1	Top shower head	1	10	Hand shower holder decoration cup	1
2	wall mounted shower arm	1	13	Hand show holder	1
3	Shower arm decoration cup	1	12	Hand shower	1
4	Embedded box	1	13	Shower hose	1
(5)	Shower valve	1	14	Kits	1
6	panel	1	15	gloves	1
7	handle	1	16	Teflon tape	1
8	Massage shower decoration cup	6	17	Instruction manual	1
9	Massage shower	6			

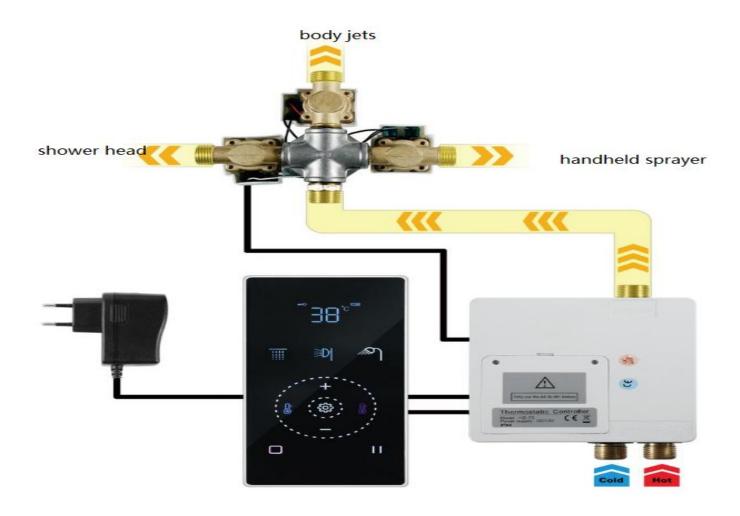


The valve work by the electronic power.

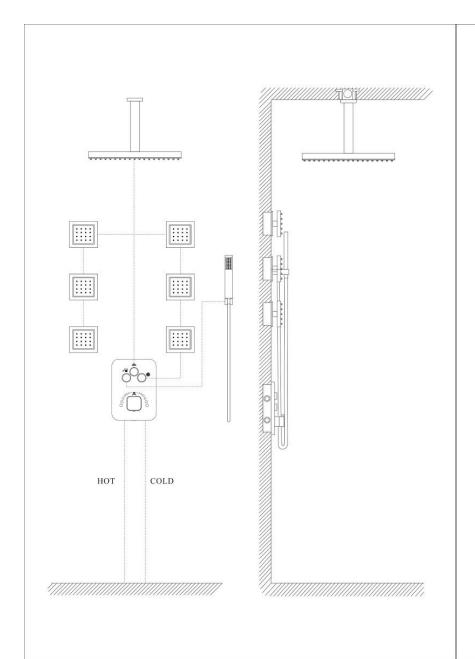

◆ Install the massage shower

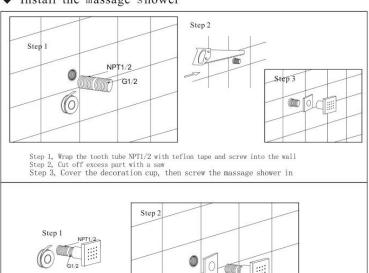

◆ Install The rain shower Head

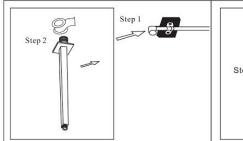

Step 1. Wrap the teflon tape on the thread Step 2. Clockwise rotation of the ceiling arm to the pipe



Step 3. The rain shower head connects to the arm.