




A : 1PC

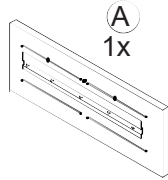


STEP 1: MAKE SURE TO LOCATE YOUR STUDS ON THE WALL SCREW AT LEAST 4 SCREWS INTO STUDS WITH 2 SCREWS ON EACH SIDE ( 2 SCREWS TOP AND BOTTOM TO THE RIGHT AND 2 SCREWS TOP AND BOTTOM LEFT)

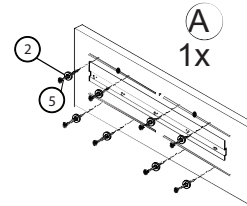

B : 1PC

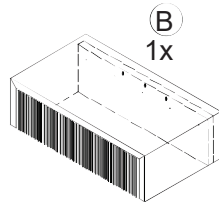


STEP 2: MOUNT BOX TO THE BACK BOARD BY LITTING IT ON TOP OF THE BAR AND THAN SLIDE IE DOWN (NOTE THAT THE BOX IS NOT YET SECURED TO THE WALL).

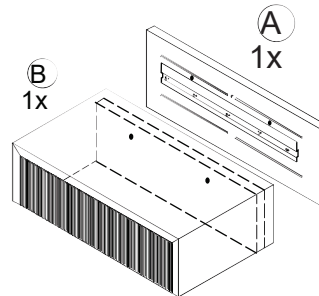


NO.	DESCRIPTION	IMAGE	QTY
①	BOLT (M6 x 70)		2
②	FLAT WASHER		10
③	SPRING WASHER		2
④	ALLEN KEY		1
⑤	SCREW M6X60		8
⑥	PLASTIC ANCHOR		8
⑦	BRACKET		3

STEP 3: PULL DRAW TO OPEN AND SCREW A SCREW IN TO THE BOARD , THIS IS DONE FROM BEHIND THE DRAWER. THIS WILL SECURE THE BOX TO THE WALL

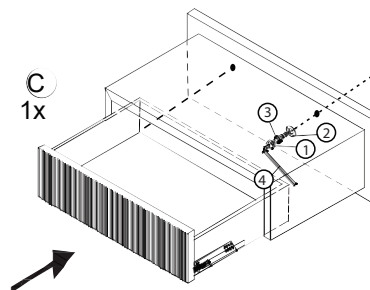

#### GENERAL NOTE:

THE ADDITIONAL BRACKETS ARE ONLY TO BE USED IF YOU HAVE VANT PANELS MOUNTED ON YOUR WALLS. THESE BRACKETS WILL ALLOW YOU TO MOUNT A SINGLE PANEL UNDER NEATH THE NS.

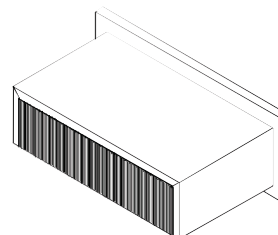

HOW TO  
SET UP  
YOUR  
VANT  
FLOATING  
NIGHT STAND