

Setup for 1080P HD Wi-Fi Spy Camera Clock



1. Download Free App <TinyCam> from App Store or Google Play.

Tips: Please allow "TinyCam" to access smartphone location while using the APP (for syncing local weather info).

2. Take off back cover and pull out the battery insulator --> Insert micro SD card --> Press back ON/OFF switch for 2 seconds, wait for 1 minute (Back power indicator is on and Wi-Fi indicator is solid green.);

Tips: After above operation, please put on back cover and plug in power adapter for long time use.

3. Enter smartphone setting --> Search and connect device's Wi-Fi named: HCAM....., wait till phone status bar appear Wi-Fi symbol 📶 ;

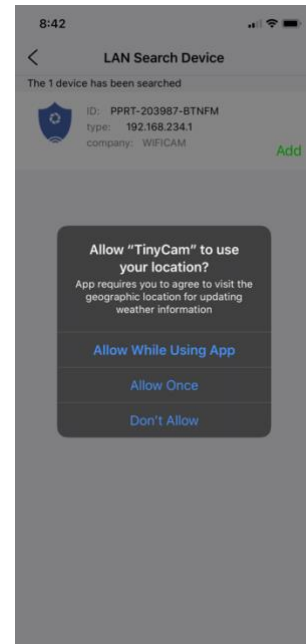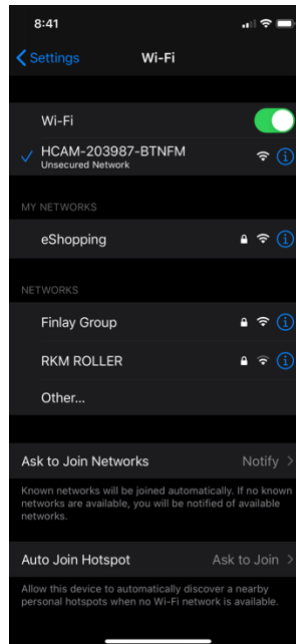

5. Press 📶 icon on the right corner of camera --> WiFi Config --> Select local Wi-Fi (SSID) --> Input password --> Press Confirm;

6. Quit APP, wait 30 seconds (device restart automatically) and connected with set Wi-Fi;