



Above Ground Drop Wire Closure Dexseal 2/4 Installation Instructions BT Item Code 038271




1. Inside view of closure.

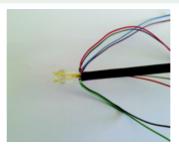

2. Trim steel wires to 20 mm above each cable butt and crimp the wire ends into a single CWI-8A1

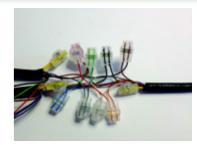

 Create splice gap of approximately 65 mm. Insert conductor wires into CWI-8A1 Connectors allowing 30mm wire from the horizontal splice.

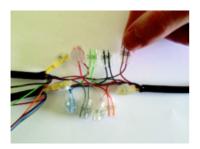

4. Pre Crimp each connector by hand.



5. Finish crimping all the connectors fully using the 8B-crimping tool. With the splice fully prepared and terminated position within the central splice gap.



6. For the following configurations:

- 1 in, 1 out: Remove entry blank at single entry end of the closure. Do NOT remove the entry blank at double entry end of the closure. Route each cable through cable entry sealing points at each end, push the cables down fully into each cable entry retention gate to ensure the blanking rod is pushed into the spare cable entry sealing point. Dress splice jointing cavity.
- 1 in, 2 out: Remove ALL entry blanks. Route each cable through the cable entry sealing points at each end and push the cables down fully into each cable entry retention gate, discard the blanking rod. Dress splice into jointing cavity.
- Butt configuration 2 cables one end: knockout the entry blank at 2-entry end only leaving the single entry blanked. Route each cable through the cable entry sealing points at the double entry end and push the cables down fully into each cable entry retention gate. Ensure the blanking rod is pushed into the cable entry sealing point at the single entry end. Dress splice into jointing cavity.



- **7.** Close the closure and ensure the latches are fully closed. Ensure the following steps are performed:
 - Fold lid over Starting at the end side on the left, over to the right and back along the middle
 - Make sure you have heard 4 clicks and that all clips are firmly closed

Security seal can be installed if required. Centre boss now has increased in width to accept full range of fixing straps-Security bobble type, Releasable and Self-locking. Ridge also formed on top and lower covers to indicate to the jointer fixing position for Cable ties.

DexGreen Ltd, Unit 2, Pinnacle Business Park, Ballytrasna, Little Island, Co. Cork, Ireland

Tel: +353 21 4317955 **Email:** sales@dexgreen.com

Fax: +353 21 4316269 Internet: www.dexgreen.com

