


CWI 11A Make Before Break Connector (Flap Version) (Item Code: 075149)




1. Ensure the connector is in the fully opened position before installation.

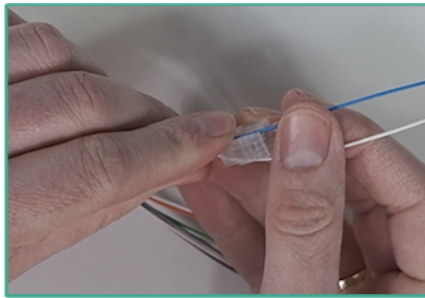

2. To install, turn the connector with the base facing upwards as shown.




3. Insert the conductor wires from the side of the connector. Ensure the wires are pushed in fully.

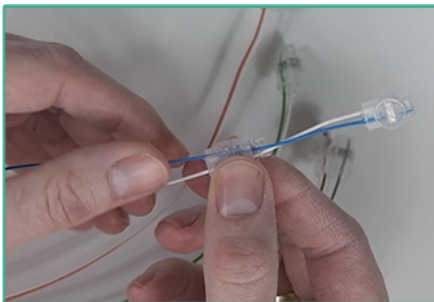


4. Slide the connector up to connector being replaced. The connectors should move freely along the wires.




5. Using the approved crimping tool fully crimp the 11A connector.

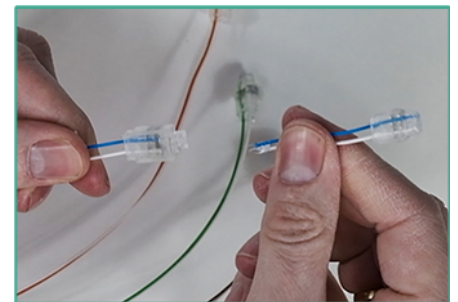

6. The old connector is cut away without any break in service.

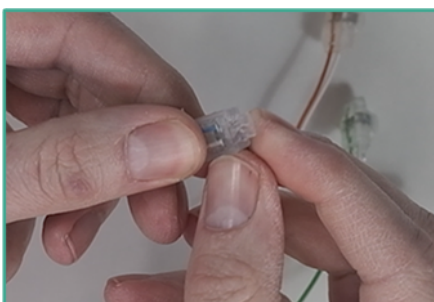

7. Push the flap into the fully closed position.

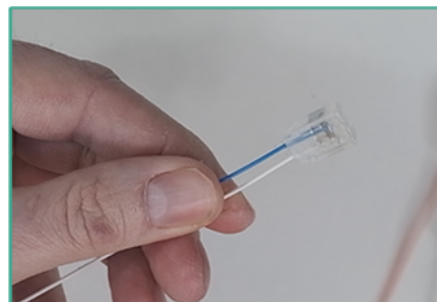

8. Confirm the connector is fully crimped and the flap is pushed in fully. The base should be fully pushed into the connector body. The 11A connector is in service.



9. Each box contains a test probe. Insert into the cable entry port as shown.