


**ILLUMINATED PLAQUES—TRANSFORMERS MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN**

**WALL / AREA FOR INSTALLATION MUST BE FLAT/LEVEL**

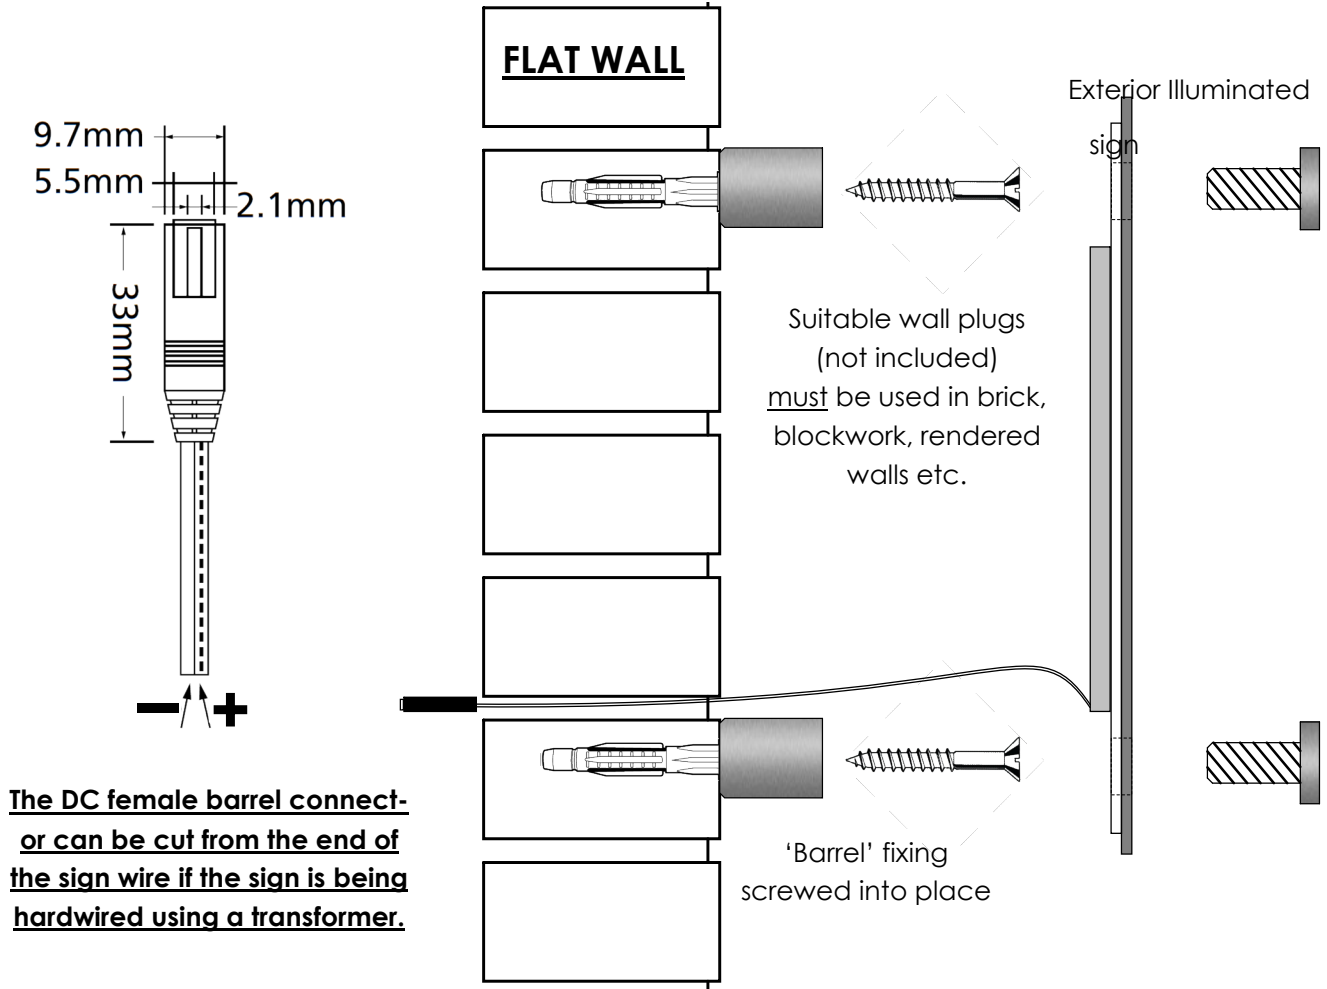

**The DC female barrel connector can be cut from the end of the sign wire if the sign is being hardwired using a transformer.**

Measure hole centres on the sign.

Mark holes centres accurately on the wall.

Drill suitable hole for wall plugs\*\* and insert them.

Attach barrel section of the stand off mounts, using screws provided.

Place the sign over the barrels and align holes.

Screw cap section into place through the sign to secure.

Holes for the power cable shown can be positioned behind the sign.

**It is essential these instructions for installation are followed, deviation from them will result in any warranty being void.**

**Any power transformers not purchased from KREATIV-DESIGN would not be covered under warranty.**

**TRANSFORMERS MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN**  
**ALL POWER PLUGS/TRANSFORMERS AND CONNECTIONS MUST BE INSTALLED INDOORS**  
**AND PROTECTED FROM WATER, THEY ARE NOT IP RATED.**

