


VISIBLE STAND-OFF SIGN BOLTS
FIXING POINTS MUST BE LEVEL/FLAT

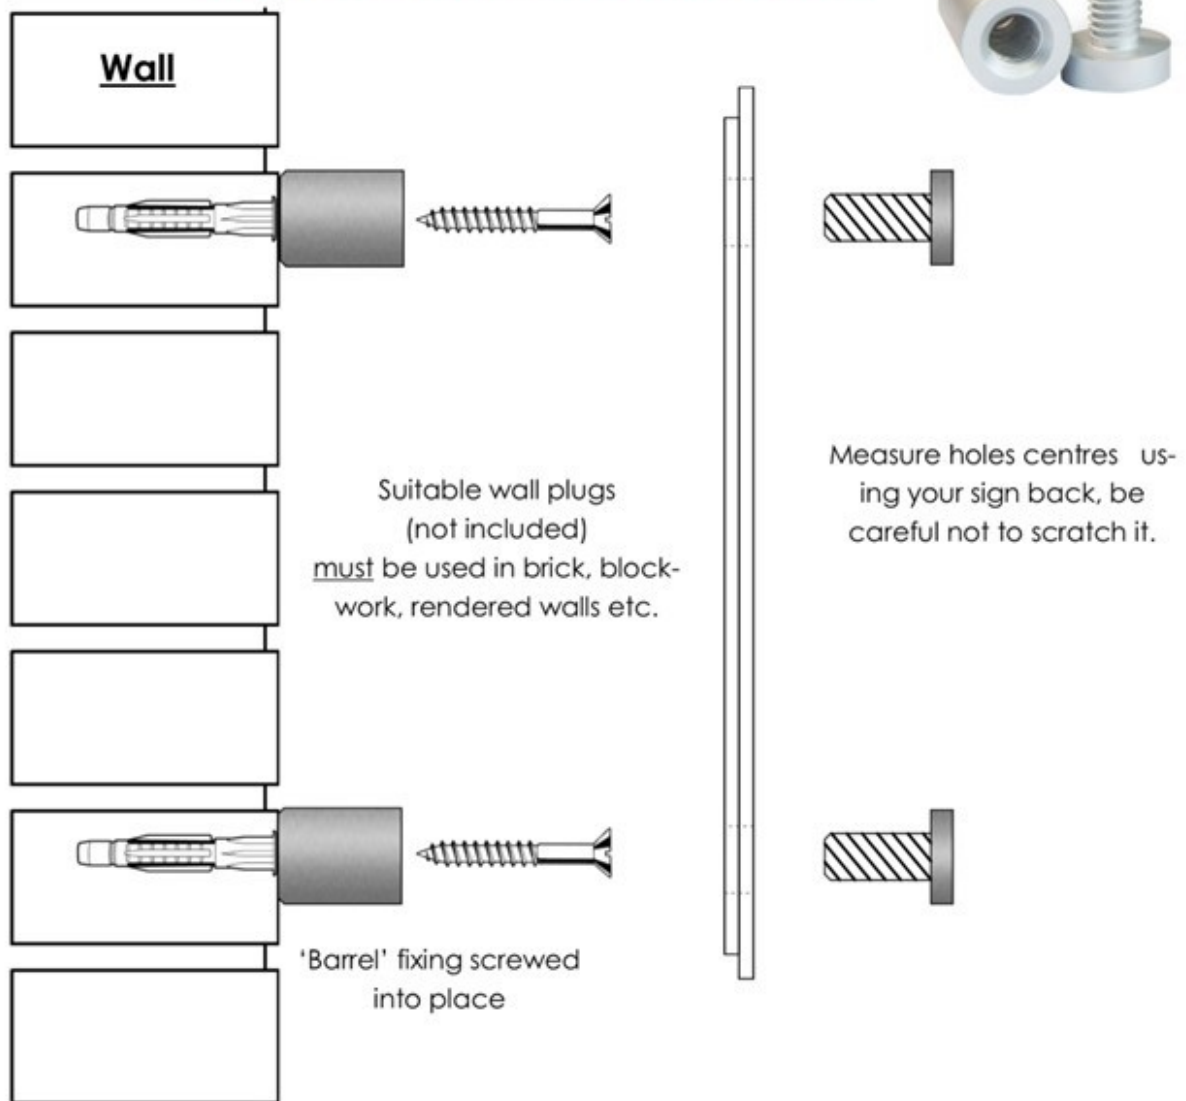

Measure hole centres on the sign.

Mark hole centres on the wall.

Drill suitable hole for wall plugs** and insert them.

Attach barrel section of the stand off mounts, using screws provided.

Place the sign over the barrels and align holes.

Screw cap section into place through the sign to secure.

** Not included

