




BOLD
monkey


ASSEMBLY INSTRUCTIONS

BM51003 NO GIRLFRIEND NO PROBLEM FLOOR LAMP



Thank you for your purchase!

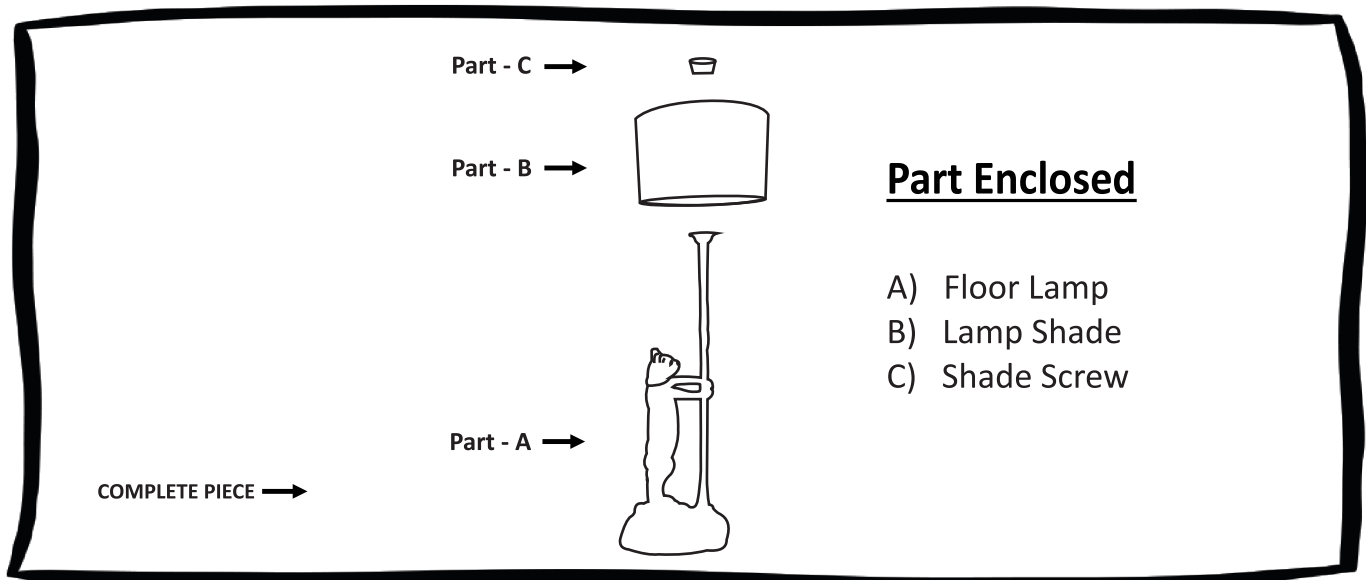

To Assemble

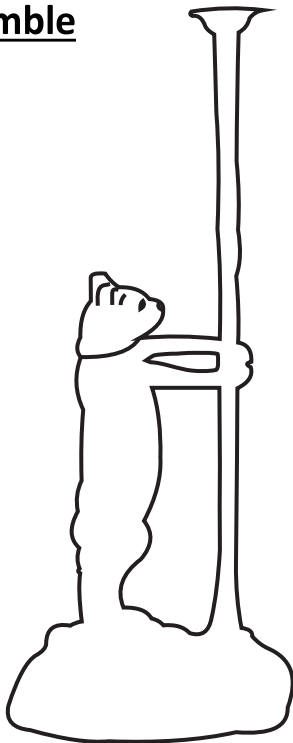

1) Place Part **A** on ground.

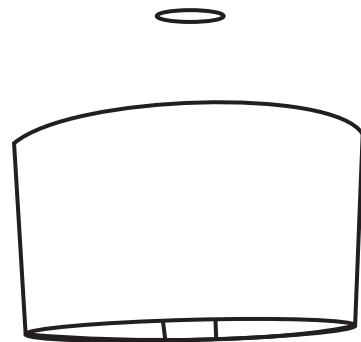

2) Place Part **B** On Part **A** And Screw With Part **C** On The Holder