



step 3

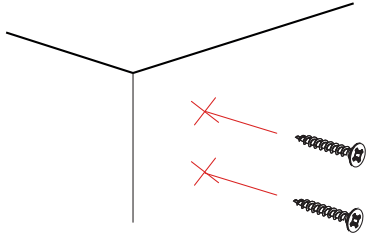


Attach one bracket (A) to the backside of the cabinet just below the top edge of the cabinet by using the screws (D).

step 4

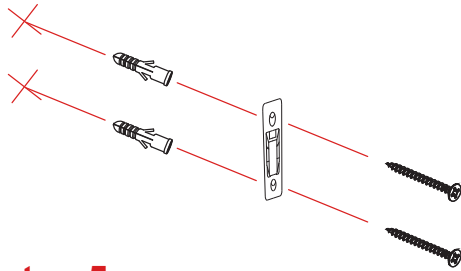


Move the cabinet to its final position on the wall and mark the location of the second bracket (A) on the wall. For concrete walls, drill holes and insert the plugs (B). Attach the second bracket (A) to the wall with the long screws (C).

step 5

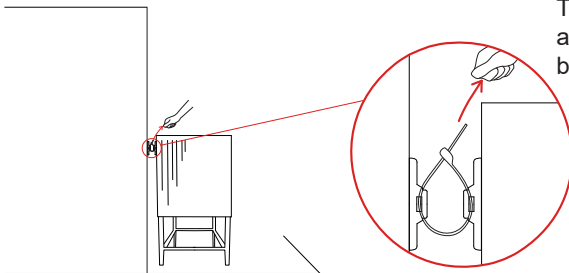


Thread the strap (G) through the bracket as shown below. Carefully tighten strap but do not overtighten.

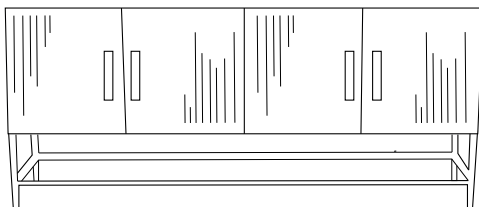

done!

pols potten®

instruction manual

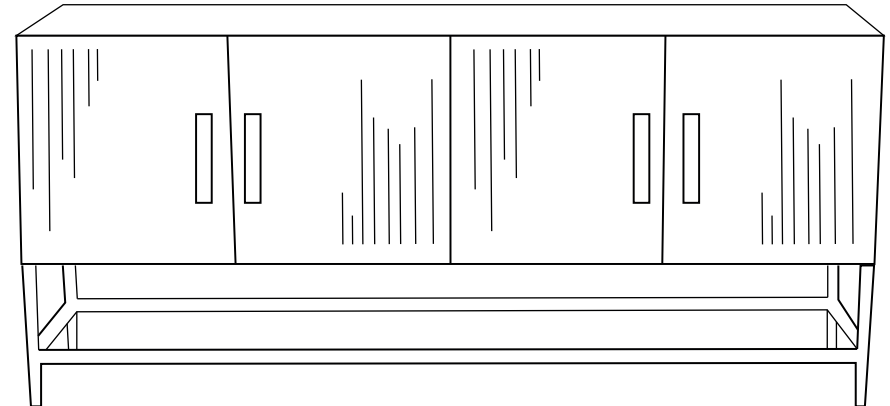

Cabinet Ribbel gold low

design by pols potten studio
500-040-108

“ Thank you for choosing a pols potten product.
 To ensure safe and satisfactory use of this product,
 please carefully read the below instructions beforehand. ”

general information

This cabinet is made of MDF, partially brass metal cladded with 2 shelves.
 The legs are black powder coated.
 The cabinet is made for indoor use only.
 Serious injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall.


care instructions

- Clean by wiping with a damp cloth and immediately wipe dry with a soft dry cloth.
- Avoid contact with abrasive, alcohol and solvent based substances or cleaning agents, they can damage the surface.
- The use of furniture polish or sprays is neither necessary nor recommended.
- Do not strike with hard or sharp items.

safety note


- Always completely lift the furniture when moving it. Handle and move it with care as improper handling may cause damage or injury.
- Heavy/larger furniture pieces should be moved by two persons.
- Ensure the furniture is always placed level on its legs.
- Do not stand, climb or jump on the furniture.
- Please keep these instructions for future reference.

components & parts

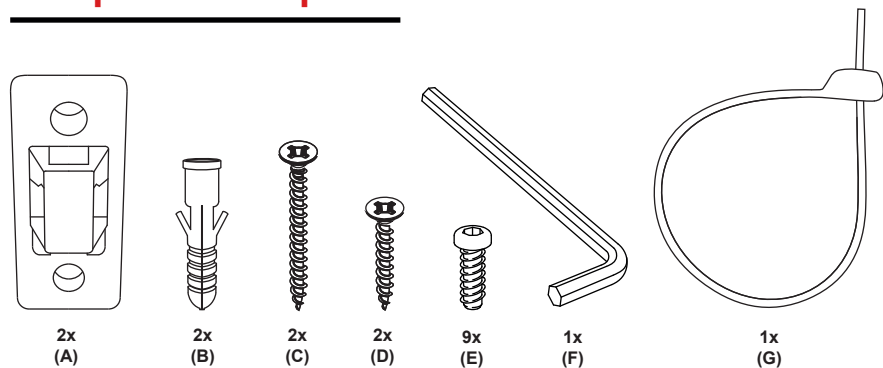


step 1

“ Carefully flip the cabinet and place the frame on top off it ”

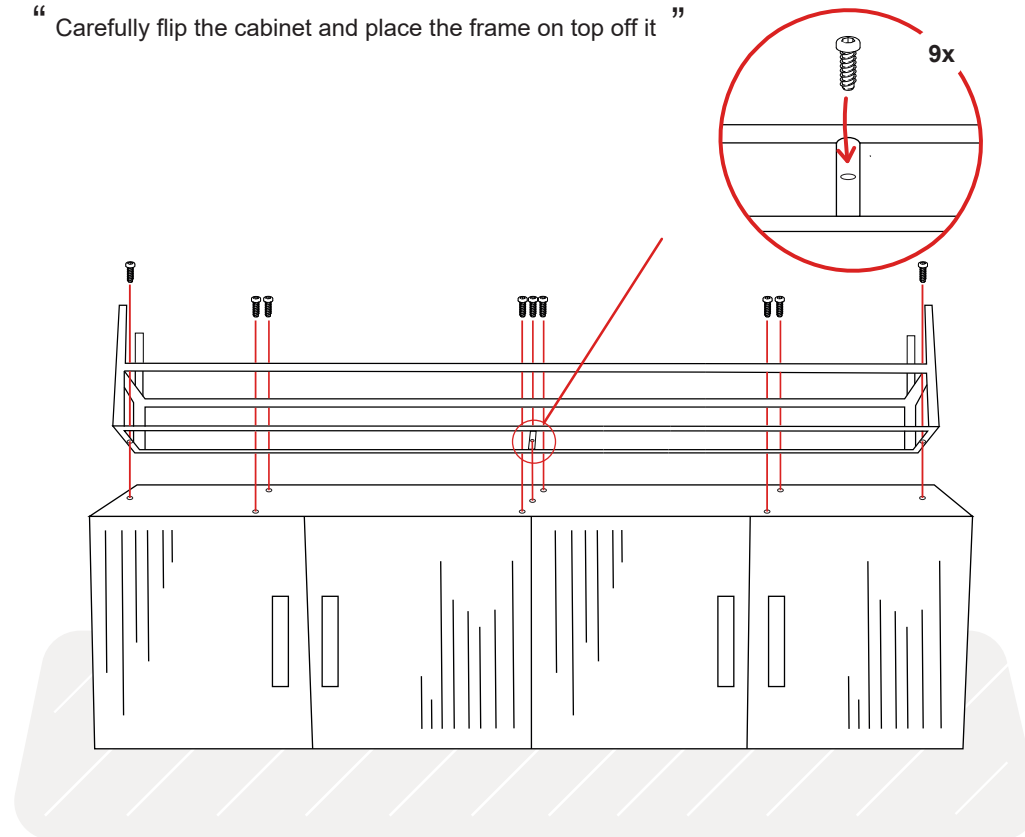

“ We advise to put a blanket underneath the cabinet for protection ”

step 2

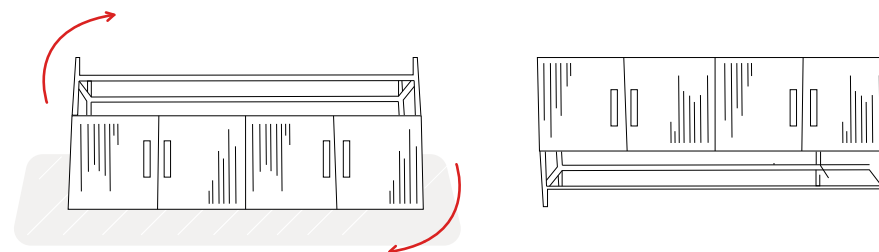

“ See next page
 for step 3, 4 & 5 ”

